
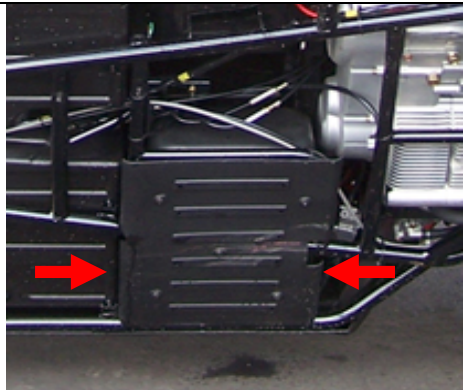


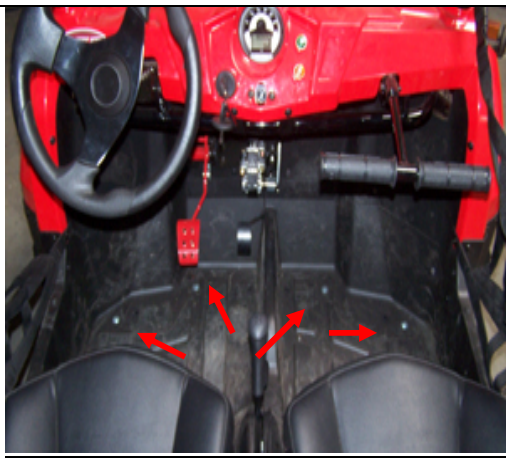


Polaris 170 RZR Skid Plate Installation Instructions


<p>1. Remove OEM Skid</p>	 A photograph showing the OEM skid plate installed on the side of a red Polaris RZR. Two red arrows point to the mounting points on the left and right sides of the skid plate.
---------------------------	---

<p>2. Remove 8 bolts from floorboard and replace with supplied Hardware A</p>	 A photograph showing the interior floorboard area of a red Polaris RZR. Four red arrows point to the locations of the 8 bolts that need to be removed from the floorboard.
---	--

3. Put main skid in place and loosely tighten with supplied nuts and washers. (Hardware A)

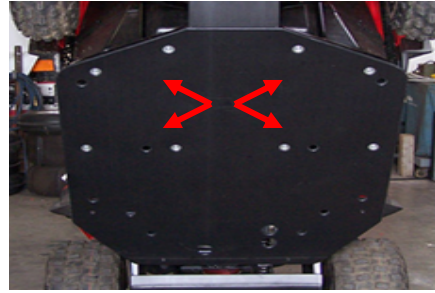


4. Place main skid clamps on frame and secure with nuts and washers Hardware B.

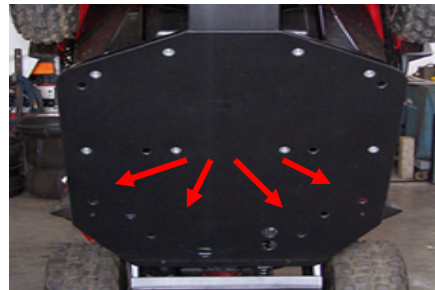

5. Align skid and finish tightening all main skid hardware.

6. Loosely attach clamps, nuts and washers Hardware C to small front skid. Put skid in place and attach clamps over frame rails. Align skid and tighten in place

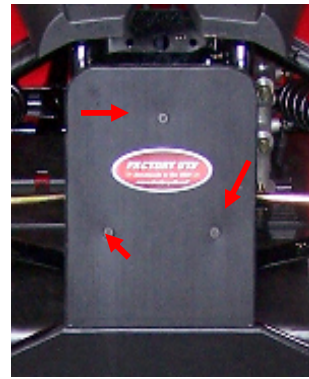

7. Place rear skid in place and attach with clamps nuts and washers
Hardware D

8. drill 2 ¼ inch holes (red arrows in picture) where the skid mounts. Secure with countersunk hardware D



See next page for hardware list.

Skidplate Hardware List

Main Skid

- A. 8 - 1/4 bolts nuts and washers
(front of main skid)**



- B. Main skid - 4 frame Large
brackets and 1/4 bolts nuts
and washers for (rear of main skid)**



Front Skid

- C. Front skid - 2 large
clamps and 1 small
clamp with 1/4 bolts
nuts and washers**



Rear Skid

- D. Rear Skid - 3 small clamps with
1/4 bolts nuts and washers.
2 countersunk 1/4 bolts nuts
and washers for drilled holes**

