

BIMINI TOP INSTALLATION GUIDE




Unpack the carton, you can find the parts as below:

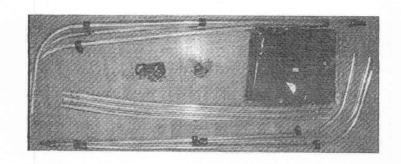

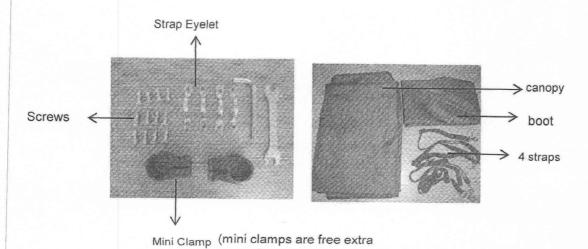

spares)

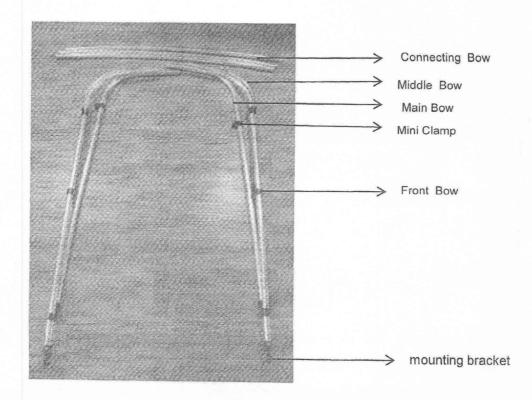

Here are the basic steps to install your new bimini top.

Step #1: Assembling the bows onto one side of legs



Insert the 3 connecting bows provided onto the 3 bows of the main assembly.

Step#2: Sliding bows into the top

Unfold the canvas top and lay it topside down so that the 3 sewn sleeves are on top. Using the drawing to the right, identify the front and back of the canvas top. The line in the middle of the drawing indicates the sewn seam. Slide the large (main) bow through the sleeve on the back of the top, the middle bow through the middle, and the front bow through the front sleeve. Once the canvas top is on, connect with the other side of the main assembly. You should now have an assembled top.

Step#3 Attach the rear straps (or poles)

Attach the 2 rear straps (or poles) onto the main bow as shown in the right picture.

Step #4: Attach the front straps

Attach the 2 front straps onto the front bows. Now the bimini is ready to attach to your Boat





Front


Back

Back

Step #5: Find Desired Location on the Boat NOTE: See next page for adjustment for smaller boat. Pick up the assembled bimini top and hold in place at desired mounting location on your boat. Extend the top to its fully open position and place a pencil mark on your boat at the location where the largest bow will be anchored to the boat. Place a corresponding pencil mark on the other side of the boat. These are where your deck mounts will be placed. Be sure that the 2 mounting points are the same distance from either the bow or the stern.

Front

Note: For smaller boats, it may be necessary to form the bimini top so that the mounting width is closer together. Have someone help you push each side together. Adjust a little bit at a time as to not adjust too much. See illustration below.

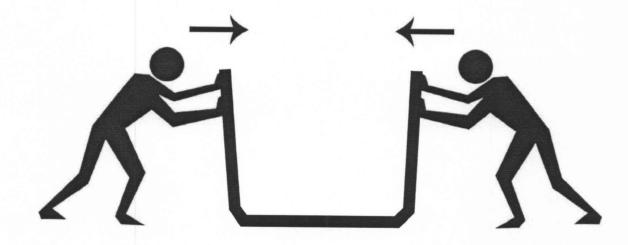

Step #6: Mark Holes for Bimini Deck Mounts
Place a deck mount at the appropriate location and
outline it with a pencil. Also mark the boat through the
screw holes in the mount.

Step #7: Drill Holes for Deck Mounts
Using a drill with a bit **smaller** than the actual screws provided, drill the 2 holes needed to secure the deck mount to your boat.

Step #8: Secure Deck Mounts with Screws
Place the bracket in place and secure firmly to your boat.
Repeat the process for the other side of the boat.



Step #10: Attach The Strap Eyelets
Position the forward attaching eyes to the boat and drill
the holes needed to secure them to the boat. The
forward strap eyes should mounted at a position that
places the straps at a minimum 45 degree angle as they
will take most of strain when you are "under way". Set
the back eyes for the rear straps. Tighten the strap and
adjust the small clamps on the main bow, now you get
the best top you want!

Note: Please use the boot to protect the fabric when not using the bimini top.



