


Cam-Lock Installation Instructions Boston Whaler Teak Louvered Doors

1. Use the figure below (fig.1) to identify the parts contained in this lock.

Fig. 1

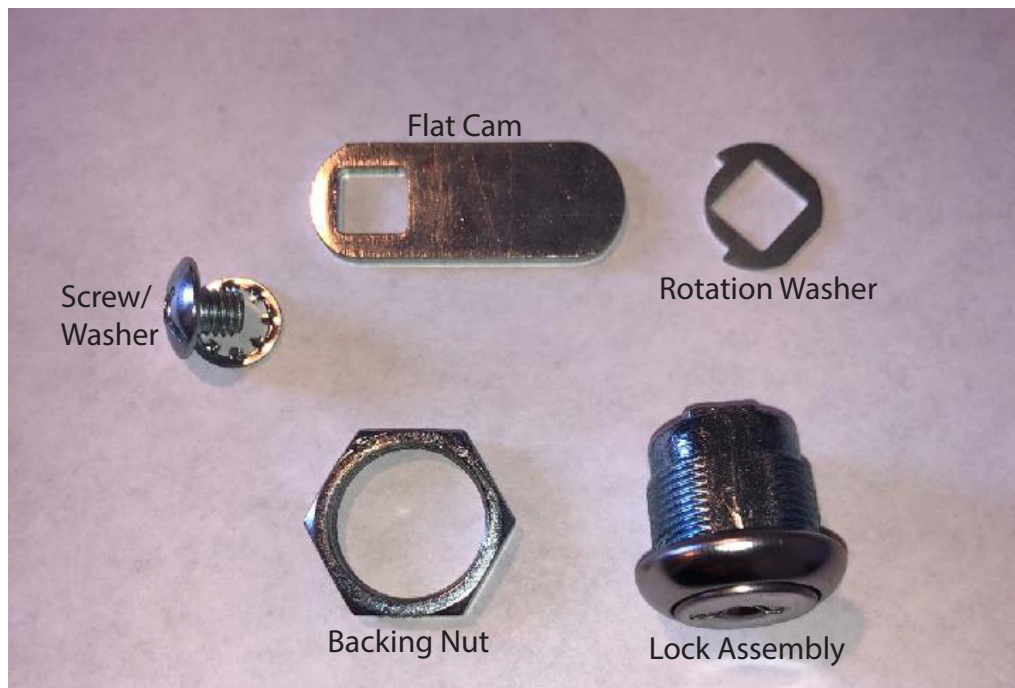

2. Remove screw with lock washer from the lock assembly. Be careful as to not remove the rotation washer right beneath it.
3. Place the lock assembly through the front of the pre-drilled hole located on the front of the louvered door.
4. Place the backing nut over the lock assembly on the inside of the door and hand tighten. Note that due to the thickness of the door, it is normal for the backing nut to only turn one rotation. This will be further tightened in a later step.

5. Locate the flat cam and place at the end of the lock assembly over the rotation washer (center is square) and hold together temporarily.

6. Using the other hand, twist the screw (w/ lock washer) into the end of the lock assembly until you can't tighten any further by hand. You may then tighten fully with a screwdriver.

7. Using an open ended wrench or adjustable wrench, tighten the backing nut. Note you will need to have the key inserted in order to hold it in place while you tighten the nut. Be sure the key/lock is in the right position prior to fully tightening. You can also make small adjustments by carefully bending the flat cam.