



SCALE	DATE	DRAWN	CH'K'D	APP'D
-	6/1/83	DB	JVY	PUD

Boston Whaler Sun Top Pt # 52-5749-00 Installation Diagram for 13'/15' Super Sport, SUPER SPORT Ltd, SPORT, & GLS Models




13' boat hinge location

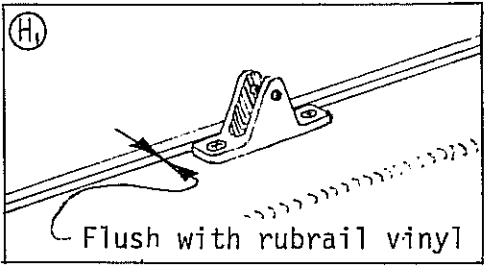

15' boat hinge location

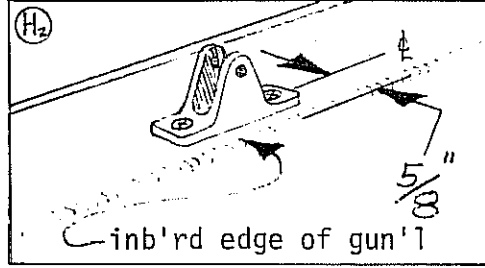


Hinge, secure with 10-32 flat head machine screws and well-nuts. See H and also Well-nut detail.

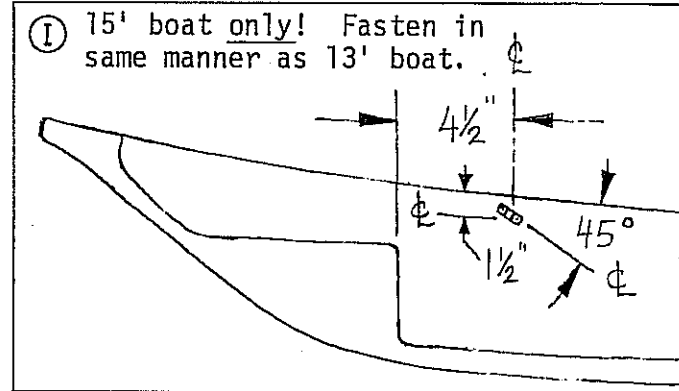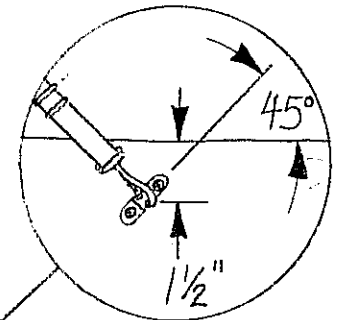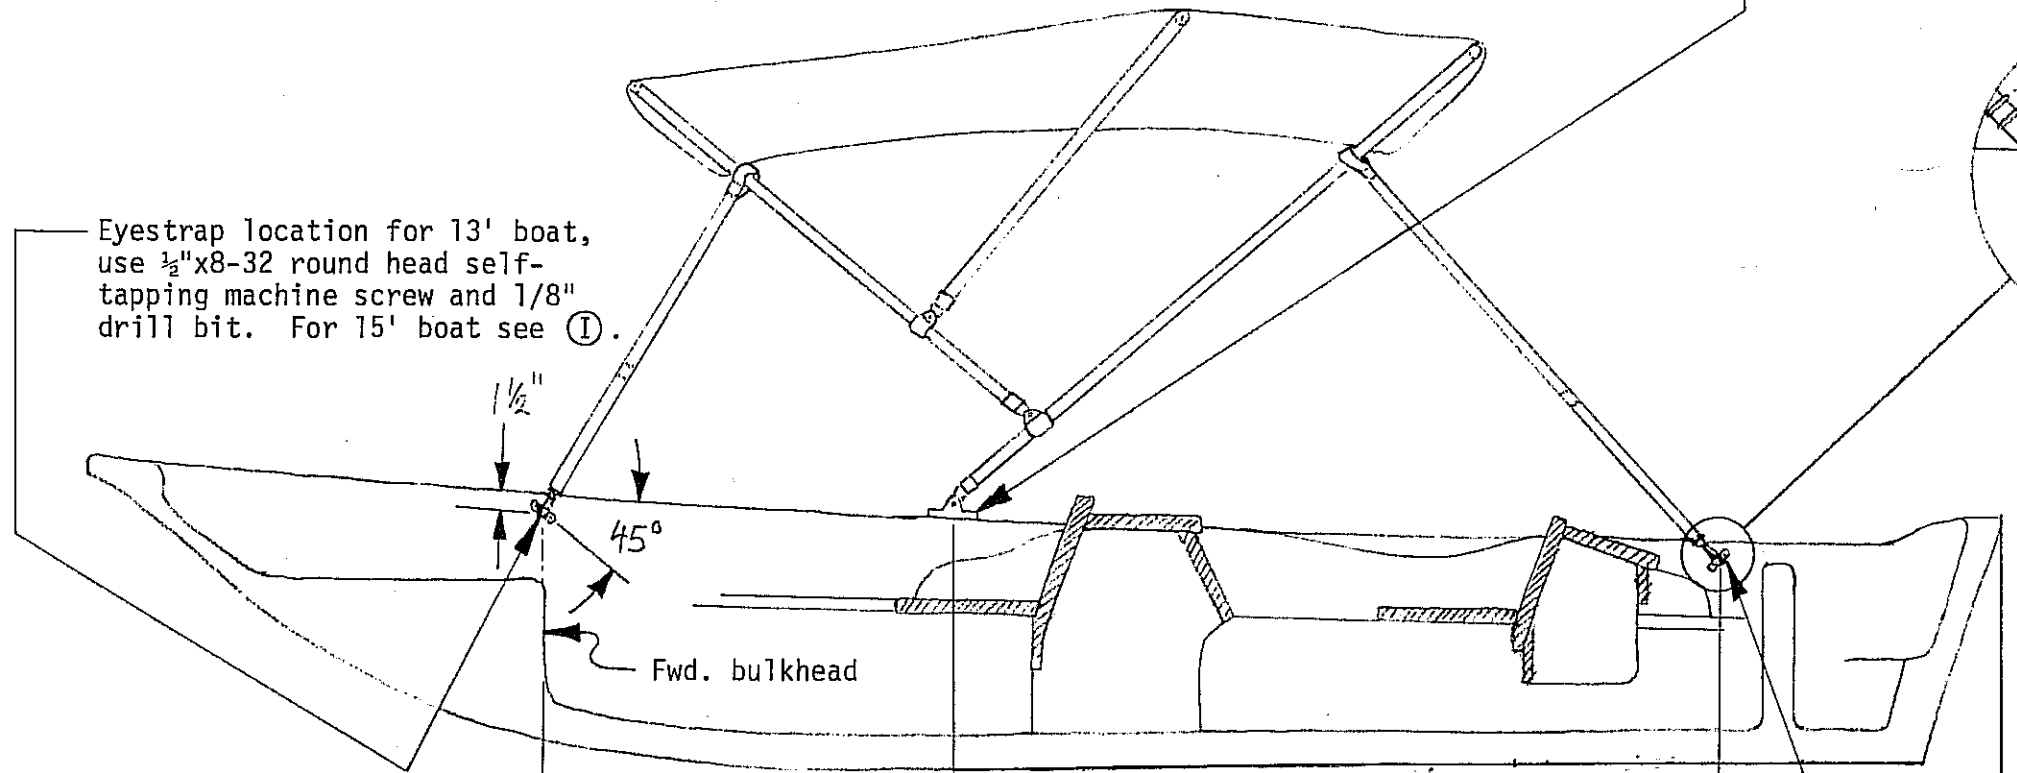

Eyestraps, 1/2"x#8-32 round head self-tapping machine screw. Use 1/8" drill bit.

Well-nut detail

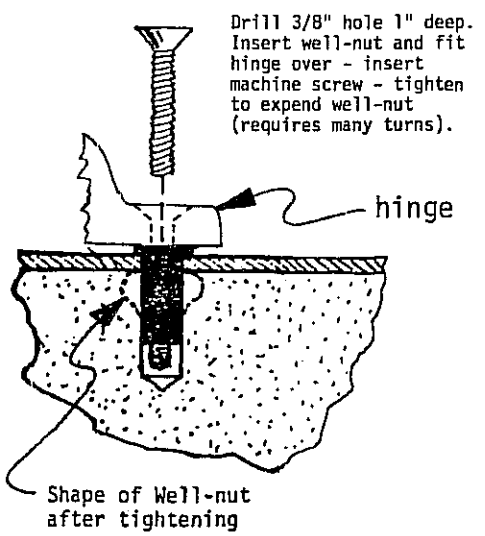

Parts List

52-5749-00 Sun Top with boot.

- Includes: (4) eyestraps
- (8) 1/2"x#8-32 self-tapping machine screws.
- (2) hinges
- (4) #10-32 well nuts
- (4) 3/4"x#10-32 flat head machine screws.