













Model: Alto - 30"

Installation Instructions

Notes: We recommend that you rough-in the drain and water lines after receiving the unit.
 The vanity should be installed by a professional plumber.
 Drainer pipe and trap are not included.
 If you experience any difficulties with this product, do not return to the point of purchase. Please contact LAVIVA directly at support@lavivaforlife.com, and we will help resolve your issue.

| | A (cabinet) | B (backsplash) | C (Screw) | D (Expansion plastic) |
|----------------|--|---|--|---|
| Part List |  x1 |  x1 |  x2 |  x2 |
| Tools required |  screwdriver(phillips) |  silicone |  level |  tape measure |
| Step 1 |  | | | |
| Step 2 |  | | | |
| Step 3 |  | | | |
| Step 4 |  | | | |

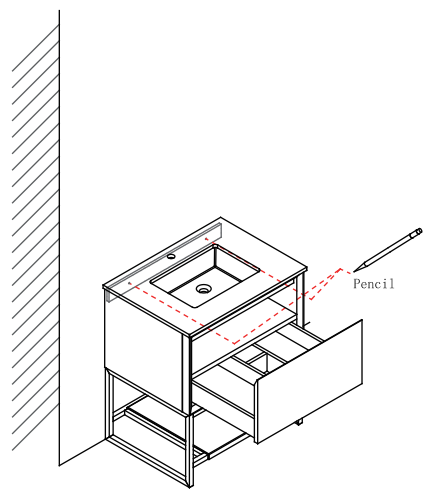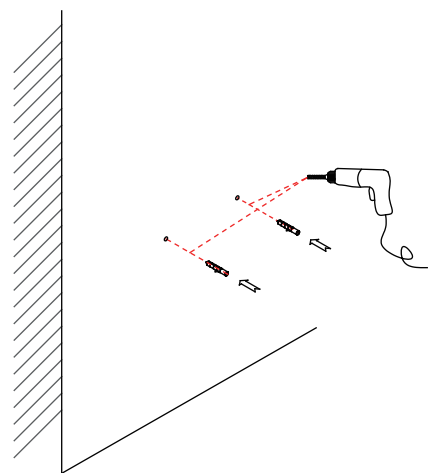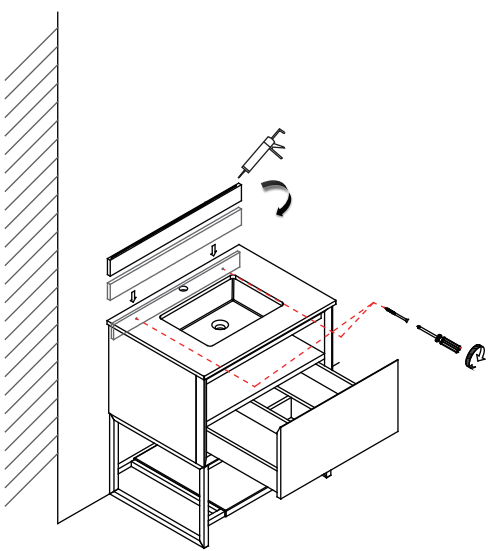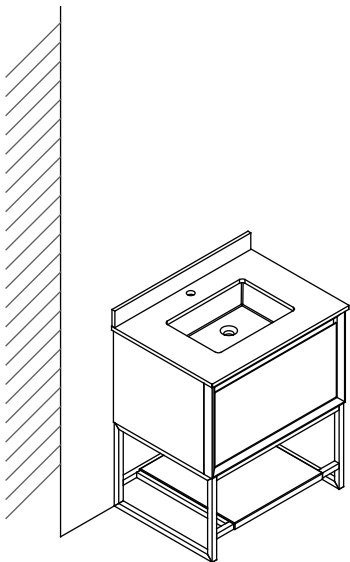