



## Athens Vanity Cabinets: E645-V30-GW E645-V30-MCA E645-V36-GW E645-V36-MCA Assembly / Installation Instructions


### Important Notes:

This vanity cabinet may be used freestanding, or may be mounted to a Wall (floating).

If you are using this cabinet as a freestanding unit, please refer to pages 05.


If you are using this cabinet as a Wall mounted (floating) unit, please refer to pages 01 - 05.

\* For your safety and to achieve the best possible installation of this vanity cabinet, James Martin Vanities always recommends you consult with a professional contractor. Two people are required for the assembly and installation of this vanity cabinet.

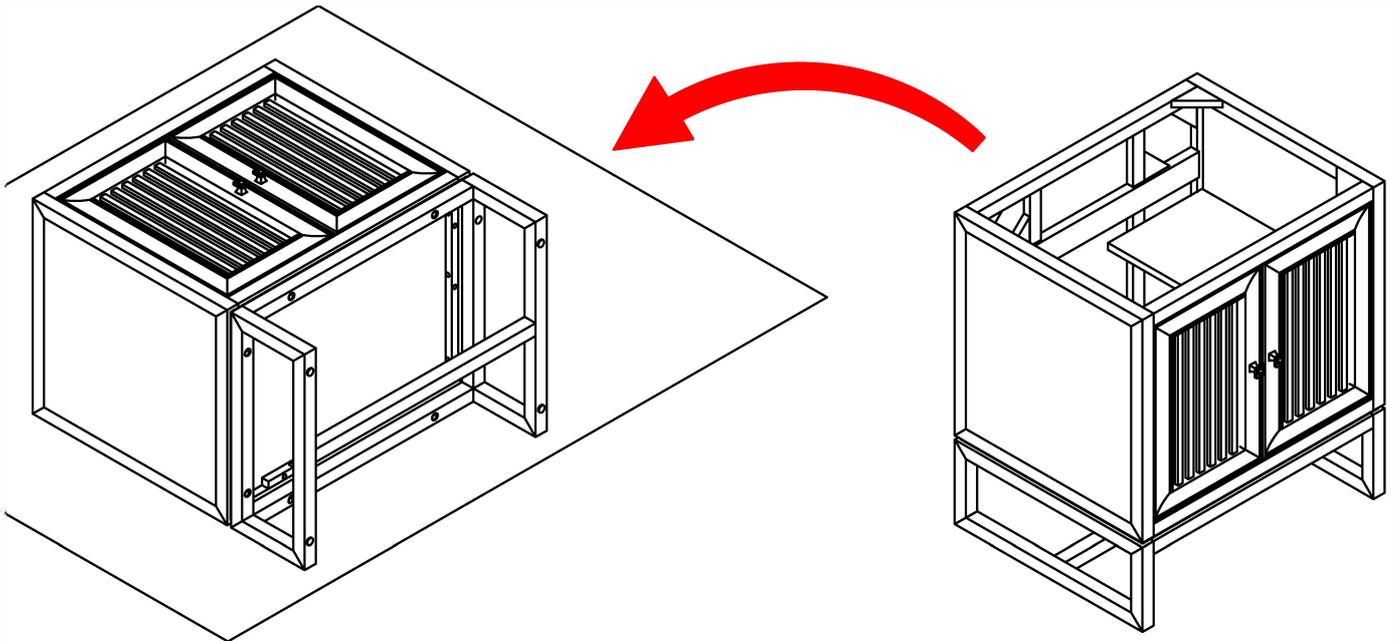

### Step 1 Notes:

To prepare the cabinet for Wall mounting, you need to remove the attached wooden base. Please place a blanket or other soft material on the floor and then place the cabinet on its back.

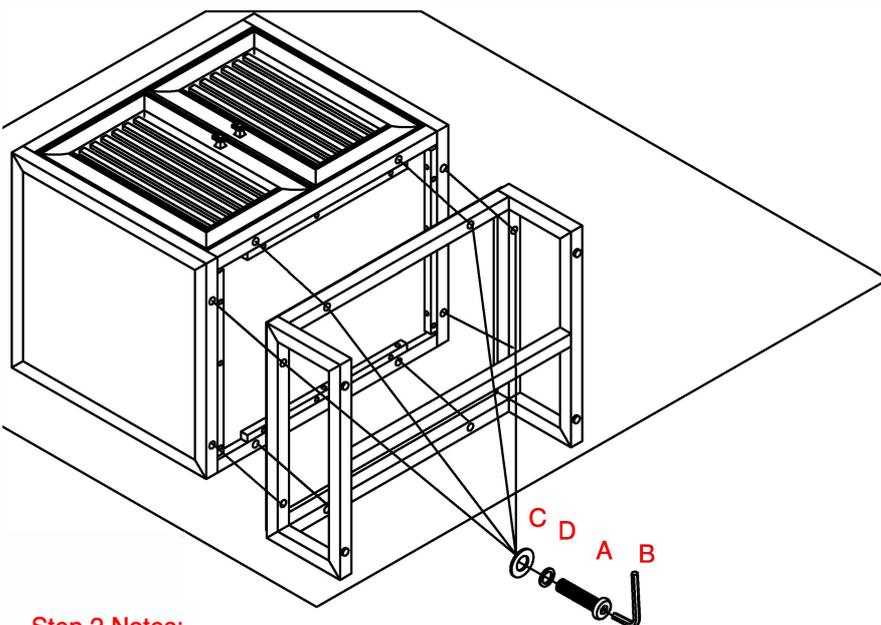

A = 8PCS Bolt 1/4" x 2"



B = 1PC Allen Wrench #04



C = 8PCS Spring Washer 1/4"



D = 8PCS Flat Washer 1/4" x 5/8"



### Step 2 Notes:

Please locate the red hardware bag which is included with the cabinet.


You will need the hex key (allen) wrench to remove the bolts and washers from the base.

Please keep the removed hardware and wrench for possible use in the future.




## Athens Vanity Cabinets: E645-V30-GW E645-V30-MCA E645-V36-GW E645-V36-MCA Assembly / Installation Instructions


### Materials for Installation:

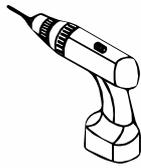

Drill

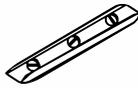

Level

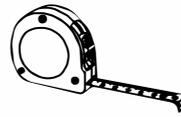
Tape  
Measuring

Pencil




Stud Finder

### F Pre-attached metal mounting (French Cleat) brackets

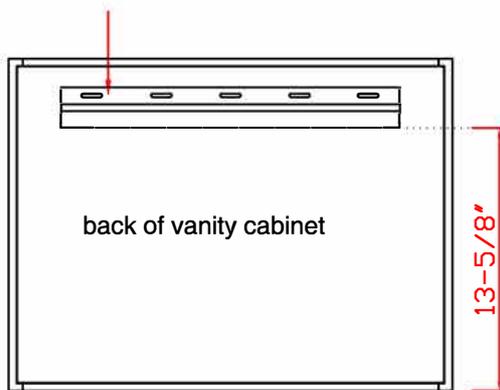

#### Step 3 Notes:

The metal mounting brackets has been pre-installed to the backside of the cabinet 13 3/8" from the bottom of the cabinet, remove one piece from the back of the cabinet .

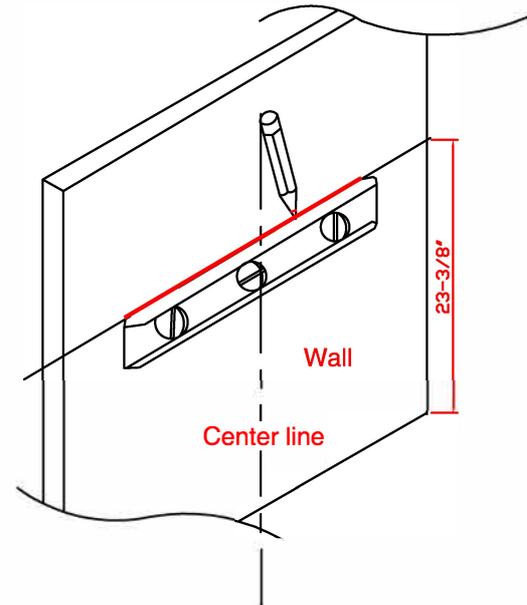

#### Step 4 Notes:

Draw a horizontal line on the wall at your desired height. For this cabinet, most people use a height of 23 3/8"

#### Step 5 Notes:

Locate and mark the position of the Wall's interior studs to which you will fasten the metal bracket.

We recommend the use of an electronic stud finder to locate the studs.


(Alternately, you may find studs by listening for a solid sound as you knock on the Wall)

#### Special Note 1:

If the studs in your bathroom do not line up to the mounting location for your vanity, additional wood blocking can be installed between the studs using standard 2 x 4 lumber.

#### Special Note 2:

Due to the narrow width of this cabinet, you may decide to use dryWall anchors if the Wall studs are not spaced appropriately.

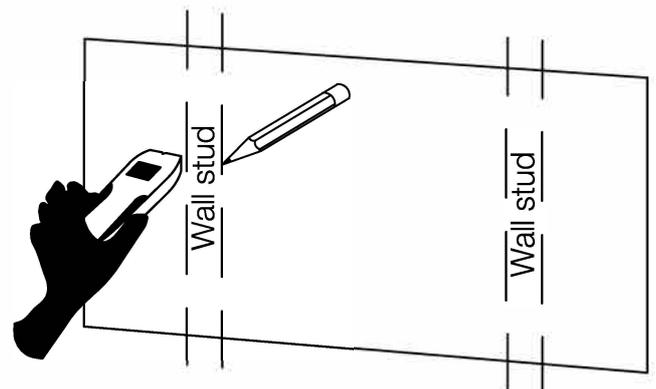


#### IMPORTANT:

James Martin Vanities recommended you always consult with professional installers and contractors regarding the correct installation of our products.



## Athens Vanity Cabinets: E645-V30-GW E645-V30-MCA E645-V36-GW E645-V36-MCA Assembly / Installation Instructions

### Materials for Installation:

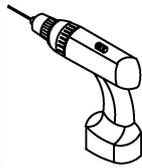

Drill



Pencil



Hammer


**E**=5PCS Drywall Anchor Ø8\*38mm



**F**=1PC Metal Brackett 500mm



**G**=5PCS Screws Ø4\*40mm

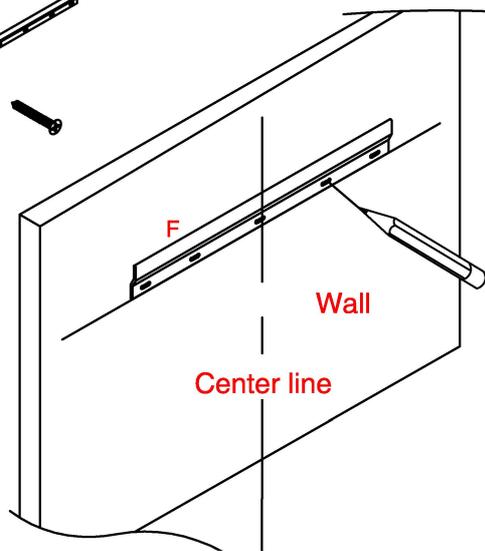


### Step 6 Notes:

After you have located the wall studs, position the metal bracket so the holes align with the center points of the studs. Mark these positions with a pencil.

### Step 7 Notes:


Drill holes for the screws in the positions you have marked with the pencil. Drill the holes' depth no less than 1 1/2", insert "E" to the holes by using hammer.

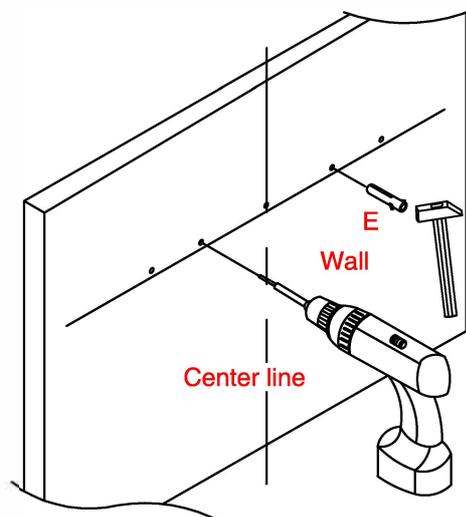




Athens Vanity Cabinets: E645-V30-GW E645-V30-MCA E645-V36-GW E645-V36-MCA  
Assembly / Installation Instructions

**Materials  
for  
Installation:**

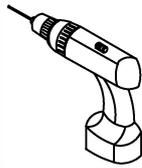

Drill

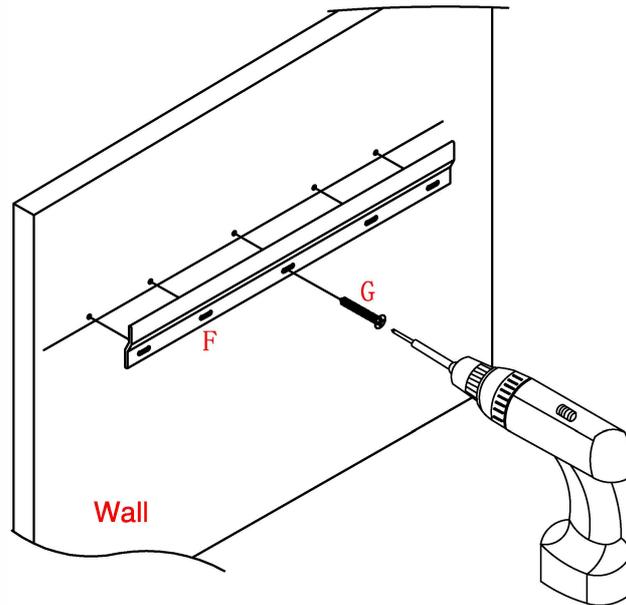


**Step 8 Notes:**

Attach the metal bracket to the Wall using the screws "G" included in the red hardware bag.

**Step 9 Notes:**

Hang the cabinet on the metal bracket.

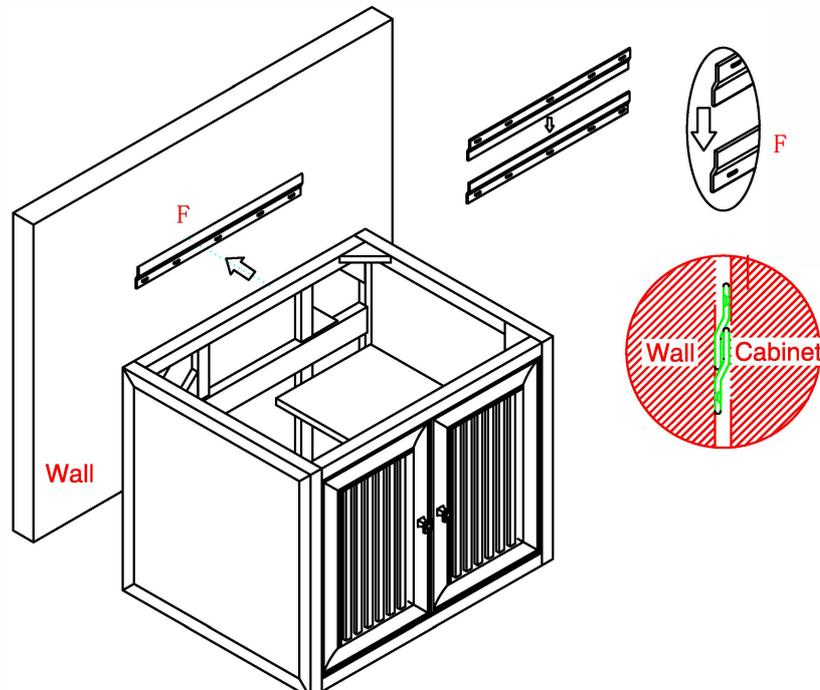




Athens Vanity Cabinets: E645-V30-GW E645-V30-MCA E645-V36-GW E645-V36-MCA  
Assembly / Installation Instructions

**Materials  
for  
Installation:**



**Step 10 Notes:**


Properly align and secure the countertop to the cabinet with high quality adhesive.

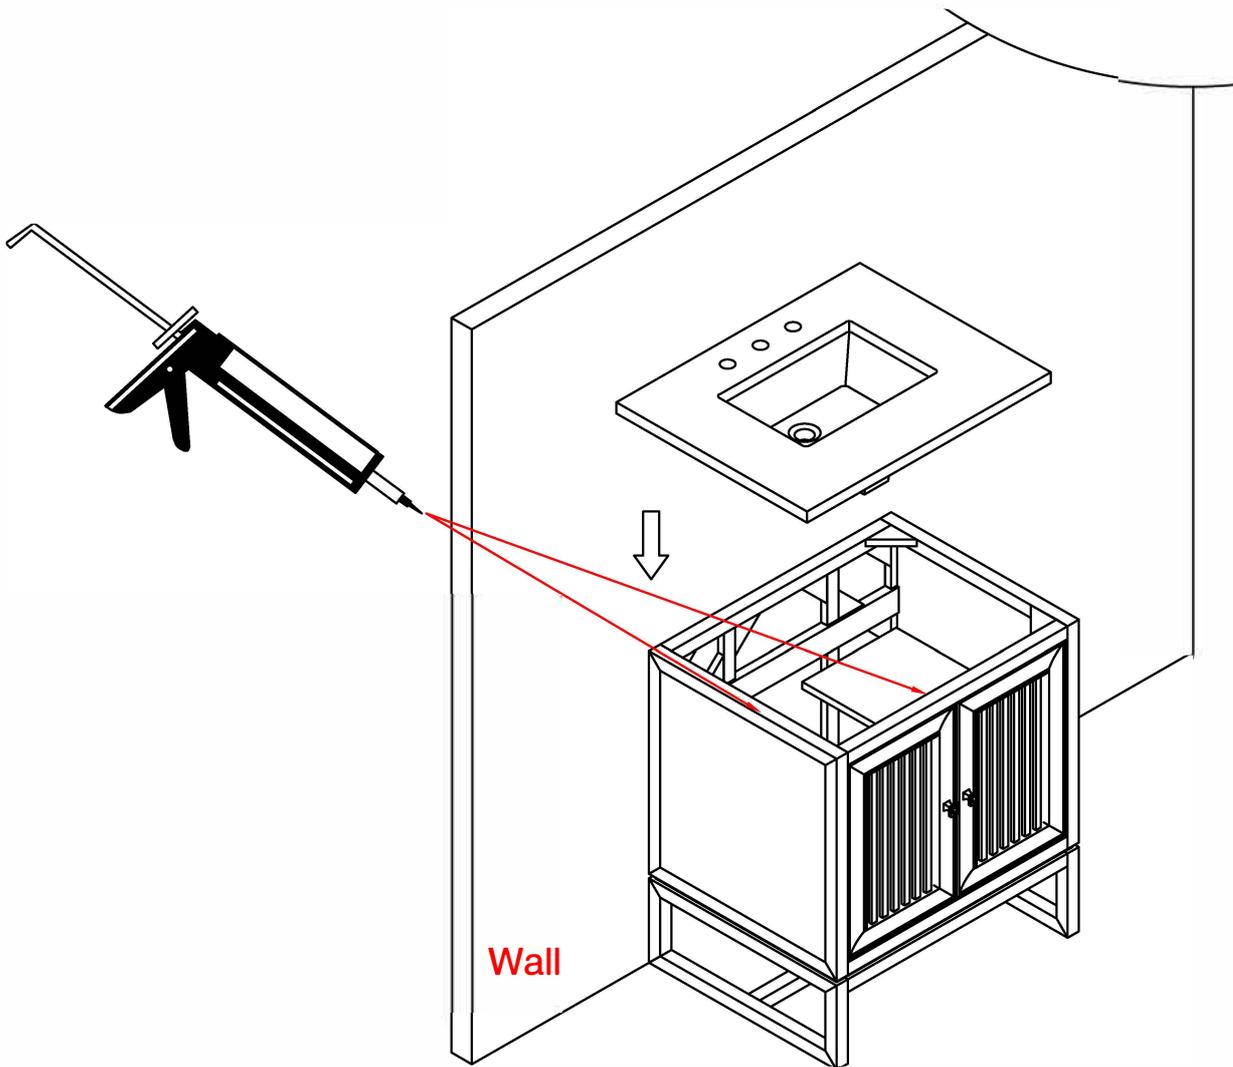

# JAMES MARTIN VANITIES®

## Installation Instructions for 3cm Countertops and Undermount Sinks

(Models: 050, 080 & 090)

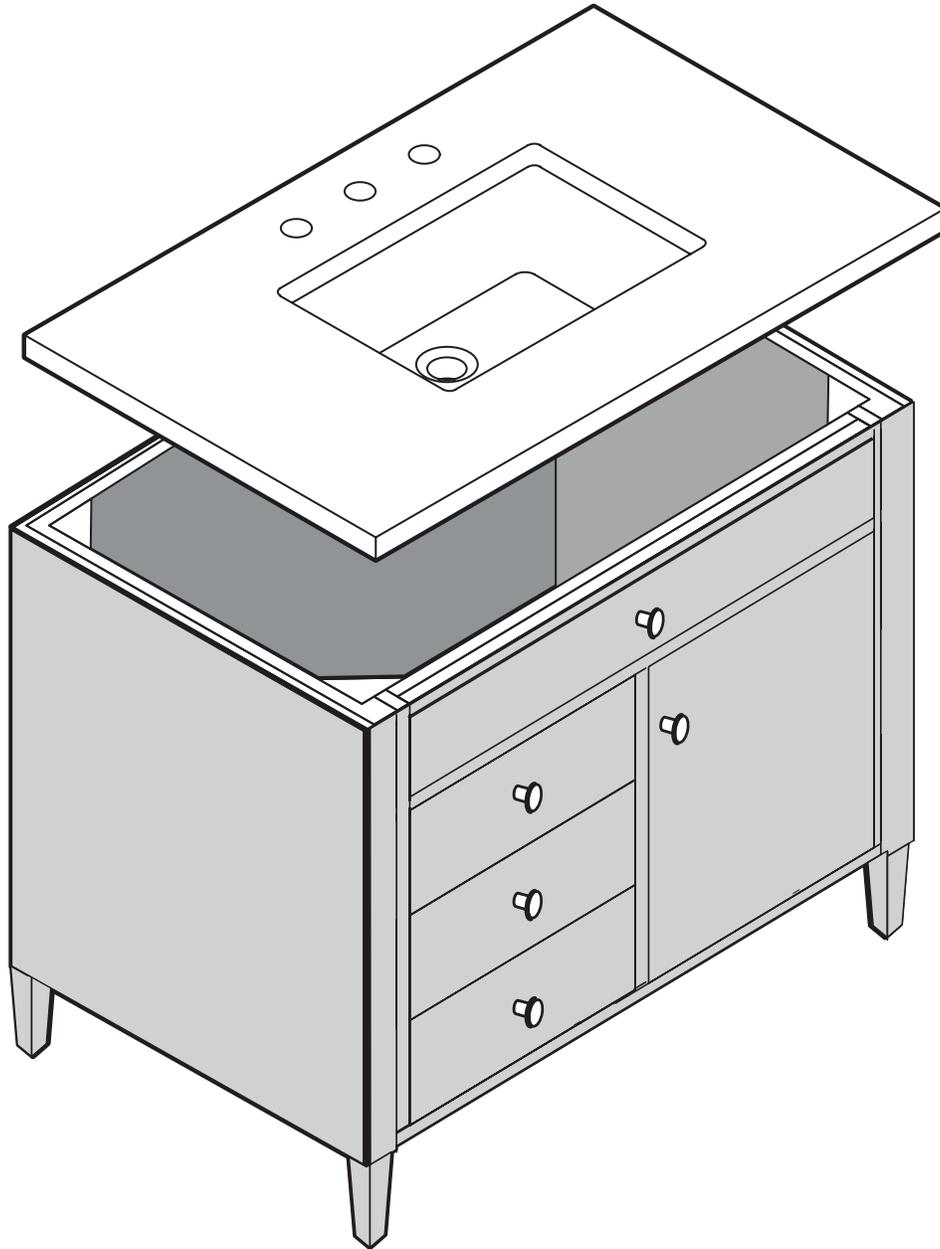

### **BEFORE YOU REMOVE THE TOP FROM THE CARTON**

Prior to removing the countertop from the carton inspect the carton for damage and package contents. If any damage is found, contact your place of purchase.


Products shown in this manual do not reflect a specific vanity or sink.

# Installation Instructions for 3cm Countertops with Undermount Sink


## IMPORTANT STEPS BEFORE YOU BEGIN

- Ensure the vanity cabinet is in place and has been properly installed to meet plumbing codes. For your safety and to achieve the best possible results, James Martin Vanities recommends you consult with a professional contractor.
- Shut off the water supply. Water supply and drain access must be in place prior to installing the countertop and sink.
- Ensure the vanity cabinet is level.

## TOOLS AND MATERIALS: (Not included)

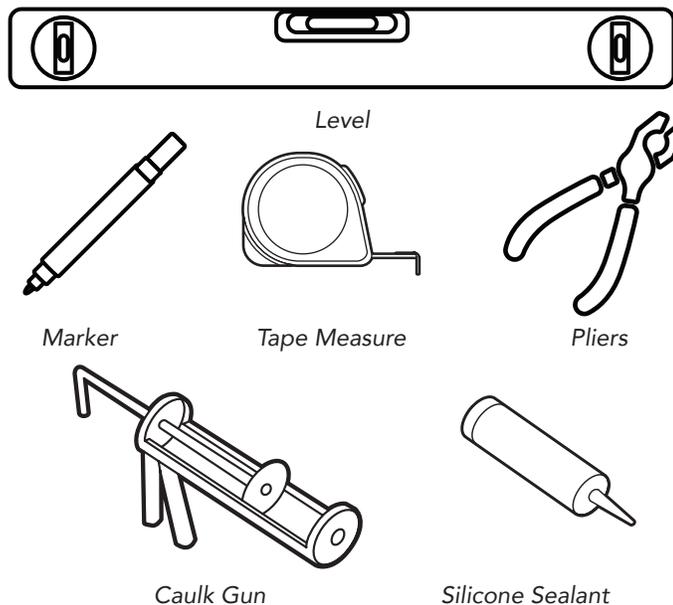


## SINK MOUNTING HARDWARE (Included)

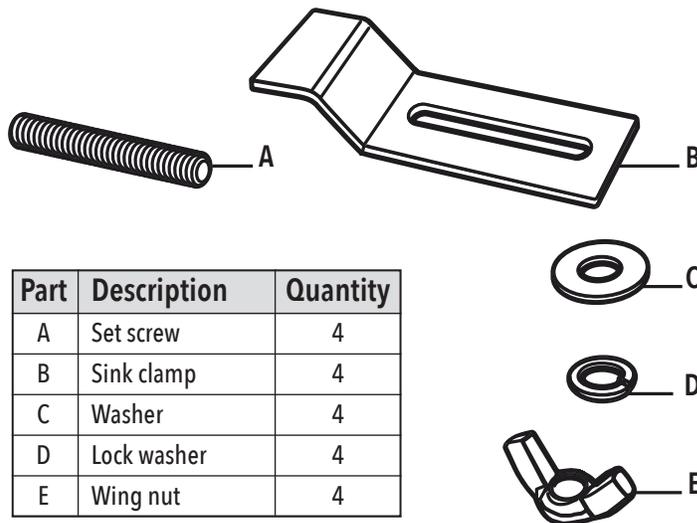

## SINK CARTON CONTENTS


### • Sink

The 3cm Countertop and Sink are packaged and shipped separately.

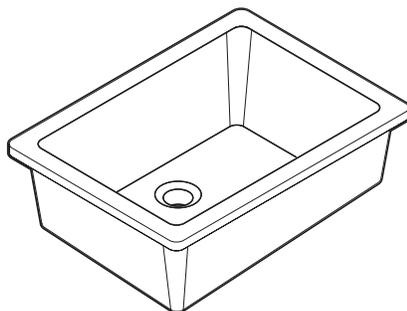

## COUNTERTOP CARTON CONTENTS

- 3cm Countertop
- Assembly Instructions
- Hardware

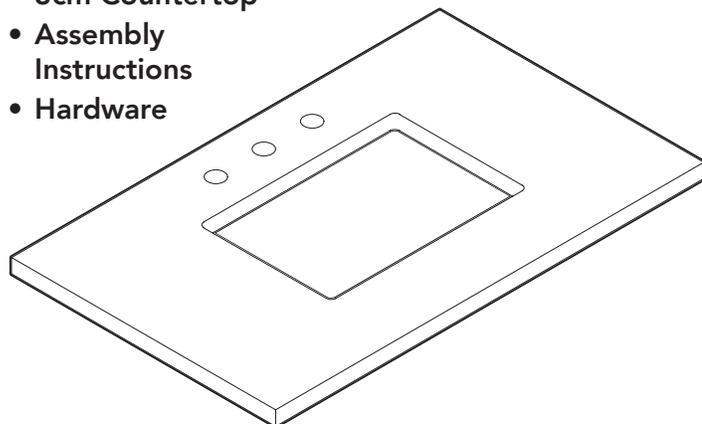


## PROPER HANDLING OF 3CM COUNTERTOP

Carefully unpack the countertop and place finished side down on flat, soft and sturdy surface.


Important: The countertop is very fragile. Take caution when handling, and have someone assist you.




Rotate carton from flat position and lift top vertically.

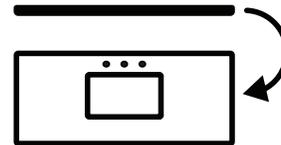

Lift top vertically with two people.

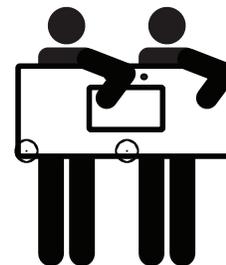

NEVER LIFT OR CARRY THE VANITY TOP FLAT.

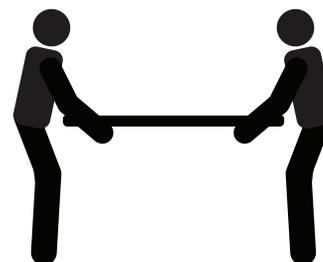


2

# Installation Instructions for 3cm Countertops with Undermount Sink


## SINK INSTALLATION

**IMPORTANT:** Make sure all surfaces are clean.  
Place top finished side down on a soft surface.


1. Using a tape measure, draw a straight 3" line marking the center points of all sides of the sink cut out.

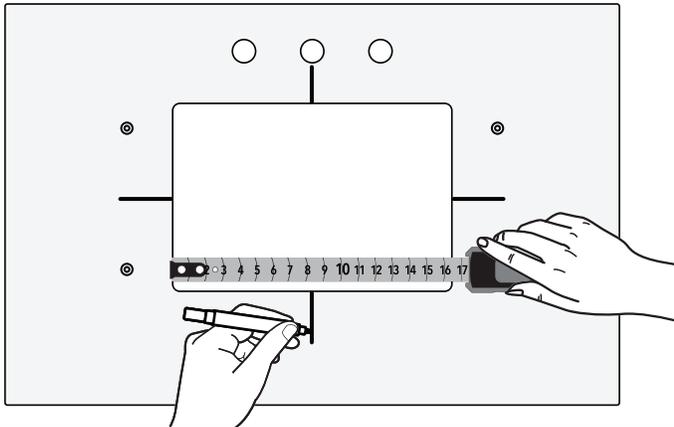


2. Carefully unpack the undermount sink and place on a soft surface, bowl side up. Using a tape measure, identify and mark center point on all sides of the bottom and profile of the lip of the sink.

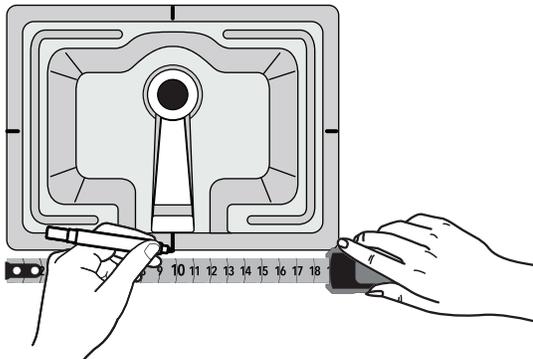



3. Carefully lift the sink and place it centered over the countertop cutout, bowl side up and with the overflow drain at the opposite end from the faucet holes. Align all marked center points along each side of the lip of the sink, with the marked center points along cut out in the countertop. Ensure the sink is centered over the opening and carefully trace around the perimeter of the sink with a marker.

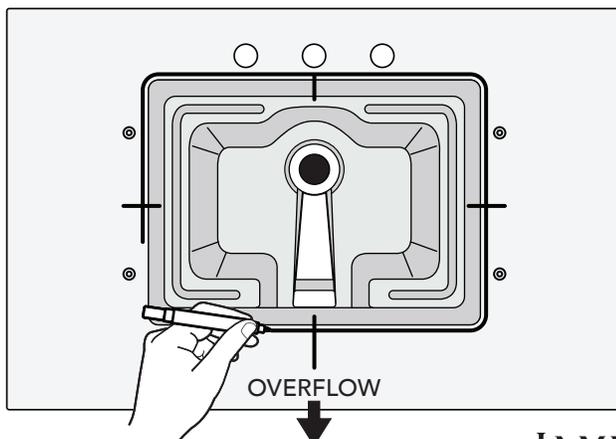

4. Carefully lift the sink from the countertop and place it on a soft surface, bowl side down. Apply a bead of silicone sealant around the top edge of the sink rim.

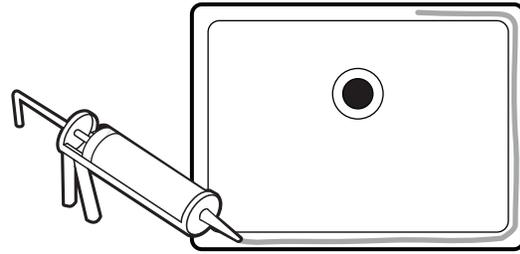


5. Carefully lift and turn the sink over on the countertop, positioning it within your marked outline, ensuring again that the overflow is opposite from the faucet holes. Once positioned, press firmly in place.

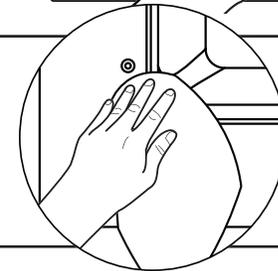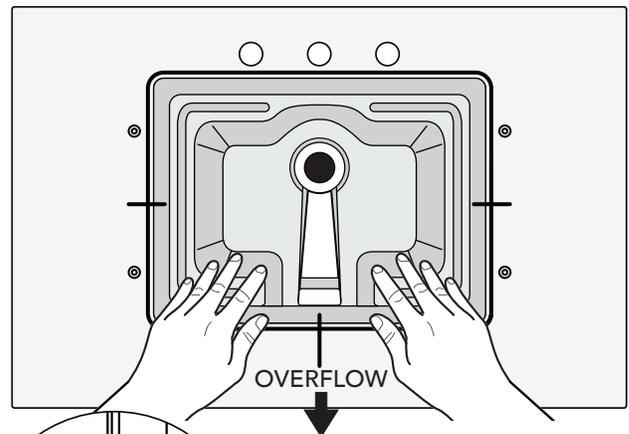

6. Wipe away any excess sealant with a damp cloth and allow sealant to dry according to manufacturer's recommendations.

7. Attach sink clips by placing the long end of the bracket flat against the sink lip. Insert the set screw through the bracket, into the threaded holes. Twist to tighten. Thread the washer, lock washer and wing nut over the set screw and tighten. Pliers can be used – do not over tighten. Allow sealant to dry as indicated by manufacturer.

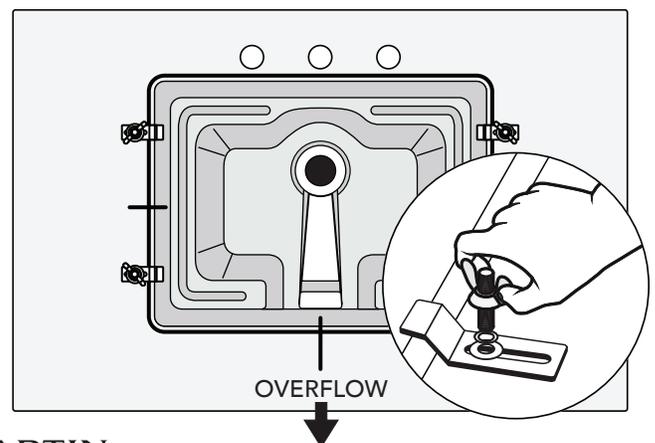

# Installation Instructions for 3cm Countertops with Undermount Sink


## IMPORTANT

- Ensure the vanity cabinet is in place and has been properly installed to meet plumbing codes. For your safety and to achieve the best possible results, James Martin Vanities recommends you consult with a professional contractor.
- Shut off the water supply. Water supply and drain access must be in place prior to installing the countertop and sink.
- Ensure the vanity cabinet is level.

## PREPARING THE VANITY CABINET FOR INSTALLATION OF THE COUNTERTOP AND SINK


**IMPORTANT:** Make sure all surfaces are clean.

8. Apply an adhesive around the top edge of the vanity cabinet. Add an extra dot on all 4 corners of the vanity top.

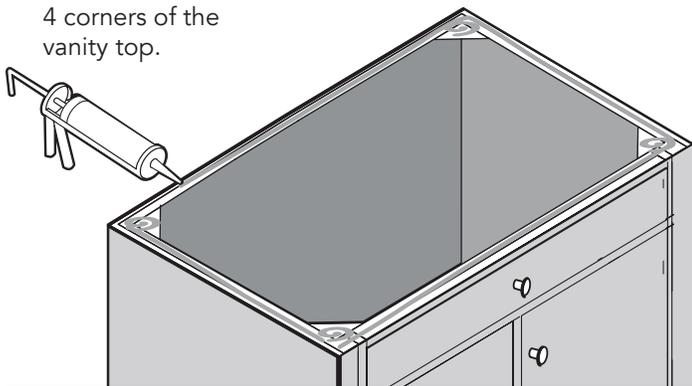


9. With assistance from another person, carefully lift the countertop with sink to a vertical position and ease onto the vanity cabinet, front edge first.


**Important:** The countertop is very fragile. Take caution when handling, and have someone assist you.

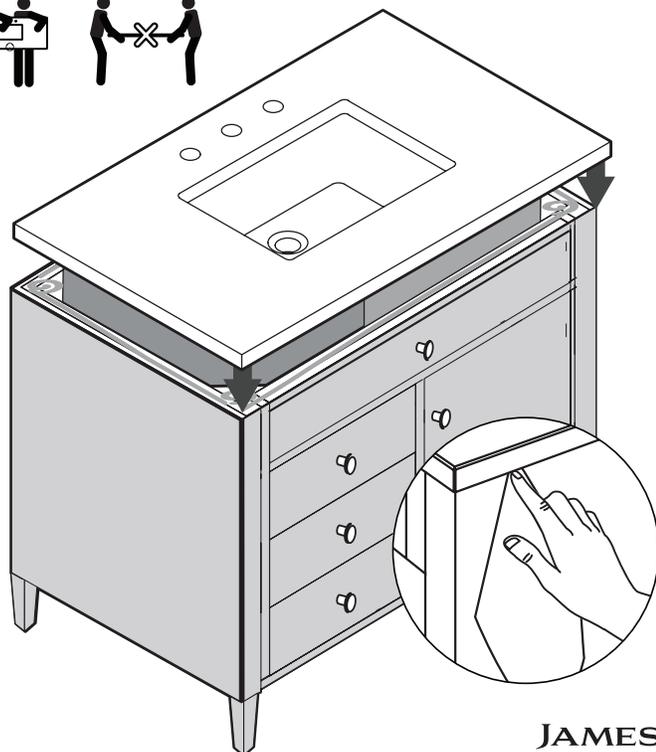

10. Once positioned, press firmly into place. Wipe away any excess sealant using a damp cloth.

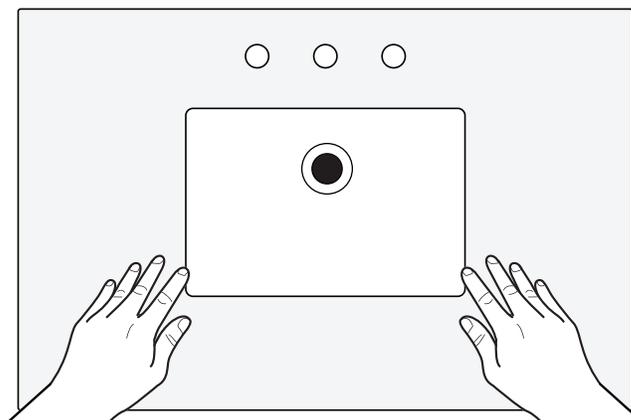

11. If you are installing a wood back-splash (available on specific models), place a generous amount of silicone sealant on the back of it and press it into place against your bathroom wall. Fill any gaps that are left with silicone sealant. Wipe away any excess sealant with a damp cloth.

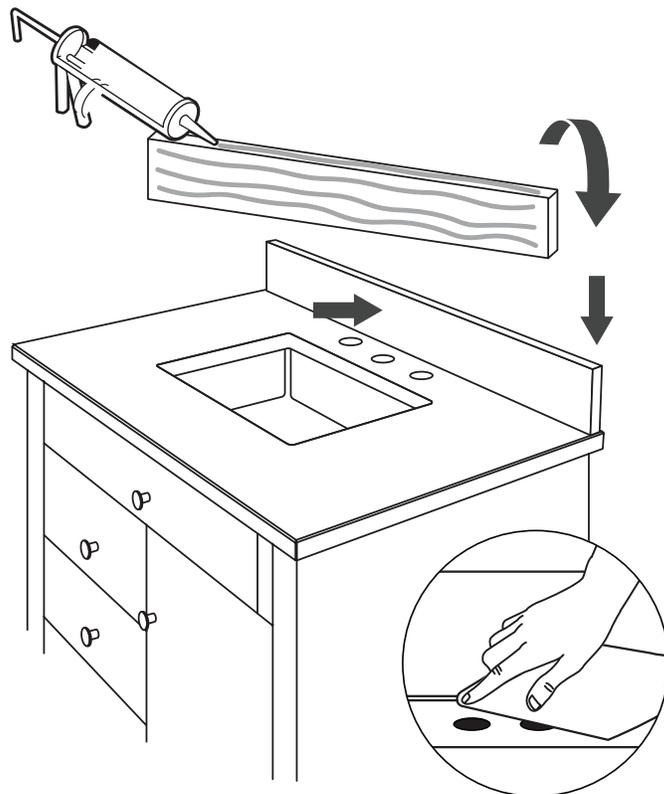

12. Once assembled allow the silicone sealant to fully dry according to the manufacturer's recommendation. When dry, proceed to the installation of your faucet and drain.

13. For stone tops, such as marble and granite, it is recommended that you apply a high quality sealer to protect from staining and discoloration. Stone sealer should be reapplied once or twice per year, depending upon usage, according to sealer's instructions.

4