
SKU: MD-435

Prior to installation, please check the items you have received against the packing list. Report any missing items to your local dealer immediately.


Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.


# Professional installation is recommended.

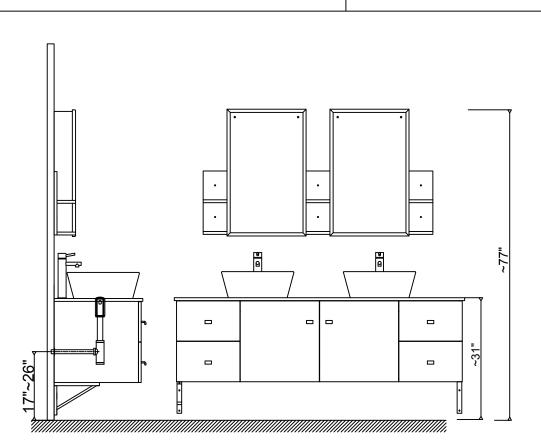



# **PARTS LIST** (may differ depending on purchase)







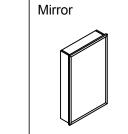


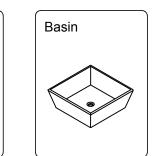

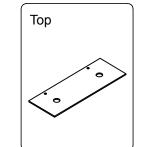

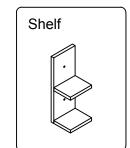

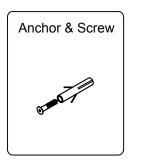

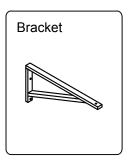

www.avant-styles.com

REV3.19.18



www.avant-styles.com


**SKU:** MD-435


REV3.19.18


### **REQUIRED TOOLS**



#### **DRAWER REMOVAL**

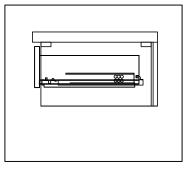

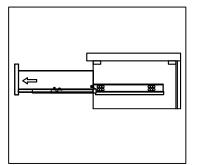

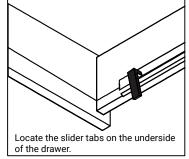


### REMOVAL

- 1. Pull tabs toward center
- 2. Lift and pull drawer out


### **RE-INSTALL**

- 1. Align drawer hole with slider stud
- 2. Push tabs back in to secure


# DOOR ADJUSTMENT

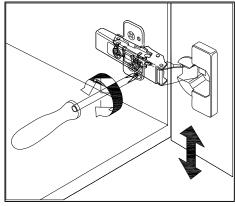

Adjusts the door vertically

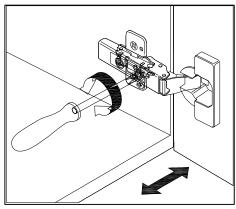

Adjusts the door horizontally

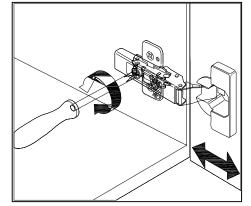

Adjusts the door forward and backwards





www.avant-styles.com


SKU: MD-435


REV3.19.18

#### **Bracket Installation**

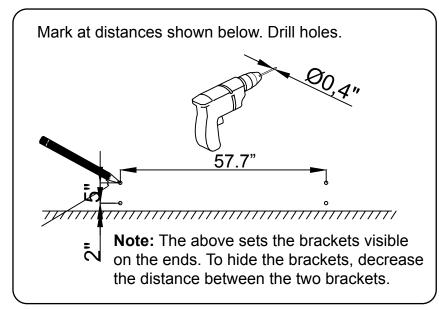

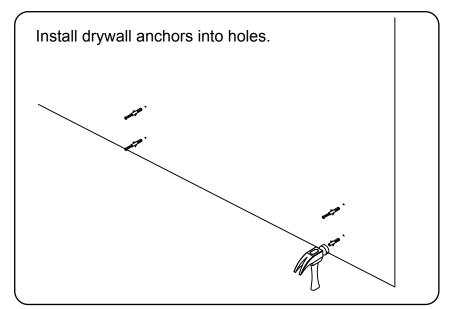

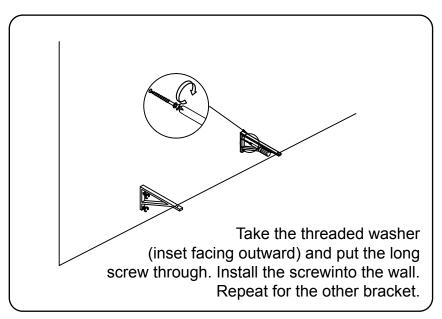

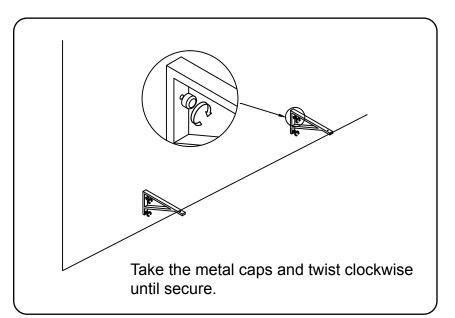




www.avant-styles.com

**SKU:** MD-435

REV3.19.18

#### **Cabinet Installation**

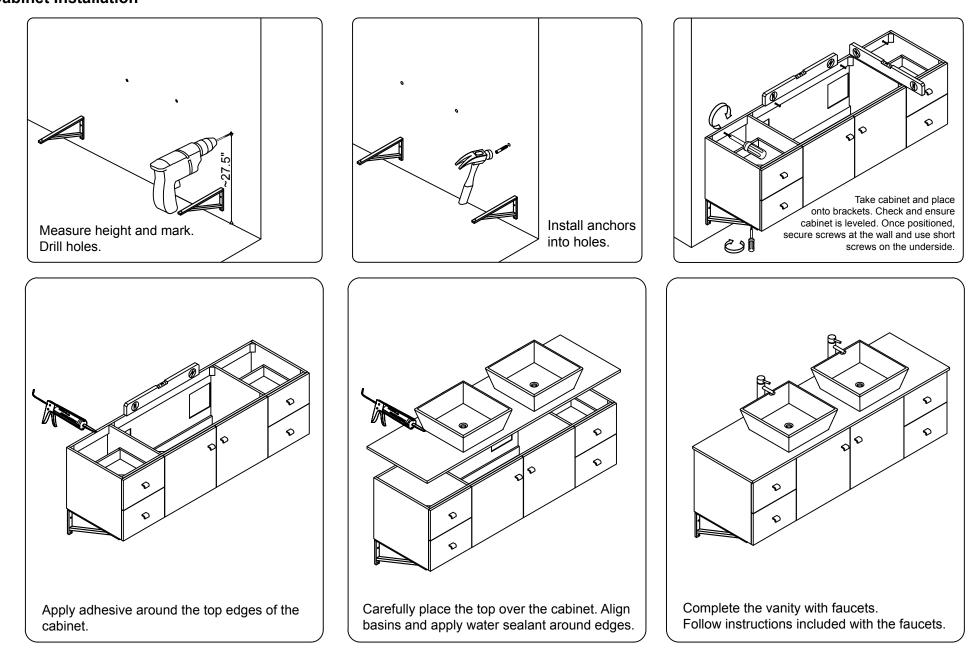



www.avant-styles.com

**SKU:** MD-435

REV3.19.18

#### **Shelf Installation**

