

INSTALLATION INSTRUCTIONS

www.avant-styles.com


SKU: MS-6748

REV3.19.18


Prior to installation, please check the items you have received against the packing list. Report any missing items to your local dealer immediately.


Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.


Professional installation is recommended.

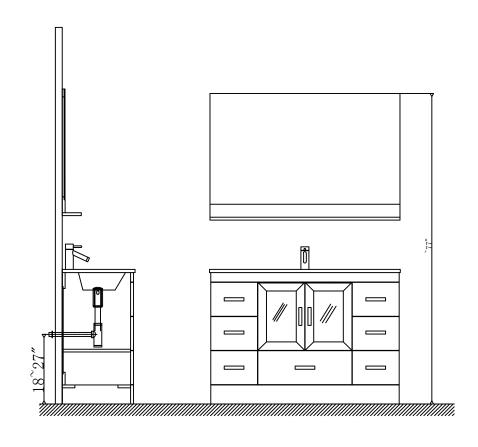

PARTS LIST (may differ depending on purchase)

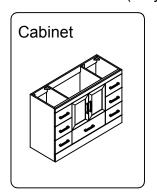

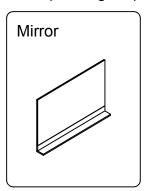

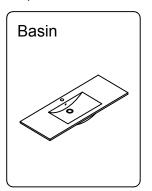




INSTALLATION INSTRUCTIONS


www.avant-styles.com

SKU: MS-6748

REV3.19.18


REQUIRED TOOLS









DRAWER REMOVAL

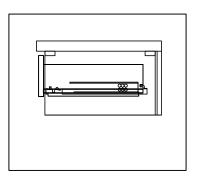

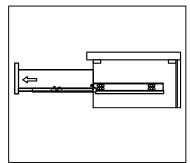

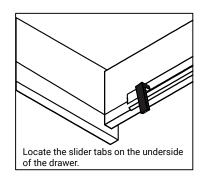


REMOVAL

- 1. Pull tabs toward center
- 2. Lift and pull drawer out


RE-INSTALL

- 1. Align drawer hole with slider stud
- 2. Push tabs back in to secure


DOOR ADJUSTMENT

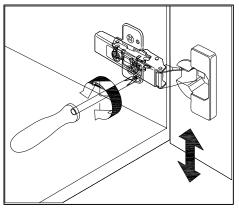

Adjusts the door vertically

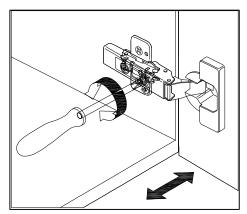

Adjusts the door horizontally

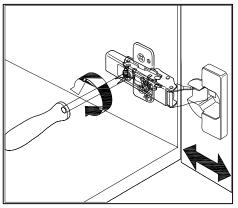

Adjusts the door forward and backwards




INSTALLATION INSTRUCTIONS


www.avant-styles.com


SKU: MS-6748

REV3.19.18

Mirror Installation

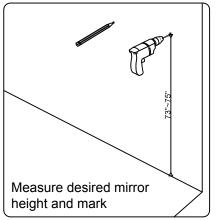

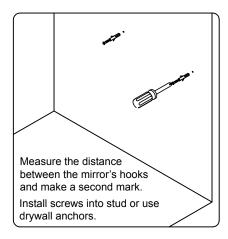

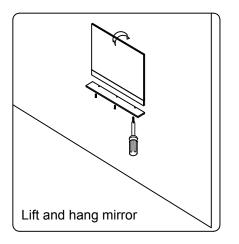

Top Installation

