




- Prior to installation please check received items against the "Packing List". Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.
- Please install on a level surface. If minor door and drawer alignment is required, please follow the easy directions below.
- Backsplash comes in two pieces.

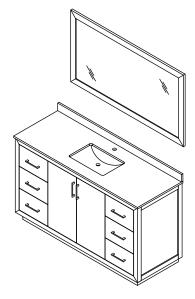

PACKING LIST

(Not all components may be included, depending upon your purchase)

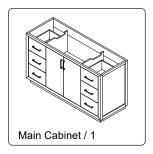

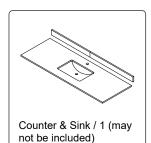









HOW TO ADJUST HINGES (if required)







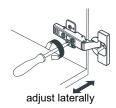



REQUIRED TOOLS NOT IN BOX









Phillips Screwdriver



Tape measure



Pencil





Electric Drill


WYNDHAM


INSTALLATION INSTRUCTIONS

dry 24 hours for proper curing.

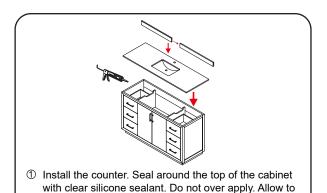


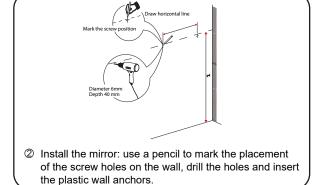


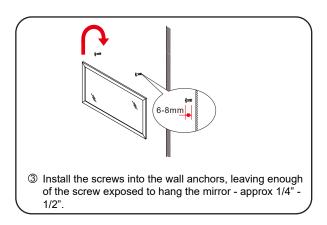

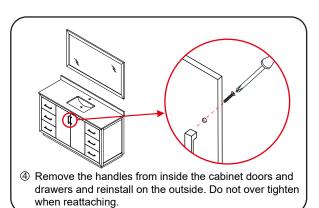




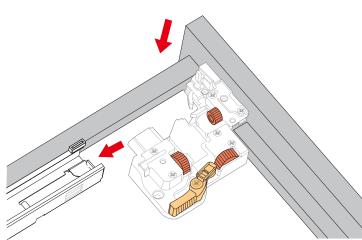




Up and Down Adjustment

WYNDHAM COLLECTION

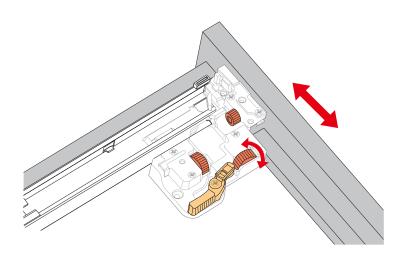

Side Adjustment

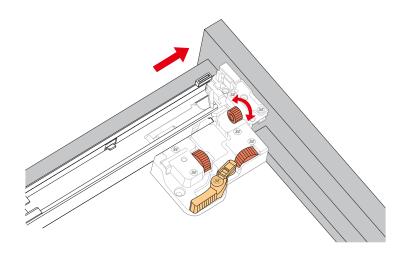


Depth Adjustment



Scan the QR code with your phone to watch detailed video instructions or visit www.wyndhamcollection.com/3dslides



Backboard Cutouts

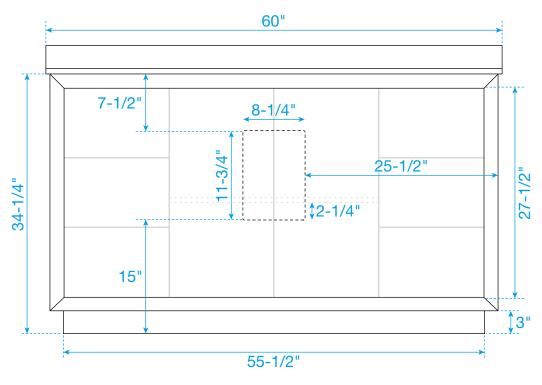

*Note: All measurements are \pm 1/4".

Electrical Outlets with Charging Hub

