

## **FS** Performance Engineering

BMW Z3 Side Skirts V1 Installation Instructions

*These instructions are short and to the point. This is a very straight forward installation.* 

## **Tools Needed:**

- 8mm socket or wrench
- Ratchet wrench
- Cleaning materials / clothes
- Isopropyl alcohol or a comparative cleaning product

## Included in Kit:

- (1) Pair of side skirts
- (1) Full roll of 3M heavy duty double-sided tape




## Steps:

1.) Raise the car and secure with jack stands.

2.) You will be installing the side skirts on one side of the car, then the other. So after you are done with the first side just repeat it on the other side.


3.) Identify the bolts w/ 8mm heads found in the rocker panel. Remove all of them. There will be nine of them. Notice that the front and rear bolts are slightly longer - make sure that when they are put back into the car that they are placed in their appropriate holes (4 PICS).

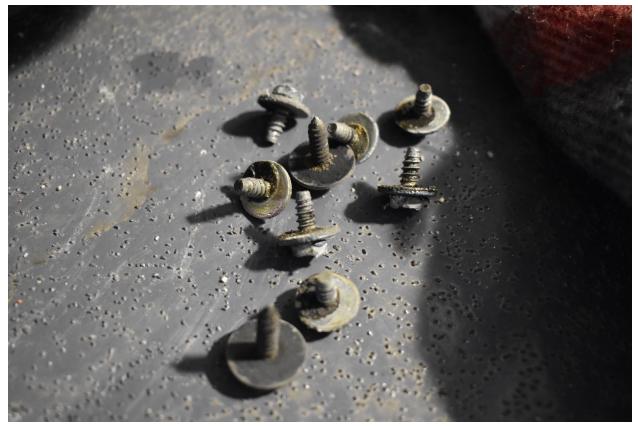







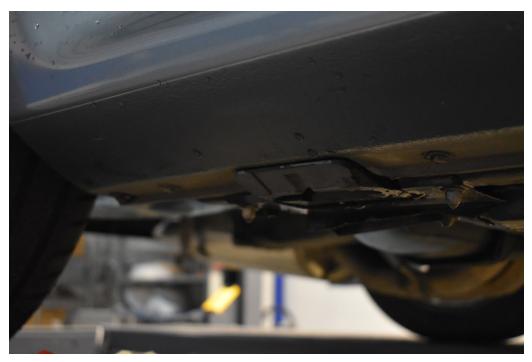

4.) Thoroughly clean the underside of the rocker panel where the side skirt will mount. Use the cleaning products and isopropyl alcohol to assure there is no dirt left. Then apply 3M tape along the ENTIRE flat portion of the rocker panel. It may need to be cut into sections around the jacking areas. Do not cover the bolt locations, and do not peel away the bottom side of the tape yet. (2 PICS)







5.) Install one of your side skirts into the rear 4-5 holes. They can only go one way. Let the front hang down. Peel off the tape lining and push the skirt up against the tape then install the front 4-5 bolts remembering that the front hole has a longer bolt.

Then let the back end of the skirt hang down and peel off the remaining tape lining. Push the skirt up against the tape and install the remaining bolts. (2 PICS ON NEXT PAGE)







6.) Make sure all bolts are secure and repeat on the other side!



7.) Enjoy your new FS Performance Engineering aero! Tag us & use #FSPerformanceEngineering in the online world!!



For questions email <u>costas@fspeinc.com</u> or <u>jim@fspeinc.com</u> Or call/text us at (661) 809-0954