

FS Performance Engineering
Chevrolet Corvette C8 Side Skirt Installation Instructions

Tools Needed:

- Ratchet Wrench
- 7mm Socket
- Cleaning Solution
- Rag(s)
- Isopropyl Alcohol
- Friend / helper
- Diagonal Cutters & Heat Gun (if you have edge trim)

What's Supplied:

Parts:

(2) C8 Corvette Side Skirt Extensions

Hardware:

(1) 20' Roll of Double Sided tape


Steps:

1.) Side skirt installation is very simple. It is recommended that you have help from a friend. There is no need to raise the vehicle.

2.) Begin on one side of the car. Use a rag and cleaning solution to thoroughly remove any dirt found under the rocker panel. Then use another rag and isopropyl alcohol to remove any additional spots or dirt under the rocker panel. You are preparing the surface for double sided tape.



3.) Run 1 strip of double sided tape along the entirety of the rocker panel underside (~78"). Keep it toward the outside of the rocker panel so the tape is about 1/8" away from the edge. We represented this tape by a green line. Use pressure upward to firmly apply the tape.

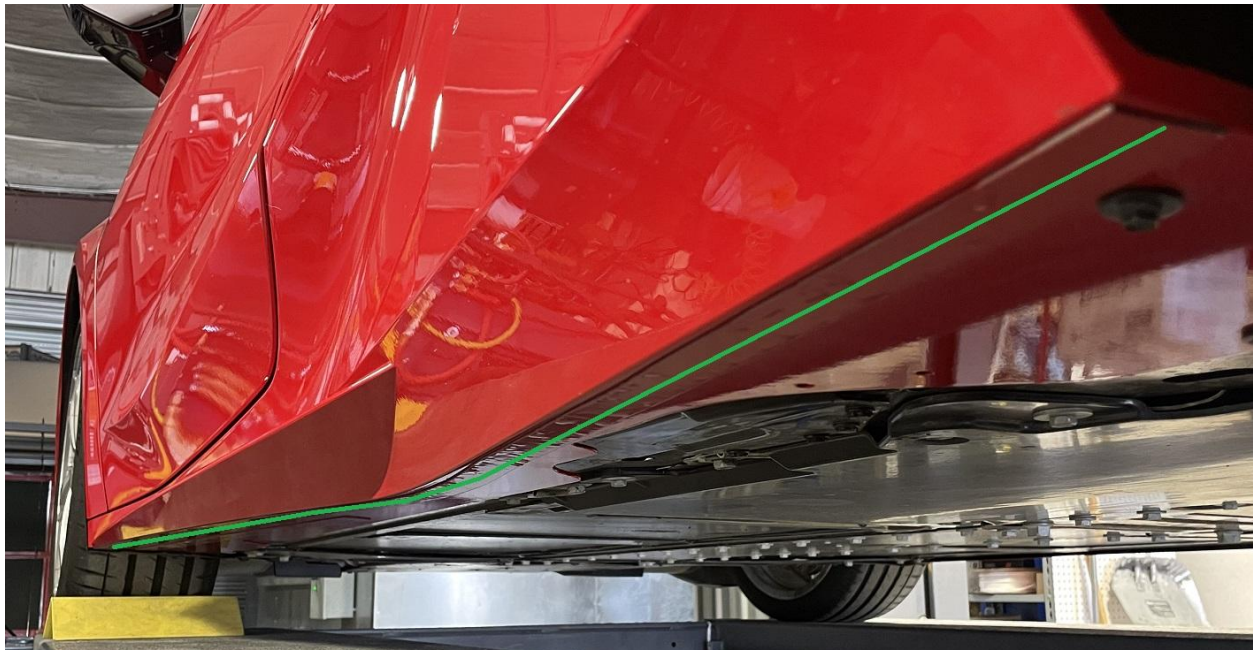


4.) Cut a 36" (3 foot) piece of tape and run it along the wider portion of the rocker panel at the front, about 1-2" behind the piece just placed. Green represents tape from step 3, blue represents the 36" piece from this step. Use pressure upward to firmly apply the tape.




5.) Identify and remove the 3 screws found under the rocker panel on the car. There is 1 at the front, and 2 at the back. Use your ratchet wrench and 7mm socket. **REAR SHOWN HERE:**



FRONT SHOWN HERE:

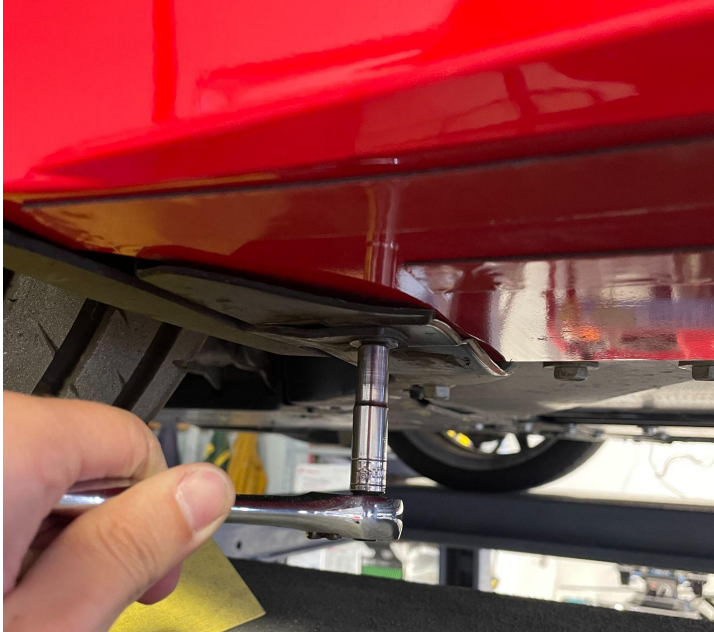

6.) Install a side skirt extension onto the rocker panel using the screws just removed. The side skirt extension will need to be slipped above the black plastic at the front so it sits entirely against the rocker panel.

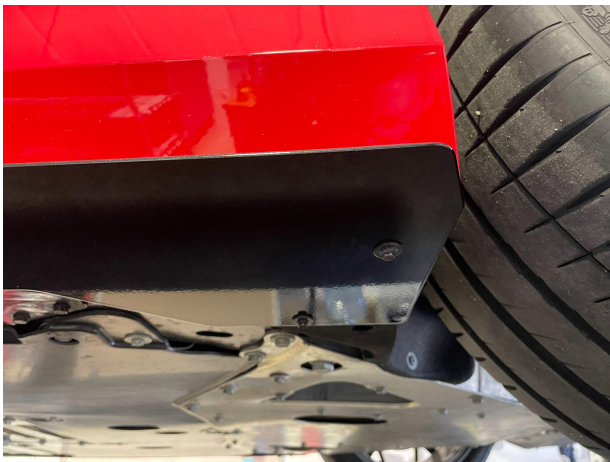

7.) Your side skirt extension will be bowing in the middle right now. Remove the film from all of the double sided tape applied onto the car. The screws might need to be slightly loosened to get it all off. Then push upward on the side skirt extension starting in the middle. Make your way outward applying pressure at all contact spots for at least 60 seconds each.

For maximum adhesion, especially toward the front, jam something between the side skirt extension and ground to help maintain an upward pressure.





8.) Once you are satisfied with the adhesion please assure the 7mm screws are tightened. Repeat this process on the other side of the vehicle.

9.) If you have edge trim use isopropyl alcohol to clean the edge of your side skirt extensions. Then apply the trim. Use light heat to form the trim around corners if necessary. Cut to size once applied.

10.) Enjoy your new side skirt extensions! Feel free to tag us online using #FSPerformanceEngineering. If you have any questions feel free to contact us.



PHONE: 661-809-0954

EMAIL: costas@fspeinc.com

THANK YOU :)