



FS Performance Engineering
Hyundai Veloster Gen 2 Rear Window Vent Installation Instructions

Tools Needed:

- Isopropyl alcohol/cleaning solution
- Cutting device like diagonal cutters or sharp scissors

Included:


- (1) Passenger side rear window vent
- (1) Strip of black edge trim

Steps:

1.) Roll down your rear right side window all of the way.




2.) In the vent the top side toward the back of the car has a small hole in it. Slip the window vent into the window slot by inserting it at the rear first, then slipping it upward. **DON'T BEND THE PIECE TO GET IT INTO THE SLOT.**

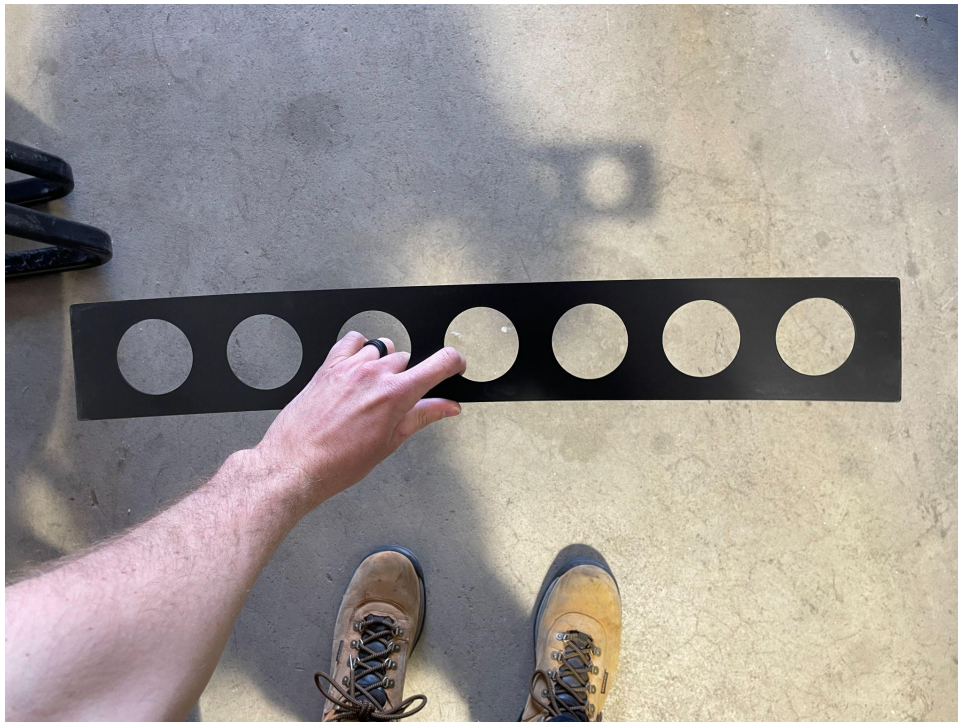



3.) Once the piece is pushed upward adjust it forward or back where you'd like it. Clean the bottom edge of the window vent and install your edge trim flat onto the bottom of the window vent that's exposed - cut to length. Make sure the window vent doesn't fall while doing so.

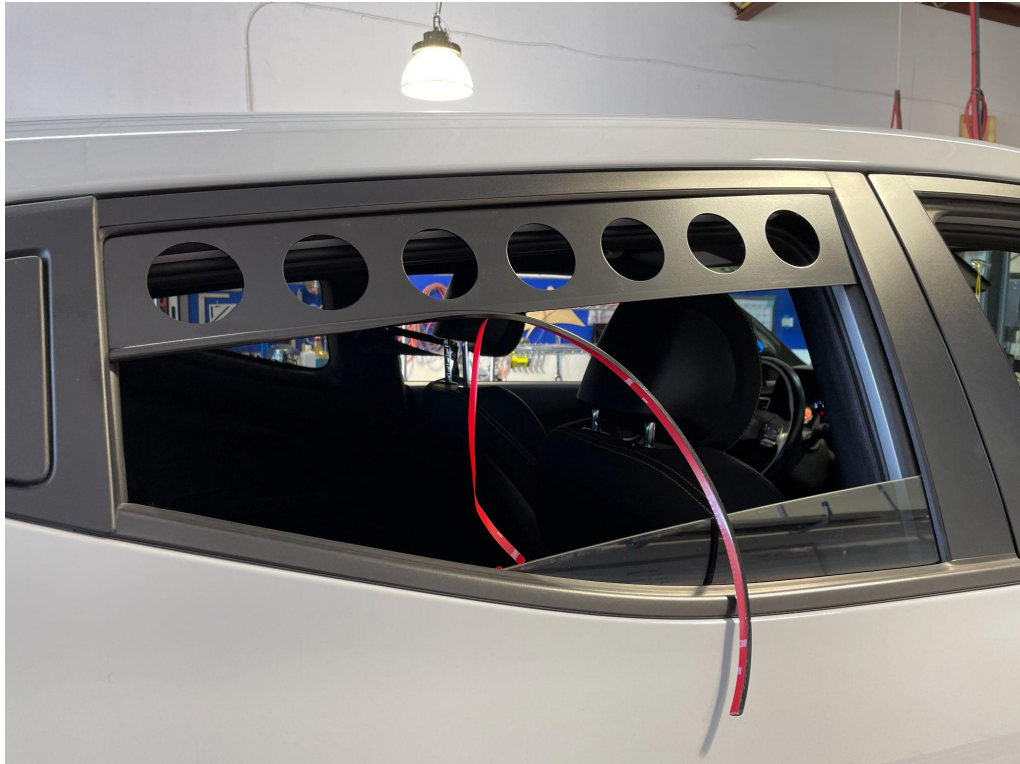



4.) Roll your window up just to the bottom of the vent. You want to roll it up so the vent is tightly secured in the cavity, but not so tight that it pushes past the vent. Assure the window vent is secure and feels tight, then you are good to go!!! This is intended to be a show piece and we don't recommend driving with it (although we have seen people do so).



5.) Enjoy your new FS Performance Engineering aero! Tag us & use #FSPerformanceEngineering in the online world!!

For questions email costas@fspeinc.com or jim@fspeinc.com
Or call/text us at (661) 809-0954