

FS Performance Engineering

Toyota Corolla Hatchback & Sedan (Gen E210) Side Skirt Extensions Installation Instructions

Tools Needed:

- Ratchet Wrench
- Isopropyl alcohol
- Clean cloth
- Phillip's head screwdriver (optional)
- Drill (optional)
- 5/64" (or a very small) diameter drill bit (optional)
- Heat gun/Diagonal cutters(if you ordered edge trim)

What's Supplied:

Parts:

(1) PAIR of Side Skirt Extensions w/ pre-applied 3M double-sided tape

(2) Fins (if ordered) w/ hardware listed below:

- (4) 1/4"-20 x 3/4" countersunk bolts
- (4) 1/4" countersunk washers
- (4) 1/4"-20 nyloc nuts

(4) #8 x 3/4" Body Screws (optionally installed)

Steps:

1.) Begin by raising your vehicle. Place it securely on jack stands. Or alternatively use a vehicle lift.

Please note: It is highly likely you can install these side skirt extensions without a lift if you plan on only using 3M tape.

2.) Thoroughly clean the underside of your existing rocker panels where the side skirts will be mounting. Use 70-90% isopropyl alcohol and a cleaning cloth. The cleaner the rocker panels are, the better your side skirts will stick. We recommend cleaning your rocker panels until there is ZERO dirt or grime left.




3.) Hold the side skirt up against the underside of the rocker panel. The inside of the side skirt extension should follow the straight inner edges of the pockets in the rocker panel. Figure out the best position where the tape will stick the entire length.

We recommend peeling the tape at the back side first, mounting the back edge, then doing the same at the front. You can peel the tape entirely after the front and back are mounted.

Push the side skirt extension up against the vehicle and hold firmly. Make sure you push up where the tape is in every spot front-to-back for at least 15 seconds. Repeat on the other side of car.

Note: Keep in mind that if you have the mudguard option, the front of the side skirt should contour the outside of the mudguard.





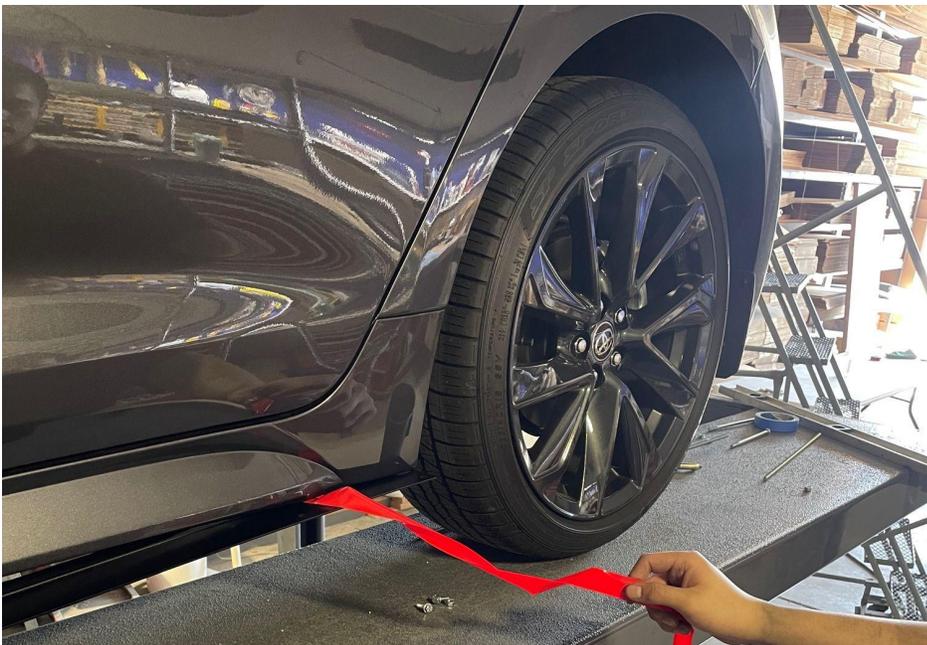

4.) This step is optional. If you'd like to secure the side skirt additionally, you can install the supplied screws. These screws are mounted through the holes located at the front and rear of the side skirt, and up into the rocker panel. We recommend drilling a 5/64" hole at those locations if you're going to do so.

5.) If you don't have fins, skip to step 6.

If you have fins, install them. There is a left and right. The fold on the fin sits under the splitter. Your countersunk bolts and washers are on top, and nyloc nuts are on bottom. Use a 5/32" allen wrench and 7/16" socket to securely tighten - don't over tighten or you will crack the washer.

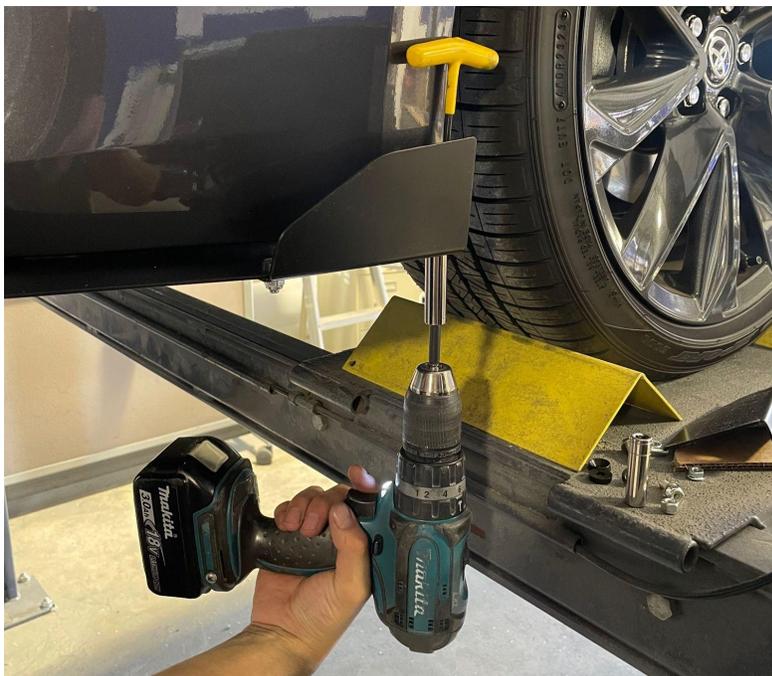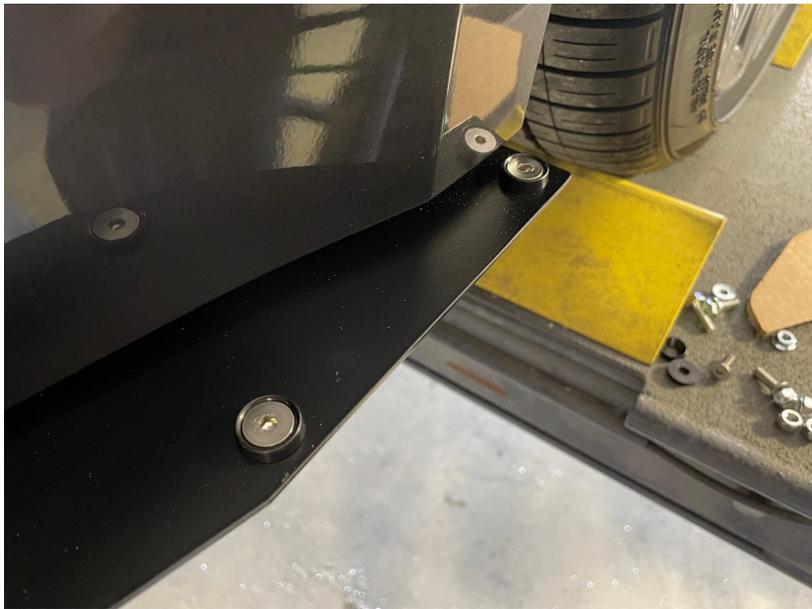

6.) If you don't have edge trim, skip to step 7.

If you have edge trim: clean the top edge of the side skirts with isopropyl alcohol. Apply the edge trim. Use light heat on the trim to increase flexibility around curves/edges. Cut to size with your diagonal cutters. The edge trim mounts on top and hangs over edges.

7.) You are done! Enjoy your new side skirt extensions! Feel free to tag us online using #FSPerformanceEngineering. If you have any questions don't hesitate to contact us.



PHONE: 661-809-0954

EMAIL: costas@fspeinc.com

THANK YOU :)