



## **FS Performance Engineering**

### Volkswagen MK7 (2015-17) Golf R Side Skirt Extension Installation Instructions

#### **Tools/items needed:**

- T25 (torx) wrench / socket + ratchet
- Short phillips head screw driver
- 1 or 2" heavy duty double-sided tape
- Cleaner for underside of rockerpanel

#### **Included in Kit (additional nuts/bolts may be left over):**

(2) Side skirt extensions - a pair

(2) 10mm spacers

(2) 5mm spacers

(2) Body screws 1-1/4" long

(2) Body screws 1" long




**Steps:**

1. Raise car and secure with jack stands (optional, we didn't do this).
2. Starting on the passenger side, identify and remove the three T25 bolts holding the rocker panel to the car. They can be found under the rocker panel.





3. Test fit the side skirt, you will be removing it later to install your double sided tape. Start at the rear. You will be using the holes you just exposed. Hold the skirt up to the rear hole with a 10mm spacer in between the side skirt and rocker panel. Install the longer (1-1/4") body screw with your phillips head screwdriver. Don't tighten much, only use it as a point to hold up the skirt.

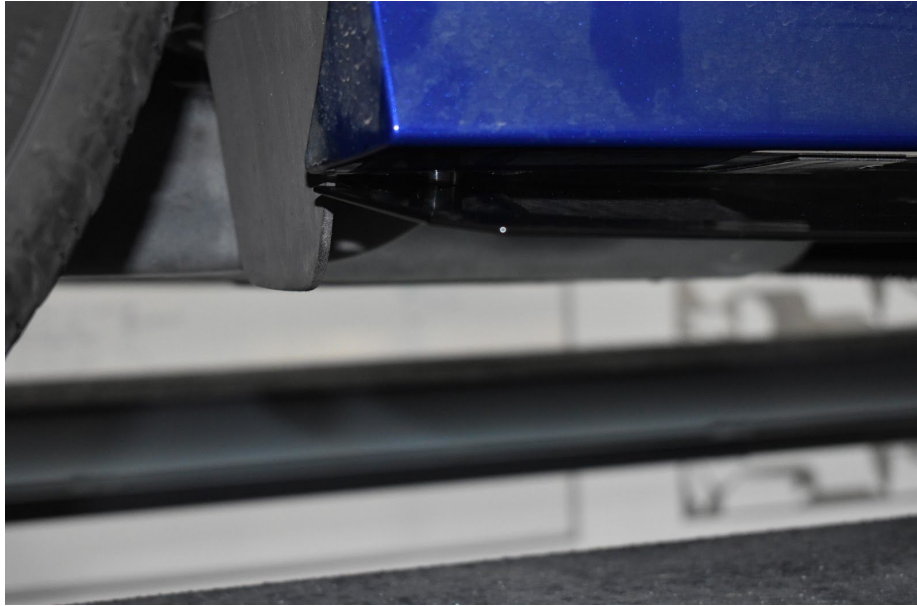

4. Install one of the T25 bolts you just removed into the second hole in the skirt/rockerpanel from the rear. Install the shorter (1") body screw into the 3rd hole from the rear with a 5mm spacer in between the side skirt and rocker panel. Again don't tighten much, only use them as points to hold up the skirt.



5. Identify where double sided tape is needed under the rocker panel based on where the skirt sits. Remove the side skirt, clean the underside of the rocker panel, and apply heavy duty double-sided tape to the rocker panel. We placed 2" wide tape in the areas that had little body screw support. We also added a lot more than what is seen in the pictures for extra support and we recommend you do as well (it was an afterthought)!





6. Reinstall your FSPE side skirts utilizing the heavy duty double-sided tape and enjoy!



For questions email [costas@fspeinc.com](mailto:costas@fspeinc.com) or [jim@fspeinc.com](mailto:jim@fspeinc.com)

Or call/text us at (661) 809-0954