


Remove 4 bolts and factory front Skidplate.




2. Remove 4 bolts and rear Engine Skid (if equipped).

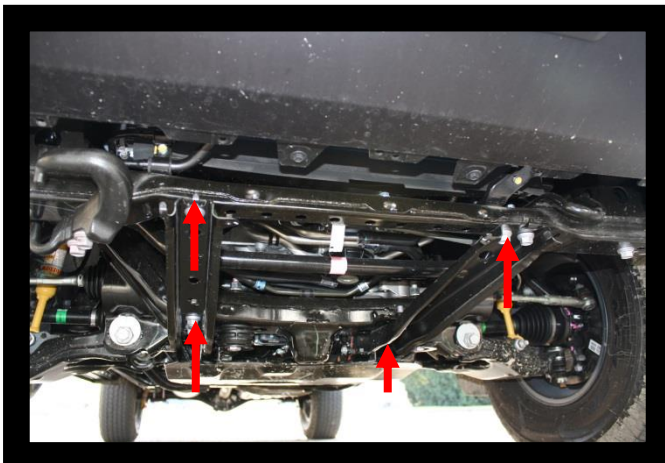


3. Remove Skid support brackets, save 2 factory bolts for installation of OKX Engine Skid.



4. Install OKX Engine Skid using 2 factory bolts and supplied M8x35mm bolts, washers & 3/8" spacers.

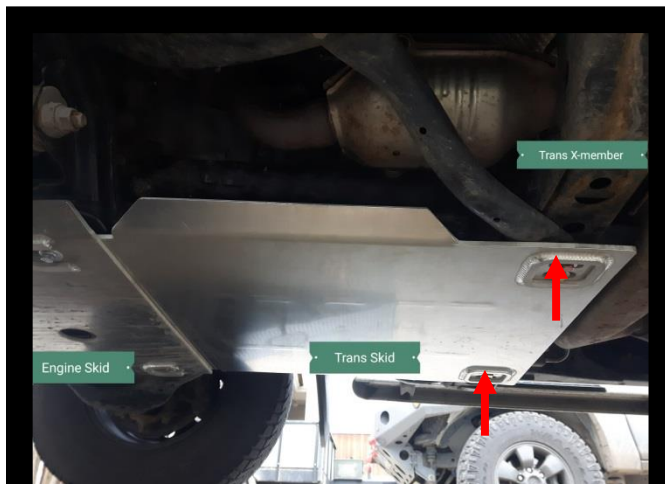

Remove 4 factory bolts from support bars. Install OKX Transmission Skid as shown, placing slotted spacers between Skid and support bar tabs.

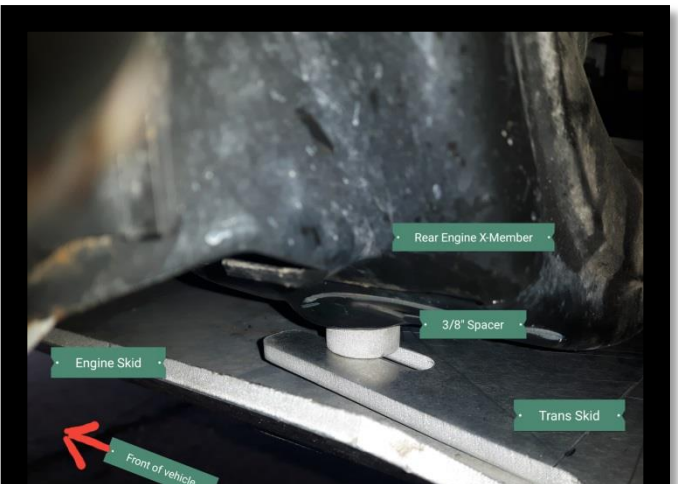

When installing OKX Transmission Skid, loosen rear Engine Skid bolts and slide Trans Skid between x-member and Engine Skid. Lift 3/8" spacer up to x-member.