


Heavy Duty Wagon Undercarriage Kit

Model #01728

Your wagon undercarriage kit requires assembly. If any parts are missing, damaged or if you have questions or need additional instructions. **DO NOT RETURN THIS PRODUCT TO THE RETAILER.** Call our Help Line at 1-519-669-4343 Monday through Friday 9:00 am - 5:00 pm EST for help.

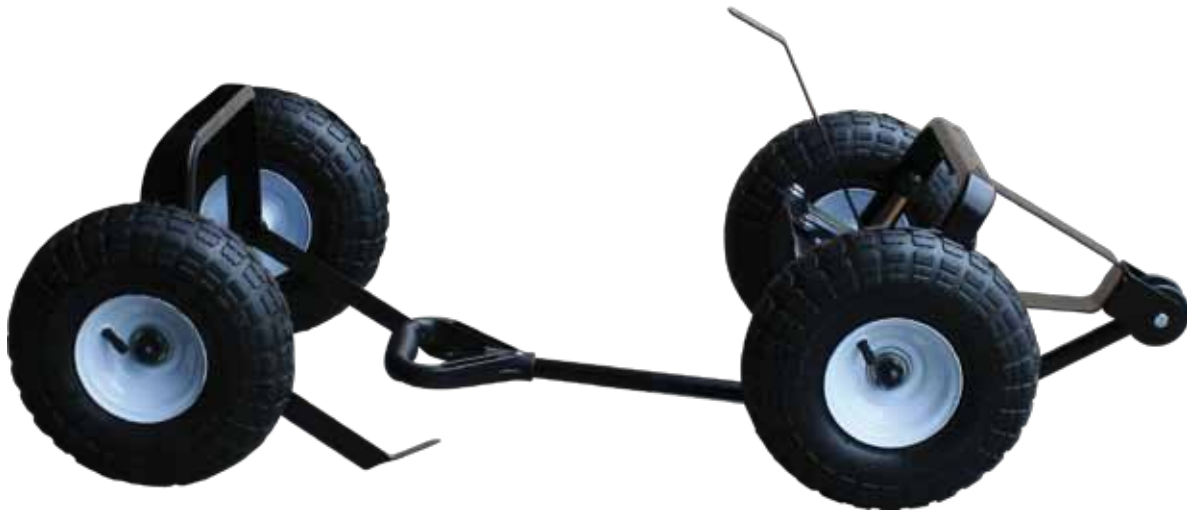

Step 1: Using the template, mark holes on your wagon deck, and drill the appropriate size holes (refer to drawing)

Step 2: Position your wagon undercarriage kit on top of the holes drilled into your wagon deck and insert bolts through deck and holes in wagon undercarriage gear. Place washer on bolt, screw nut onto bolt and hand tighten all bolts. Check that placement is correct, then tighten all nuts with wrench.

Millside
Industries Inc.



WARNING: Choking hazard; Contains small parts; Adult assembly required; Keep all small parts out of reach of children. Adult supervision required; Never use near steps, sloped driveways, hills, alleys, swimming pool areas; Always wear shoes, and never allow more than one rider. Use of a helmet recommended.

Wagon hole drilling diagram

Symbols diagram:

- 5/16" drilled hole size
- 1/4" drilled hole size

