




**INTERIOR  
DEPOT**

**ASSEMBLY INSTRUCTIONS**

# **BEDSTEAD**

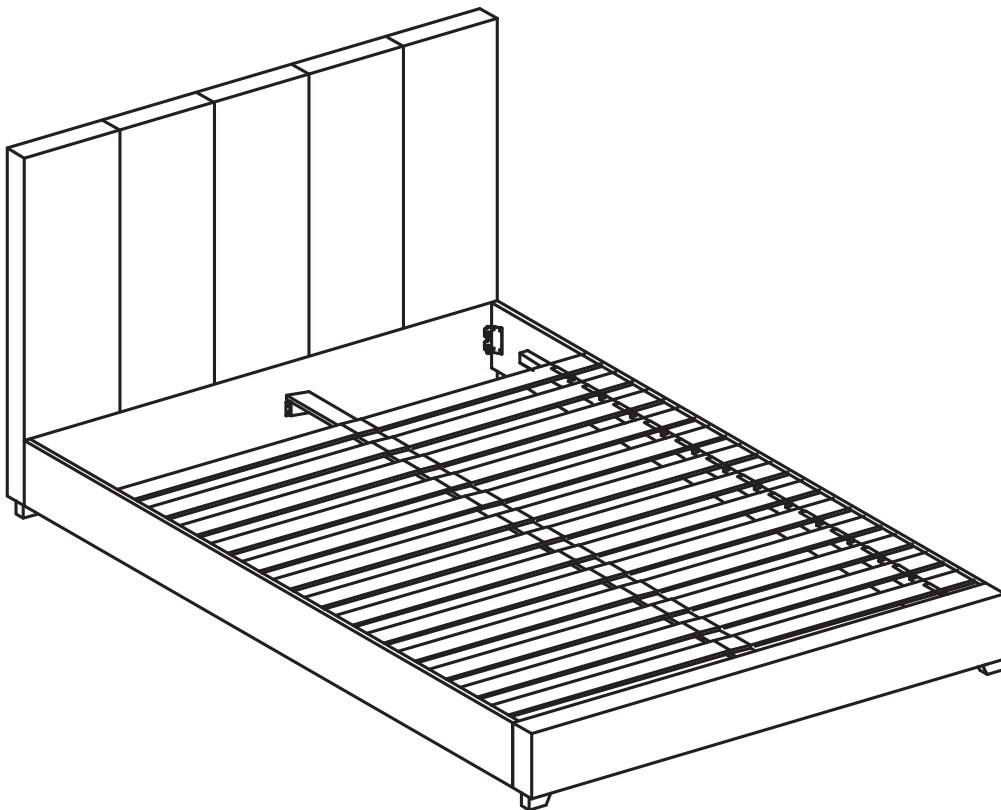

[www.interiordepot.co.uk](http://www.interiordepot.co.uk)

## Important before Assembly

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

It would be sensible to lay a rug or a carpet on the floor where you intend to assemble the product, to void scratches and damaging the product or the floor.

Assemble the product as close to its intended final location/ room as possible.

Do NOT use any power tools as this may damage the frame.

## Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.







DO NOT use this product unless all fixings are secured.

Please keep small parts out of reach of children.

Always use on a level, even surface.

Please keep these instructions for future reference.

## Parts List

Parts	Description	Qty
1	Headboard 	1
2	Footend 	1
3	Side Rail 	2
4	Legs 	4
5	Slat 	1 set
6	Centre Rail 	1

## Tools Required


You will need a 14mm Spanner  
or an Adjustable Spanner  
(Not provided)



## Step 1:

Attach the legs (4) to the headend (1) and footend (2).


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

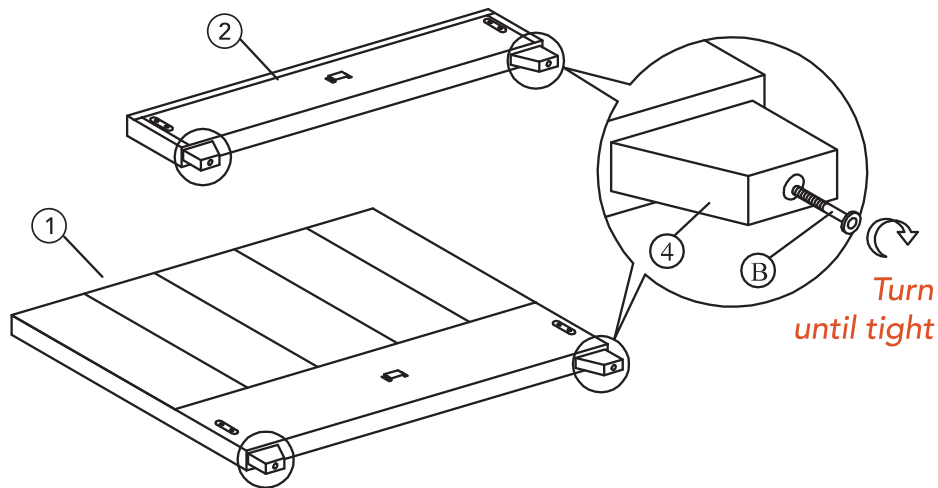

## Step 2:

Unscrew the screws on Headboard (1) and Footend (2). Attach the side rails (3) by pushing the brackets into place as shown. Ensure all 4 corners are aligned. Do NOT tighten until the slats have been placed.


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

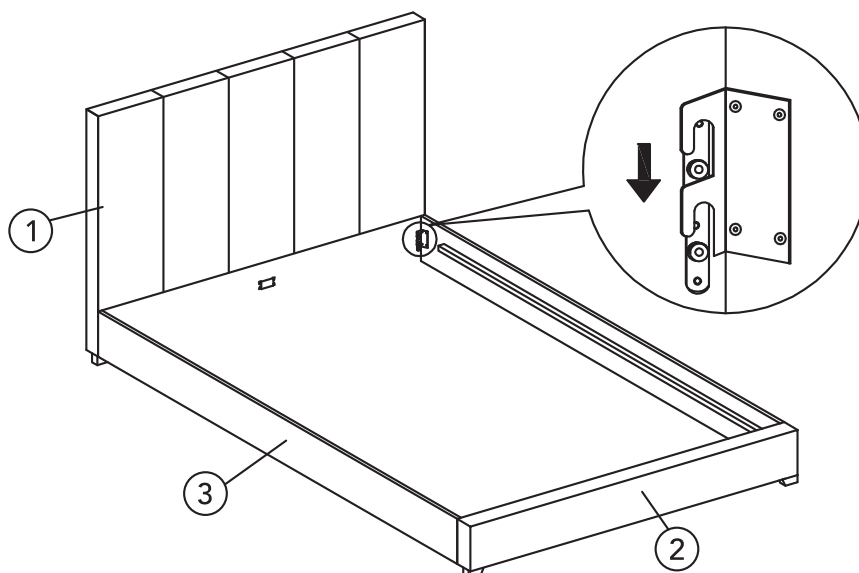

## Step 3:

Insert the centre rail (6) in the centre slots on Headboard (1) & Footend (2).


DO NOT use any power tools as this may damage the frame and will invalidate any claim.

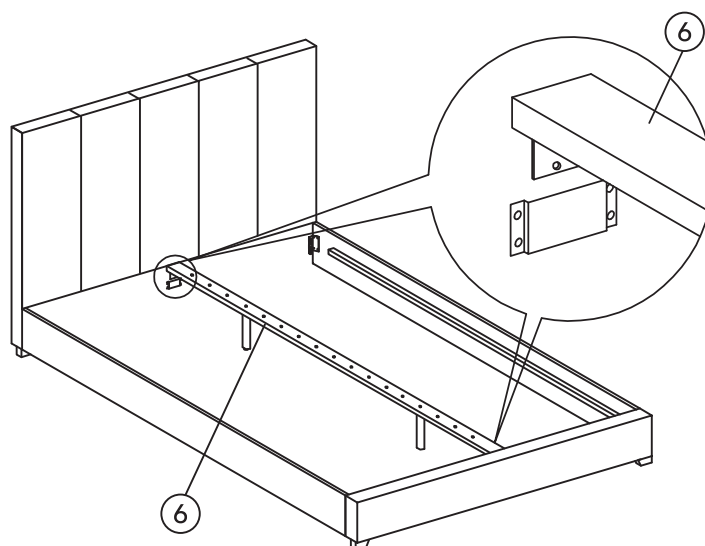

## Step 4:

Place the slats (5) as shown and tightened all 4 corner brackets with the 14mm spanner.

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

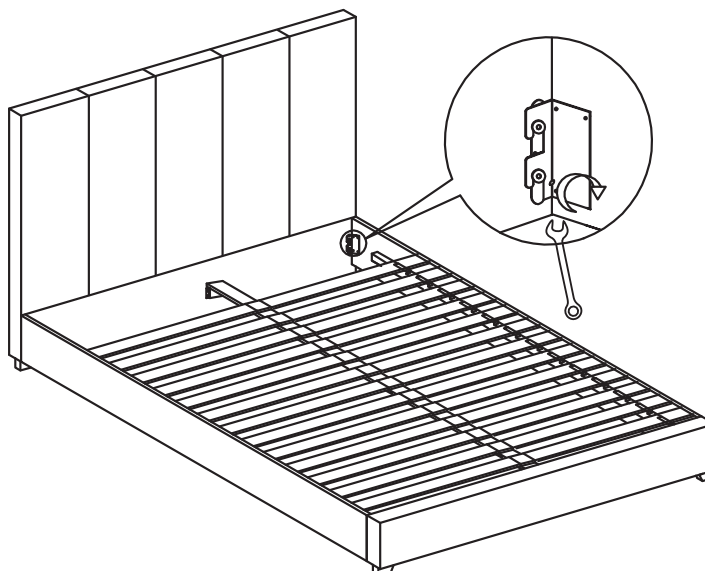

Please dispose of all packaging safely.

## General Care & Maintenance

Wipe clean with a slightly damp cloth.

Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

## Notes

We've tried to make this product as easy to assemble as possible. In the unlikely event that you have problems putting it together or have damaged or missing pieces, please contact us by visiting:  
[www.interiordepot.co.uk](http://www.interiordepot.co.uk)