




**INTERIOR
DEPOT**

ASSEMBLY INSTRUCTIONS

DIVAN BEDS

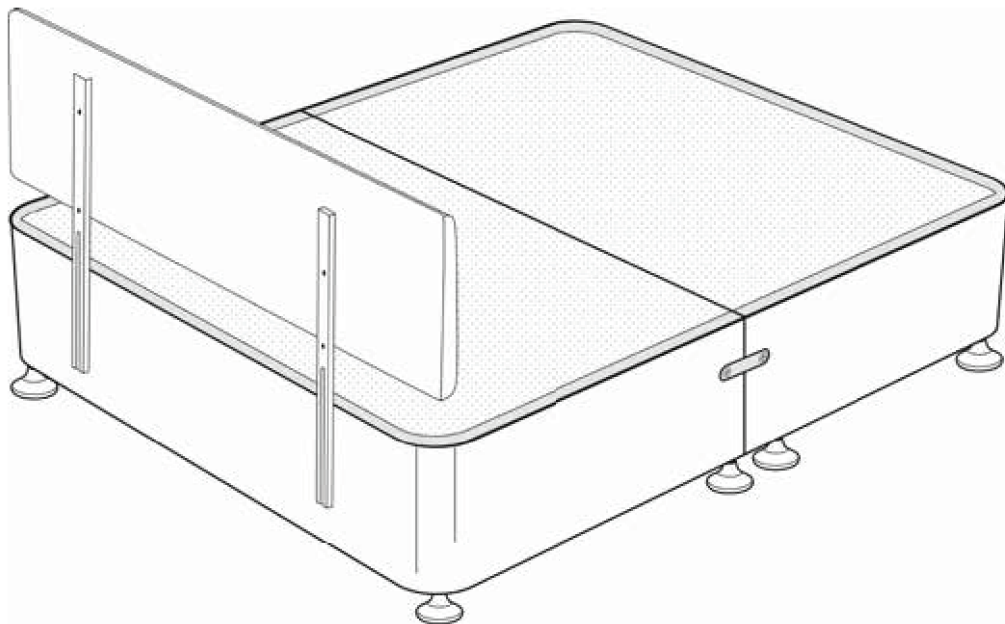

www.interiordepot.co.uk

Important before Assembly

Read these instructions carefully before assembling or using the product.

Please check the contents of the boxes before attempting to assemble this product. The instructions will have a checklist of parts and fittings.

It would be sensible to lay a rug or a carpet on the floor where you intend to assemble the product, to void scratches and damaging the product or the floor.

Assemble the product as close to its intended final location/ room as possible.

Do NOT use any power tools as this may damage the frame.

Health & Safety:

This product or some parts of this product will be heavy. Please use an assistant when lifting.

DO NOT jump on the product or any of its parts.

DO NOT use this product if any parts are missing, damaged or worn.

DO NOT use this product unless all fixings are secured.


Please keep small parts out of reach of children.

Always use on a level, even surface.

Please keep these instructions for future reference.


Parts & Fittings Check List

Divan Beds

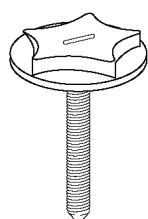


Headboard Bolts

2x

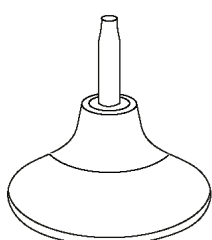


Glidors

8x

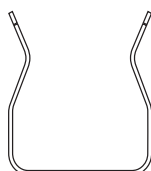

U-Clips

2x

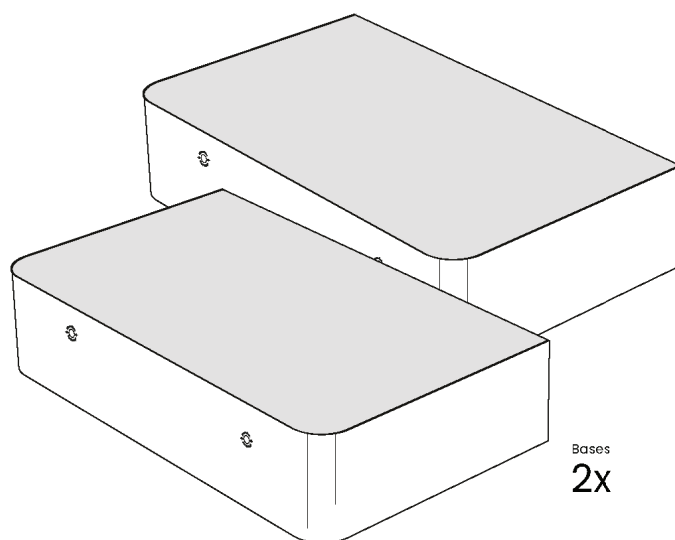


Bases

2x

Tools Required

These tools are not necessary, but may help to assemble certain parts of the product.

Do NOT use any power tools as this may damage the frame.

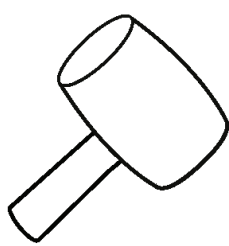




(Not metal)

Instructions:

1. Remove the outer packaging and cardboard corner protectors.
2. Locate which corners are straight and which are curved. Straight corners indicate where both of the bases will connect.
3. Locate the four pre-drilled holes at each corner of the bases.
4. Securely insert the eight (8) gliders into the bottom of the bases, each base requires four (4).


(Please Note: This may require the use of a blunt tool, such as a rubber mallet)

5. Carefully flip the bases so that they are now resting atop the gliders, firmly pressing down on each corner of the bases to ensure that they are stable.

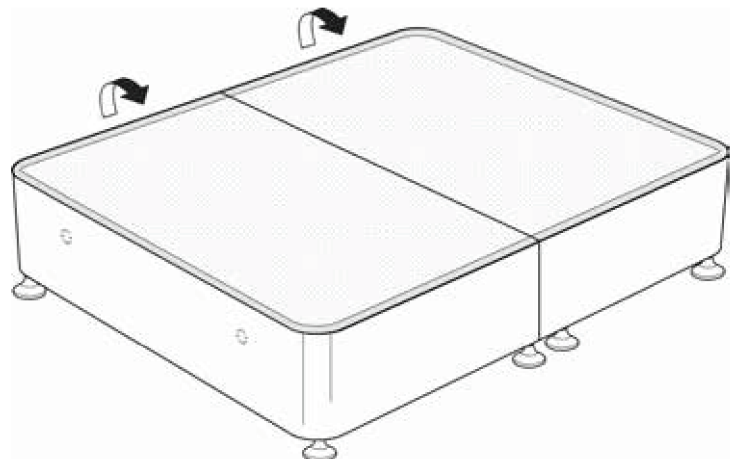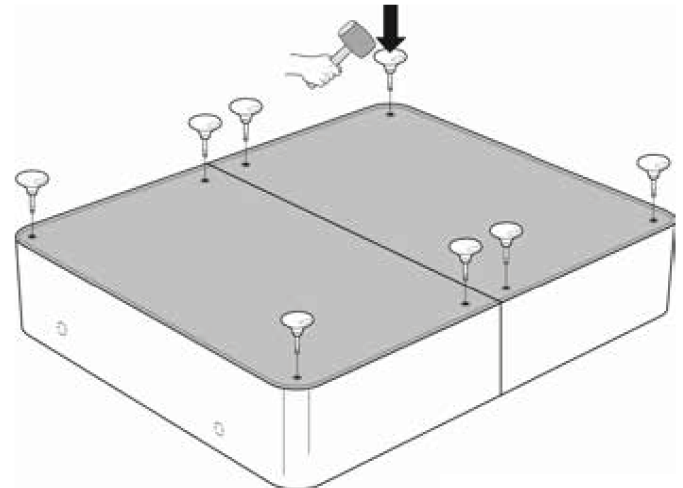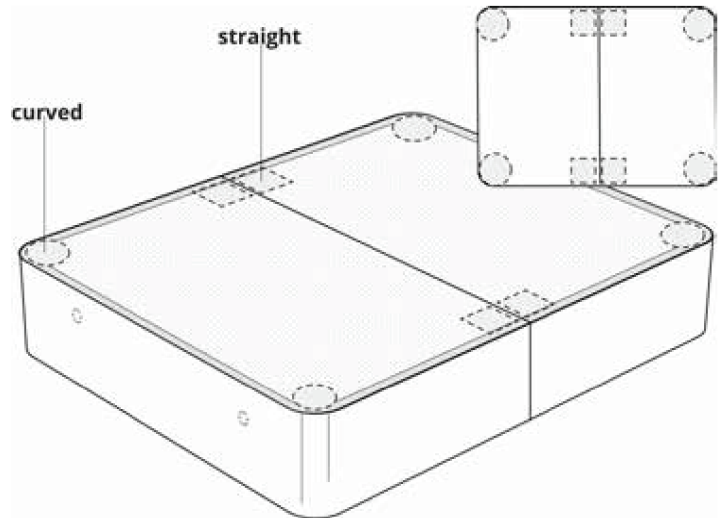



6. Push your bed bases together.

If your divan arrives in two sections or more, push them together, flat end to flat end, and secure them with two joining clips. Push down on the clips to fix them in place. Make sure the bed is properly pushed together and there are no gaps.

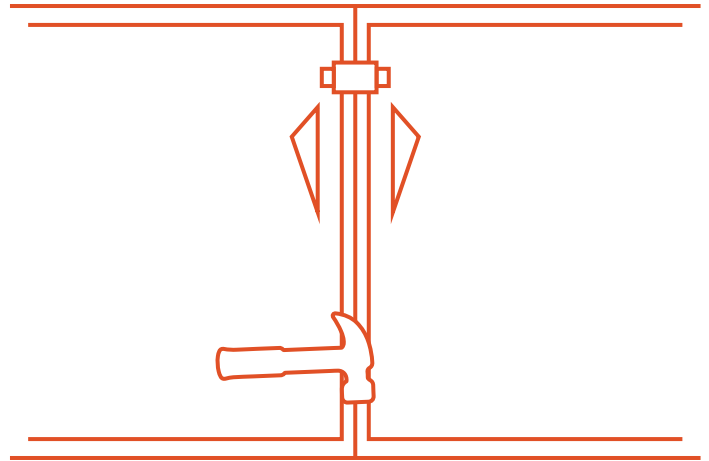

If you have a headboard to attach (or have an existing one)...


7. Locate the holes by gently running your fingers on the end of the base. Pierce the hole which is covered by fabric using sharp scissors or screwdriver. Ensure the holes are clear from fabric debris.
8. Press both headboard screws into the pierced holes until meeting resistance. Proceed to screw the headboard screws clockwise, leaving enough space for the headboard struts to fit into place.

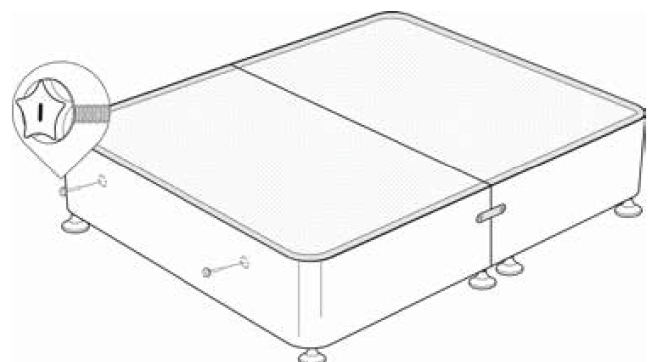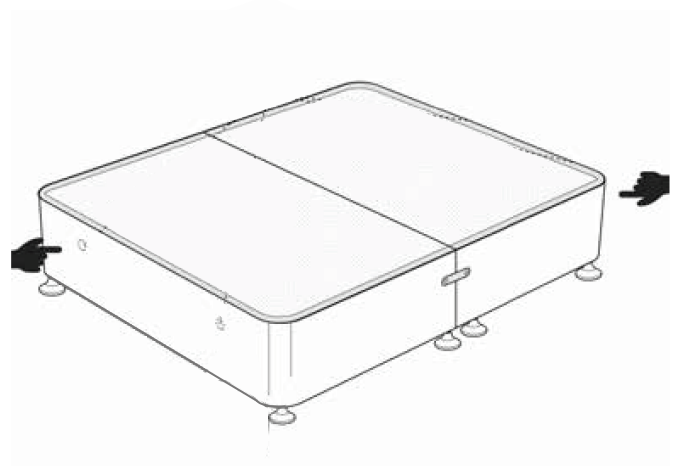

- Drop the headboard struts down over the headboard screws.

Once the headboard is at the desired height tighten the headboard screws until the headboard is locked in place.


For Floorstanding headboard thread through the screws from behind the headboard into the base.

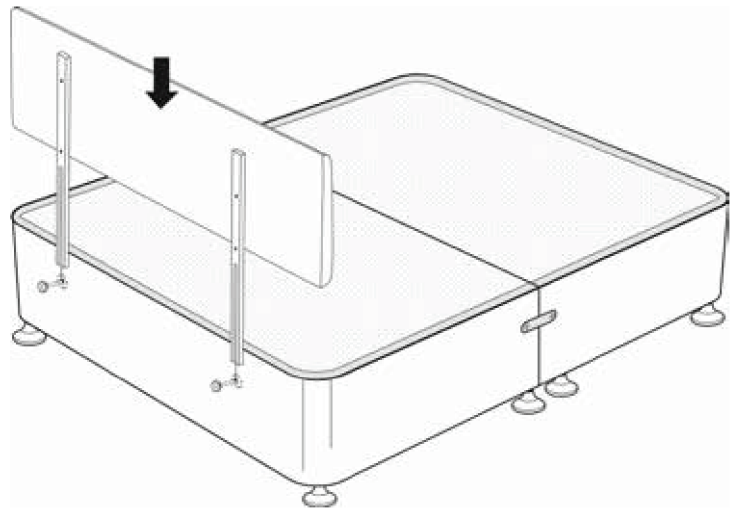

For Divan Beds with drawers


- The drawers are already installed within the Divan Bed base. Strips of fabric keep the drawers in place during transit and will need to be removed to allow access to the drawers. Remove these strips of fabric via pulling, tugging or cutting them off.

(Please Note: The strips of fabric are secured via staples, so please take care when removing them).

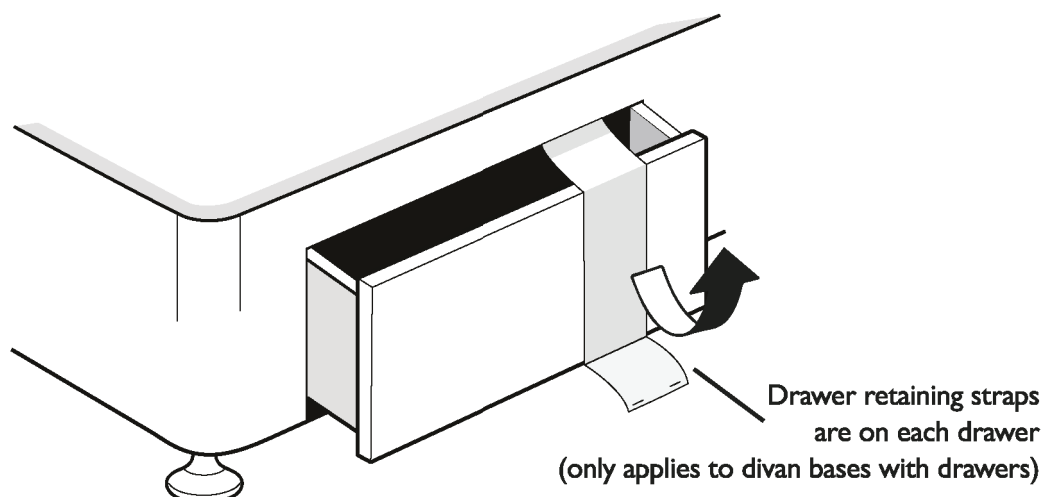

ASSEMBLY INSTRUCTIONS


DIVAN OTTOMAN BEDS

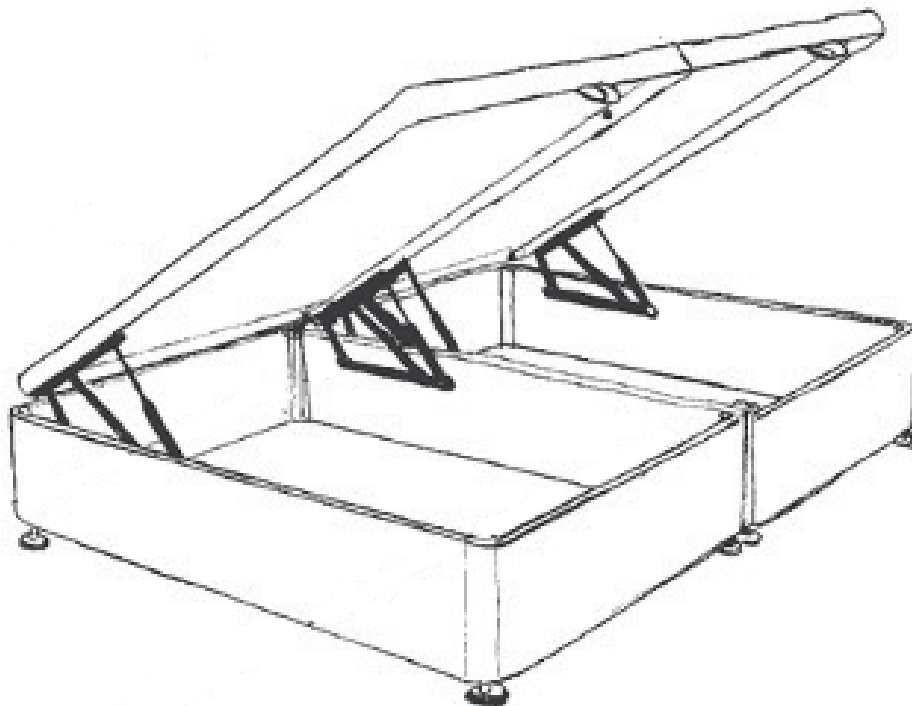

www.interiordepot.co.uk

Parts & Fittings Check List


Ottoman Divan Base

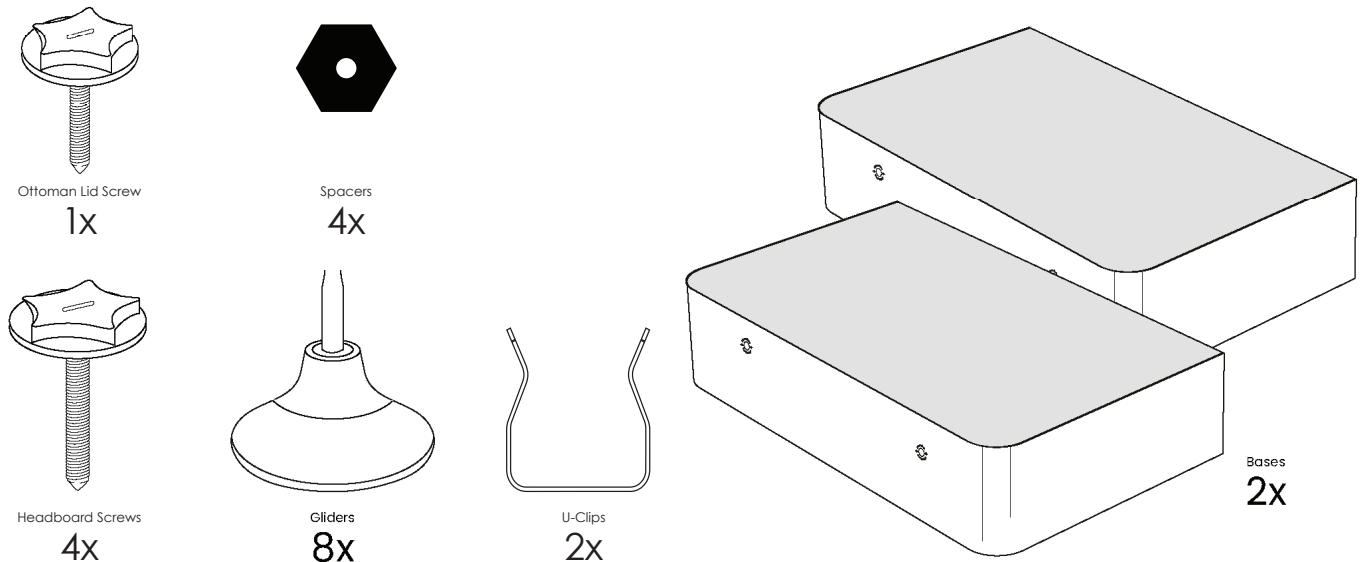

Tools Required

These tools are not necessary, but may help to assemble certain parts of the product.

Do NOT use any power tools as this may damage the frame.



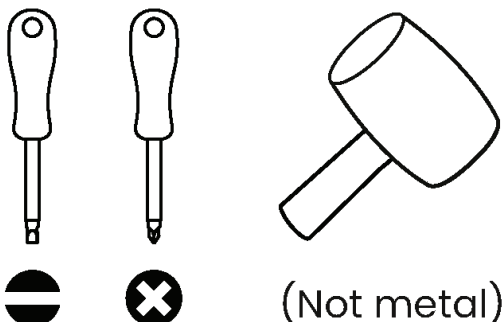


Instructions:

1. Remove the outer packaging and cardboard corner protectors.
2. Locate which corners are straight and which are curved. Straight corners indicate where both of the bases will connect.
3. Locate the four pre-drilled holes at each corner of the bases.
4. Securely insert the eight (8) gliders into the bottom of the bases, each base requires four (4).


(Please Note: This may require the use of a blunt tool, such as a rubber mallet)

5. Carefully flip the bases so that they are now resting atop the gliders, firmly pressing down on each corner of the bases to ensure that they are stable.

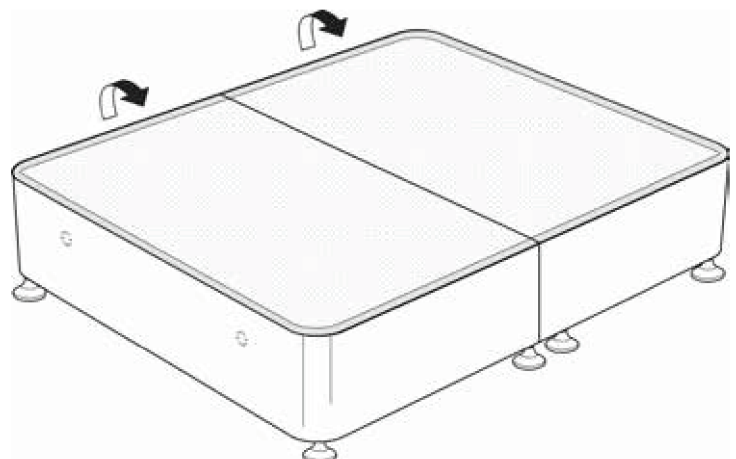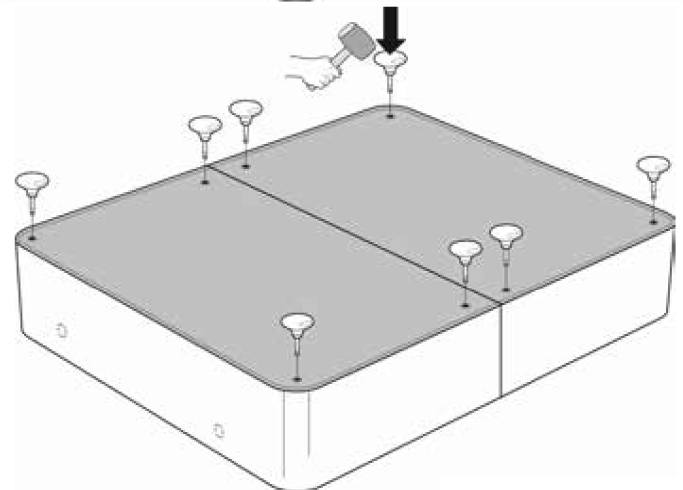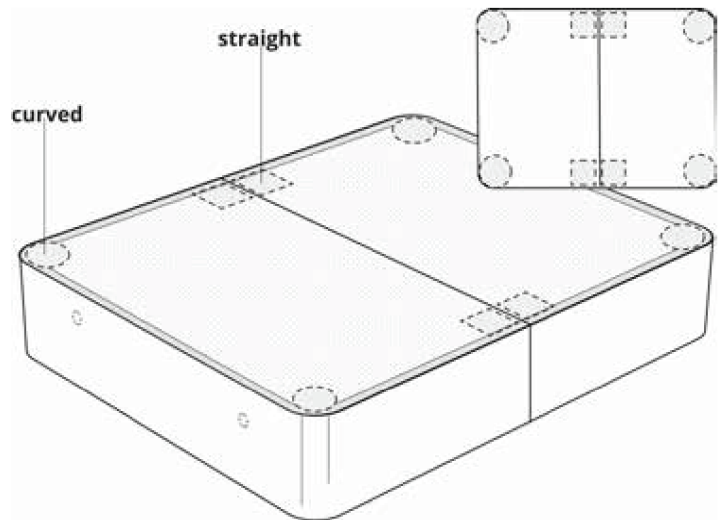



6. Push your bed bases together.

If your Ottoman divan arrives in two sections or more, push them together, flat end to flat end, and secure them with two joining clips. Push down on the clips to fix them in place. Make sure the bed is properly pushed together and there are no gaps.

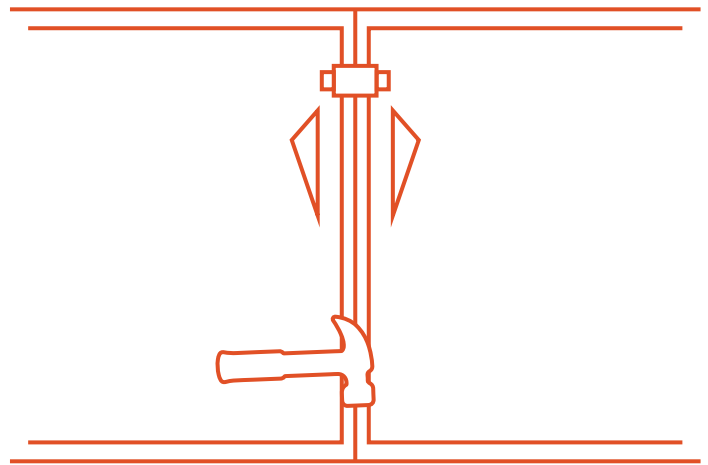


If you have a headboard to attach (or have an existing one)...

7. Locate the holes by gently running your fingers on the end of the base. Pierce the hole which is covered by fabric using sharp scissors or screwdriver. Ensure the holes are clear from fabric debris.
8. For Floorstanding headboard thread through the screws from behind the headboard into the base. Press headboard screws into the pierced holes until meeting resistance. Proceed to screw the headboard screws clockwise. For Side Opening Lift insert the spacers in between the Headboard Screw and the base. For End Opening Lift the spacers are optional. For a Headboard with struts, leave enough space for the headboard struts to fit into place.

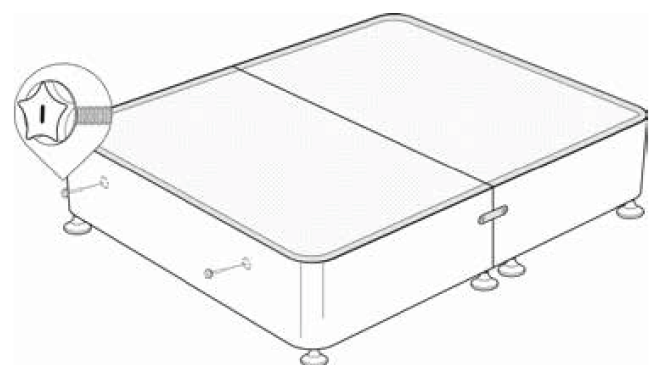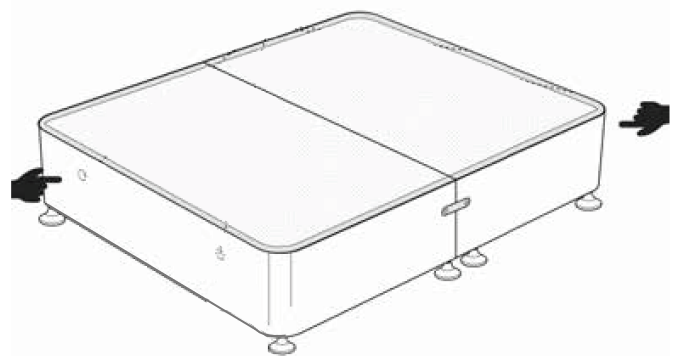

9. Drop the headboard struts down over the headboard screws.

Once the headboard is at the desired height tighten the headboard screws until the headboard is locked in place.

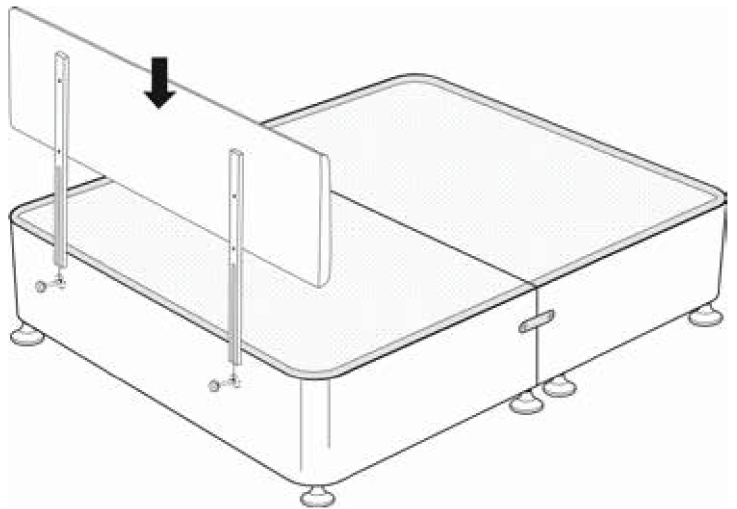

Please dispose of all packaging safely.

General Care & Maintenance

Wipe clean with a slightly damp cloth.

Avoid the use of all household cleaners and abrasives.

Periodically check all screw & fixings to ensure they are secure.

When moving your product, carefully lift into place. Never drag or push the pieces across the floor as this will cause damage to the joints and could result in failure to the product that will invalidate the warranty.

Notes

We've tried to make this product as easy to assemble as possible. In the unlikely event that you have problems putting it together or have damaged or missing pieces, please contact us by visiting:
www.interiordepot.co.uk