



REMOTE MONITORING AND CONTROL



# EASY SET UP

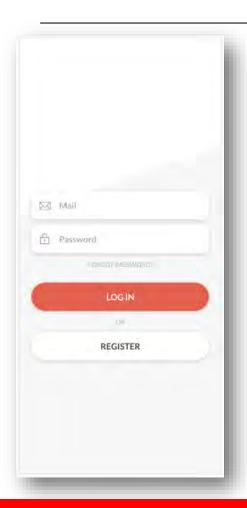


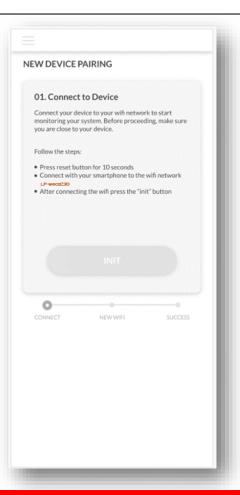

W DEVICE	PAIRING	
02. New Wi	ifi Connection	
	ou want to connect you ke sure you are close to	
WIFINETWOR	e.	
		~
WEI FESSAVER	10	
No.		
	CONNECT	
0	0	SALE



#### REAL TIME MONITORING

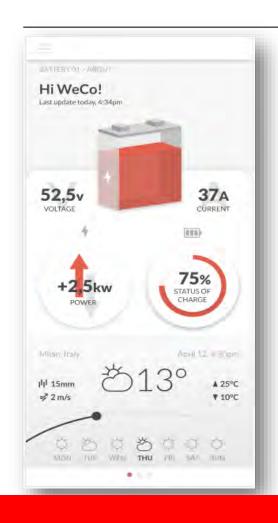









## PROTOCOL AND FIRMWARE

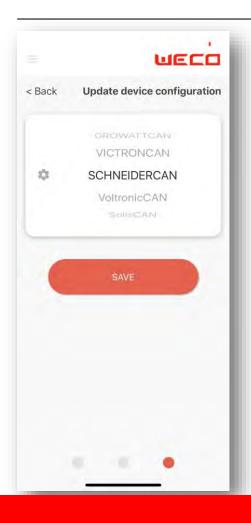




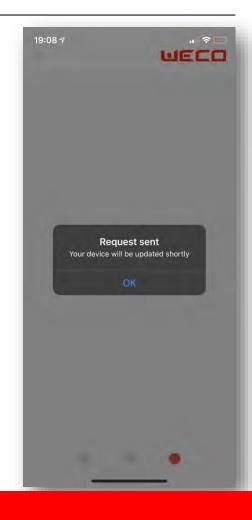




## CLUSTER MANAGEMENT

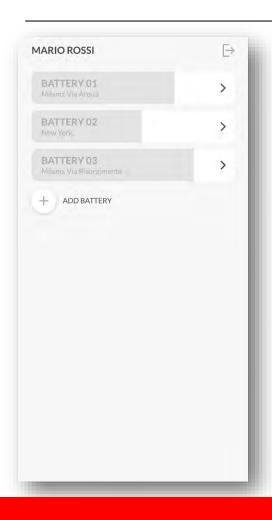





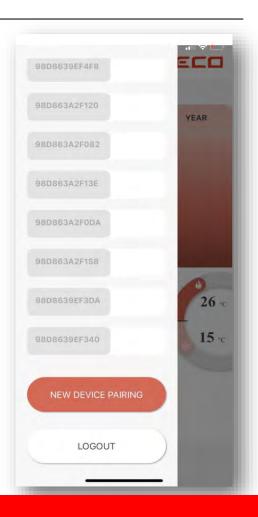



#### DETAILED INFORMATIONS

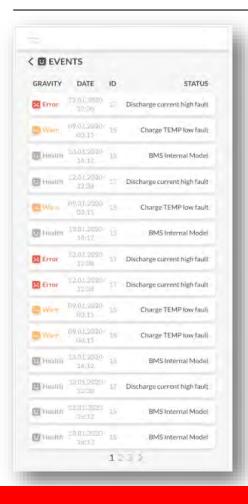

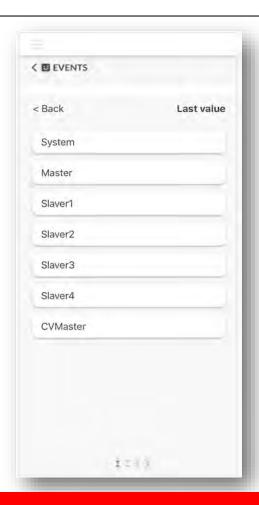

Back	CVMaster	
B11 - CellVolatage1 (V)	3.45	
B12 - CellVolatage2 (V)	3.45	
B13 - CellVolatage3 (V)	3.45	
B14 - CellVolatage4 (V)	3.45	
B15 - CellVolatage5 (V)	3.45	
B16 - CellVolatage6 (V)	3.45	
B17 - CellVolatage7 (V)	3.45	
B18 - CellVolatage8 (V)	3.45	
B19 - CellVolatage9 (V)	3.44	
B20 - CellVolatage10 (V)	3.44	
B21 - CellVolatage11 (V)	3.44	
B22 - CellVolatage12 (V)	3.45	
B23 - CellVolatage13 (V)	3.45	
B24 - CellVolatage14 (V)	3.45	
B25 - CellVolatage15 (V)	3.45	
826 - CellVolatage16 (V)	3.44	

