

INSTALLATION INSTRUCTIONS

JS JACKSONSUPPLIES






MATERIALS AND TOOLS NEEDED

Wrench or pliers, rags, thread seal tape

When using a wrench or pliers, always protect the finish by wrapping parts with a cloth.

HOW TO INSTALL:

1. Remove the existing shower head before installing the new shower arm.
2. Remove the old flange by using a screwdriver to carefully pry it away from the ceiling, and remove the old arm if there is one. (See fig. 1.)
3. Wrap the thread seal tape 4-5 times around the threads on one end of the arm in a clockwise direction. (See fig. 2.)
4. Screw the taped end of the shower arm into the plumbing connection inside of the ceiling and tighten it by hand at first, then wrap a cloth around the arm and use a wrench to tighten it more. This will prevent damage to the finish. (See fig. 3 & 4.)
5. Slide the new flange onto the arm and push it against the ceiling. (See fig. 5.)
6. Install showerhead according to manufacturer's instructions.

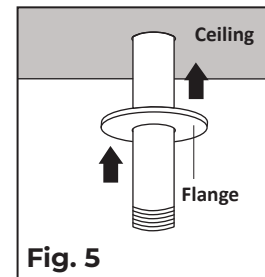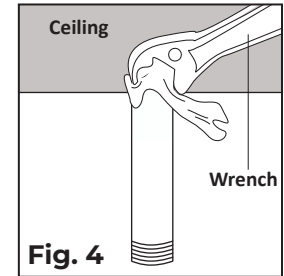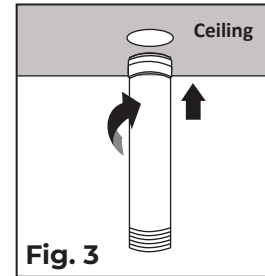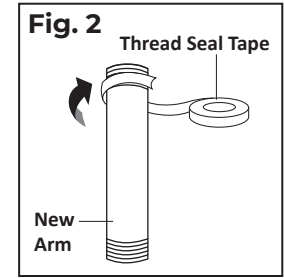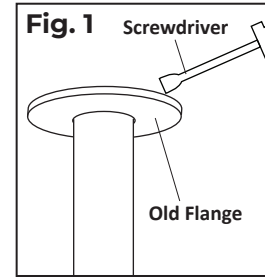

INSTRUCTION: 118544

utility-sink.com | support@utility-sink.com

We reserve the right to make revisions in the design and information without notice | Image is for reference only; style varies by model
SKU Numbers: 520JS2420CP, 520JS2420BN, 520JS2420BLK, 520JS2420ORB

ID: 14428
Rev. 07/07/2021