

# 12 IN L SHOWER ARM 520JS2413CP/BLK/ORB/SS

We take pride in our customer service and your satisfaction is very important to us. If you have any questions or problems please contact us at [help@jsupplies.com](mailto:help@jsupplies.com). Thank you for your business!

## CARE & UPKEEP

Thank you for purchasing our product. To clean, wipe with soft damp cloth, then wipe dry. Do not use abrasive or caustic cleansers as these types of cleansers could damage the finish.


## TOOLS NEEDED FOR INSTALLATION:

Read instructions thoroughly before installation!


This installation requires the following supplies: Wrench or pliers, screwdriver, rags, thread seal tape. When using wrench or pliers, always protect finishes by wrapping parts with a cloth.

## INSTALLATION INSTRUCTIONS


1. Remove old flange, using screwdriver to carefully pry away from wall.
2. Remove old arm by turning counter-clockwise with wrench.
3. Slide new flange onto arm. Wrap threads on wall end of arm with thread seal tape in a clockwise direction.
4. Screw taped end of arm into plumbing connection inside wall. Hand tighten.
5. Wrap arm with cloth to protect finish and wrench tighten.
6. Push flange against wall. Wrap threads of shower arm with tape, as explained above. Install new shower head and hand tighten.
7. Wrap a cloth around showerhead to protect finish and wrench tighten.




3



4



6

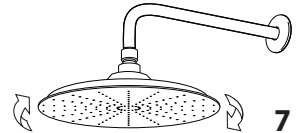

7