





SAFEDRIVE T-MOUNT INSTALLATION INSTRUCTIONS

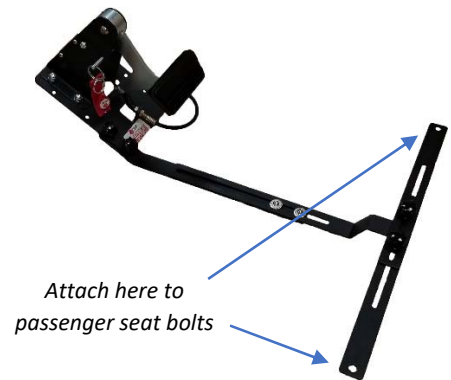

The T-Mount is an optional add-on to the SafeDrive Pro or SafeDrive Pro Plus to avoid the need to bolt the pedal system into the passenger side floor. The SafeDrive T-Mount is secured using the passenger side front seat bolts which attach the seat to the car. It is fully adjustable and is made with a thick enough steel to ensure stability and allow bending to shape for a custom install. The SafeDrive T-Mount connection points are already threaded to fit the included screws and hand bolts.

To install the SafeDrive T-Mount:

1. Remove the front bolts holding the front passenger car seat to the floor. Locate the two T-Mount parts that look exactly the same, these two parts make the top of the T. Slide the end with the hole in it under each seat attachment, threading the hole through the bolt. Then hand tighten the seat bolt down.
2. Slide the base of the T under the two parts making the top of the T. Attach it using hand screws or chrome screws, with washers. Hand tighten.
3. Attach the left or right side of the SafeDrive Pro or Pro Plus to the T-Mount per your preference. It is pictured here attached to the left side. Hand tighten.

<p>1. Remove seat bolts, slide the top of the T under seat attachment, replace bolt.</p>	<p>2. Slide the leg of the T under the top of the two T parts which were installed to the seat bolts.</p>	<p>3. Attach the T-Mount base under the SafeDrive using included screws or hand bolts.</p>
		

Attach the parts making up the leg of the T and adjust length accordingly. Once everything is positioned, tighten all parts down firmly, including the seat bolts.

To allow for adjustment of the SafeDrive Pro to the left or right, use the included hand nuts to tighten the base of the T to the top of the T (Picture 2). Loosen/tighten these nuts and slide the SafeDrive pedal(s) left or right to the preferred location.