


SAFEDRIVE SCREWLESS T-MOUNT INSTALLATION INSTRUCTIONS

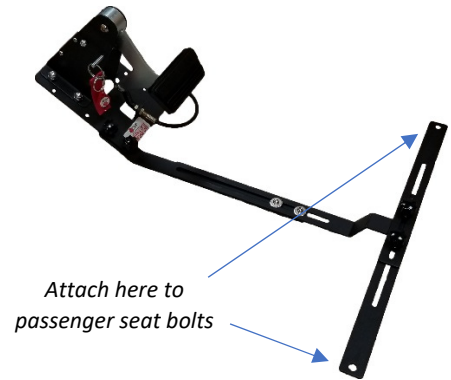




*This picture shows the T-Mount modified with bends for a custom fit



The T-Mount is an optional add-on to the SAFEDRIVE Pro or SAFEDRIVE Pro Plus to avoid the need to bolt the pedal system into the passenger side floor. The SAFEDRIVE T-Mount is secured by utilizing the passenger side seat bolts attaching the seat to the car. It is fully adjustable and made with thick enough steel to ensure stability and allow bending to shape for a custom install. The SAFEDRIVE T-Mount bars are pre-threaded to fit the included screws and hand bolts

To install the SAFEDRIVE T-Mount:

1. Remove the front bolts holding the front passenger car seat to the floor. Locate the two T-Mount bars that look the same, these two bars make the top of the T. Slide the end of the bar with the hole in it under each seat attachment. Lastly, replace the seat bolt being sure to thread the bolt through the hole in the T-Mount bar.
2. Slide the base of the T under the two bars making the top of the T. Attach it using hand screws (if you intend to adjust the position of the pedal in the future) or chrome screws, with washers. Hand tighten.
3. Attach the left or right side of the SAFEDRIVE Pro or Pro Plus to the T-Mount per your preference. The photo above shows the T-Mount installed to the left side of the pedal. Hand tighten

1. Remove seat bolts, slide the top of the T under seat attachment, replace bolt	2. Slide the leg of the T under the top of the two T bars which were installed to the seat bolts	3. Attach the T-Mount base under the SAFEDRIVE using included screws or hand bolts
		

Attach the parts making up the leg of the T and adjust the length so the pedal rests on the foot-well of the vehicle. Tighten all the parts down using the included allen wrench once everything is positioned to your preferences. Don't forget the seat bolts.

To allow for adjustment of the SAFEDRIVE pedal to the left or right, use the included hand nuts to tighten the base of the T to the top of the T (Picture 2). Loosen/tighten these nuts to slide the SAFEDRIVE pedal left or right to the preferred location.