



SAFEDRIVE TURN SIGNAL STICK INSTALLATION INSTRUCTIONS


Installation Steps:

1. Disassemble the clamp into two halves by removing the two screws using the provided allen wrench. Note there are two sets of screws included.
2. Position the two halves of the clamp around your turn signal handle below the point where any switches or rotational controls are. The screws should be facing you and the hole for the SAFEDRIVE signal arm should face up.
3. Choose one of the three different size rubber inserts provided until the two halves fit around the turn signal handle while leaving a small gap between the two halves of the clamp.
4. Screw the two halves of the clamp together using the appropriate length screws. Tighten firmly so the clamp does not slip but do not over-tighten as you may crush the turn signal arm.
5. Place the SAFEDRIVE signal arm into the hole on top of the clamp and tighten the set screw behind the clamp.
6. If necessary, bend the SAFEDRIVE signal arm as needed to set level. Remove the SAFEDRIVE signal arm before bending or damage to the clamp or vehicles turn signal may result.

STEP 2 – Position clamp below controls on the turn signal



STEP 5 – Install SAFEDRIVE signal arm and tighten set screw

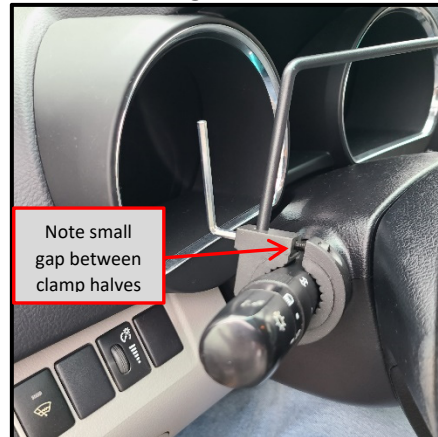

STEP 6 – Check SAFEDRIVE signal arm for level, bend as necessary



Troubleshooting:

Some turn signal levers trigger with a light touch. If you are having issues with the clamp weight causing your turn signal to activate, try moving the clamp farther up or down the vehicles signal lever arm. If issues persist, please contact us at support@gosafedrive.com or call support at 708-683-7618 M-F between 8:00 AM - 5:00 PM CDT.