

ALBANY PARK


A COZY HOME BEGINS HERE

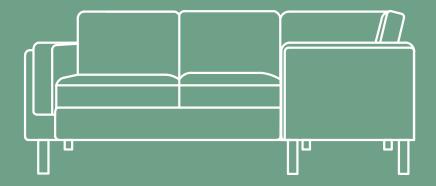


Cornerseat Assembly Instructions


1 x Box 2



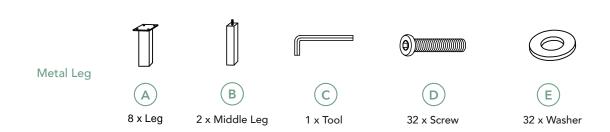

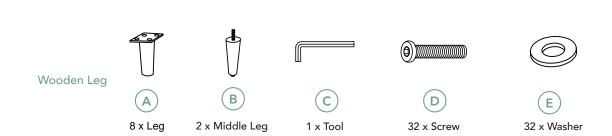

Step 1 Step 2

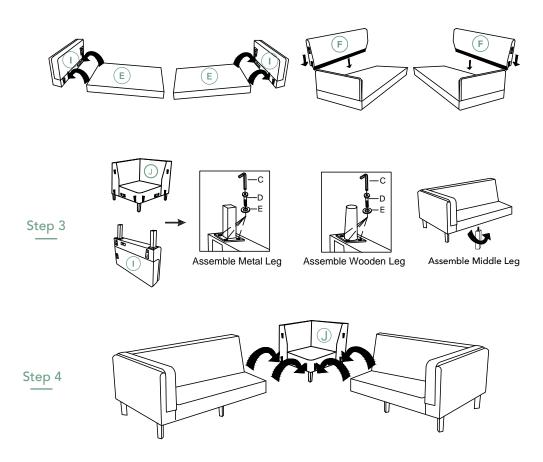



Pro Tip: Double check that the back (F) is properly aligned within the arm (I) brackets before pushing the back down firmly to lock. If the arm appears to be bow outward or does not appear to be fully secured, please repeat Step 2 until all 4 brackets are aligned properly, then push down firmly to lock!

