
QUICK AND EASY INSTALLATION: CLIP - DRILL - TURN - SCREW

Thank you for trusting the new FLEXCLIP $^{\text{TM}}$ 2.0 from LAPIERRE. This second generation still benefits from clever ease of installation, along with new attributes that enhance its stability and waterproofing.

- The FLEXCLIP[™] 2.0 is suitable for most 1-inch diameter polyethylene and (HD) collector pipes available on the market.
- The sealing material of the FLEX-CLIP[™] 2.0 is made from antibacterial, high-performance, waterproof, and durable silicone.

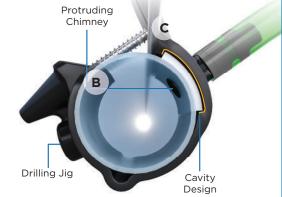

Developed with



INSTALLATION METHOD

- Using a cloth, clean the surface of the mainline where the FLEXClip[™] 2.0 will be located.
- CLIP the FLEXClip[™] 2.0 onto the collector, making sure that the groove (A) used for positioning the drilling template is correctly inserted on 9 gage wire.
- 3. DRILL through the collector wall using the integrated drilling template hole (B) on the FLEXClip™ 2.0. Use a sharp 5/16 steel bit. Drill only through the first layer of the mainline.
- **4. TURN** in the indicated direction so that the protruding chimney (C) fits into the drilled hole of the mainline. The "click" sound indicates the final placement of the FLEXClip™ 2.0.
- **5. SCREW** in the provided 1/4 screw until the stopper (D) makes contact with the collector pipe. You will feel resistance, indicating proper tightening. **Avoid over-tightening.**
- **6.** Insert the lateral line beyond the 2 barbs up to the fitting shoulder.













WHAT YOU NEED FOR THE INSTALLATION OF FLEXCLIP™ 2.0:

- A drill
- A 5/16 steel bit
- A 1/4 turn screwdriver or socket screwdriver

www.elapierre.com