

ASSEMBLY INSTRUCTIONS FOR THE FULL SIZE BED OPTION OF YOUR 301 CONVERTIBLE CRIB

(PLEASE REFER TO "ASSEMBLY INSTRUCTIONS FOR YOUR 301 CONVERTIBLE CRIB")

(CKC 301n VERSION)



this picture shows how your bed
should look like after completing assembly

NOTE: THE STYLE OF YOUR BED MAY
VARY FROM WHAT IS PICTURED IN THE
INSTRUCTION SHEET

DO NOT THROW AWAY
THIS INSTRUCTION
BOOKLET.

IMPORTANT:
PLEASE, READ ALL INSTRUCTIONS
BEFORE ASSEMBLING!
PLEASE, SAVE INSTRUCTIONS FOR
FUTURE USE

Romina®
Furniture

20 Corporation Row, Edison, NJ 08817
Phone (718) 478 5100, Fax (718) 478 5117
www.rominakidsfurniture.com

Please locate and confirm that you have the following parts:




BR. bed rails = 2
SL. group of support slats assembled with textile ribbons = 2

one bag of hardware with the following:

1. wood screw (1 3/8" or 35 mm) = 8
2. Allen bolts (2 3/4" or 70 mm) = 4
3. barrel nuts = 4
4. Allen wrench = 1

Required tools: Allen wrench (supplied), Phillips screwdriver (not supplied).

CAUTION: Do not use a power screwdriver which can cause screws to break or strip

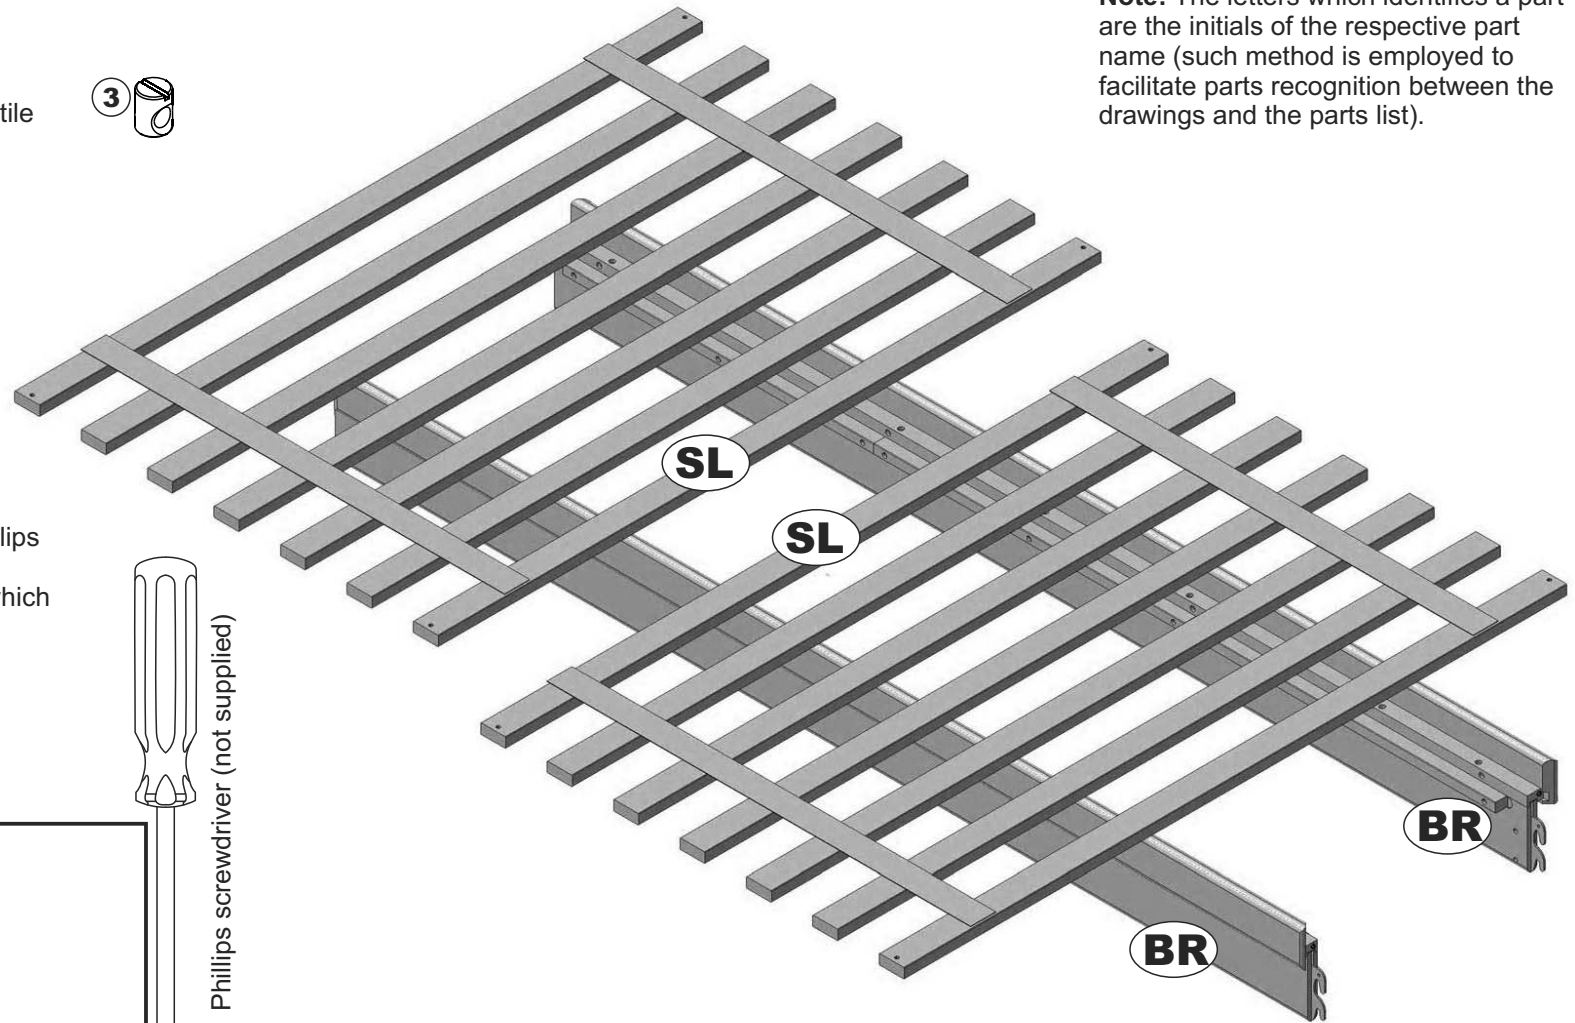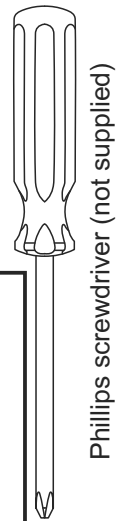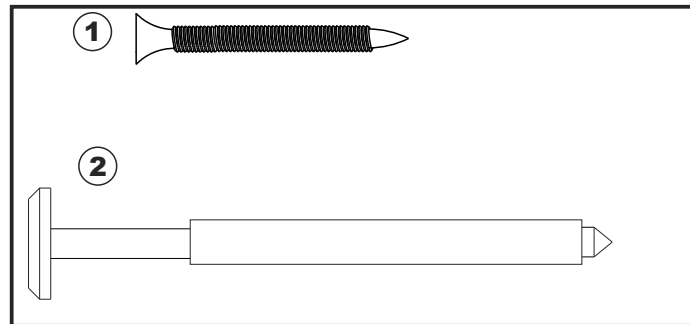

Note: The letters which identifies a part are the initials of the respective part name (such method is employed to facilitate parts recognition between the drawings and the parts list).

Be sure to **TIGHTEN COMPLETELY** the screws / bolts when you are asked to do so.



Note:
The item number of your product is located on a black and white label. Please, refer to this number in the event that you need to call ROMINA FURNITURE or your local distributor.
Thank you.

STEP 1 (Two adults are required to complete this step)

Using the supplied Allen wrench, remove all the four Allen bolts **(1)** used to fix the mattress support **(M)** then remove the mattress support and the wooden blocks **(6)** (see **STEP 6 & FIGURE 6** from “**ASSEMBLY INSTRUCTIONS FOR YOUR 301 CONVERTIBLE CRIB**”).

Using the supplied Allen wrench, remove all the ten Allen bolts **(2)** used to fix the headboard and the footboard **(B) & (F)** (see **STEP 2 & 3 & FIGURE 2 & 3** from “**ASSEMBLY INSTRUCTIONS FOR YOUR 301 CONVERTIBLE CRIB**”).

Keep the footboard and the headboard of your crib for the next step and carefully store the other resulted pieces in a proper place, away from direct sunlight and moisture, taking care not to scratch the wood finish.

STEP 2 (Two adults are required to complete this step)

Attach the bed rails **(BR)** to the headboard **(HB)** of the crib using all the four Allen bolts **(2)** and all the four barrel nuts **(3)**. Make sure that the wood brackets attached to the bed rails faces towards the inside of the bed.

Align the straight slots in the head of the barrel nuts horizontally, so the threads in the bolts will insert in the barrel nuts. You can adjust the position of the barrel nut with a flat head screwdriver (not supplied) or a coin.

Push the Allen bolts through the headboard and into the bed rail. Start the threads by hand to assure you don't strip the threads, then, use the supplied Allen wrench **(4)**.

Do not tighten the bolts completely at this step, you will be asked to do that later.

STEP 3

Insert the metallic hooks attached at the ends of the bed rails into the slots provided in the footboard's legs, so the hooks will catch the inner metallic pins. Make sure that both bed rails are firmly attached to the footboard **(FB)**.

Tighten completely all the four Allen bolts.

STEP 4



Place the support slats **(SL)** onto the wood brackets attached to the bed rails. Position the support slats evenly between the bed ends. Make sure you firmly attach the support slats to the wood brackets using all the eight wood screws **(1)** provided. Use a Phillips screwdriver (not supplied) to **tighten the screws completely**.

After completing **STEP 4**, your bed should look like the one depicted on the first page of this instruction booklet.

Regular cleaning with mild soap on a soft cloth, followed by a clean damp cloth, then a dry cloth, will preserve the original luster and beauty of this fine finish of your Romina Furniture product.

Visit
www.rominakidsfurniture.com
for updates, special offers and more new designs.

WARNING!
TIGHTEN COMPLETELY!

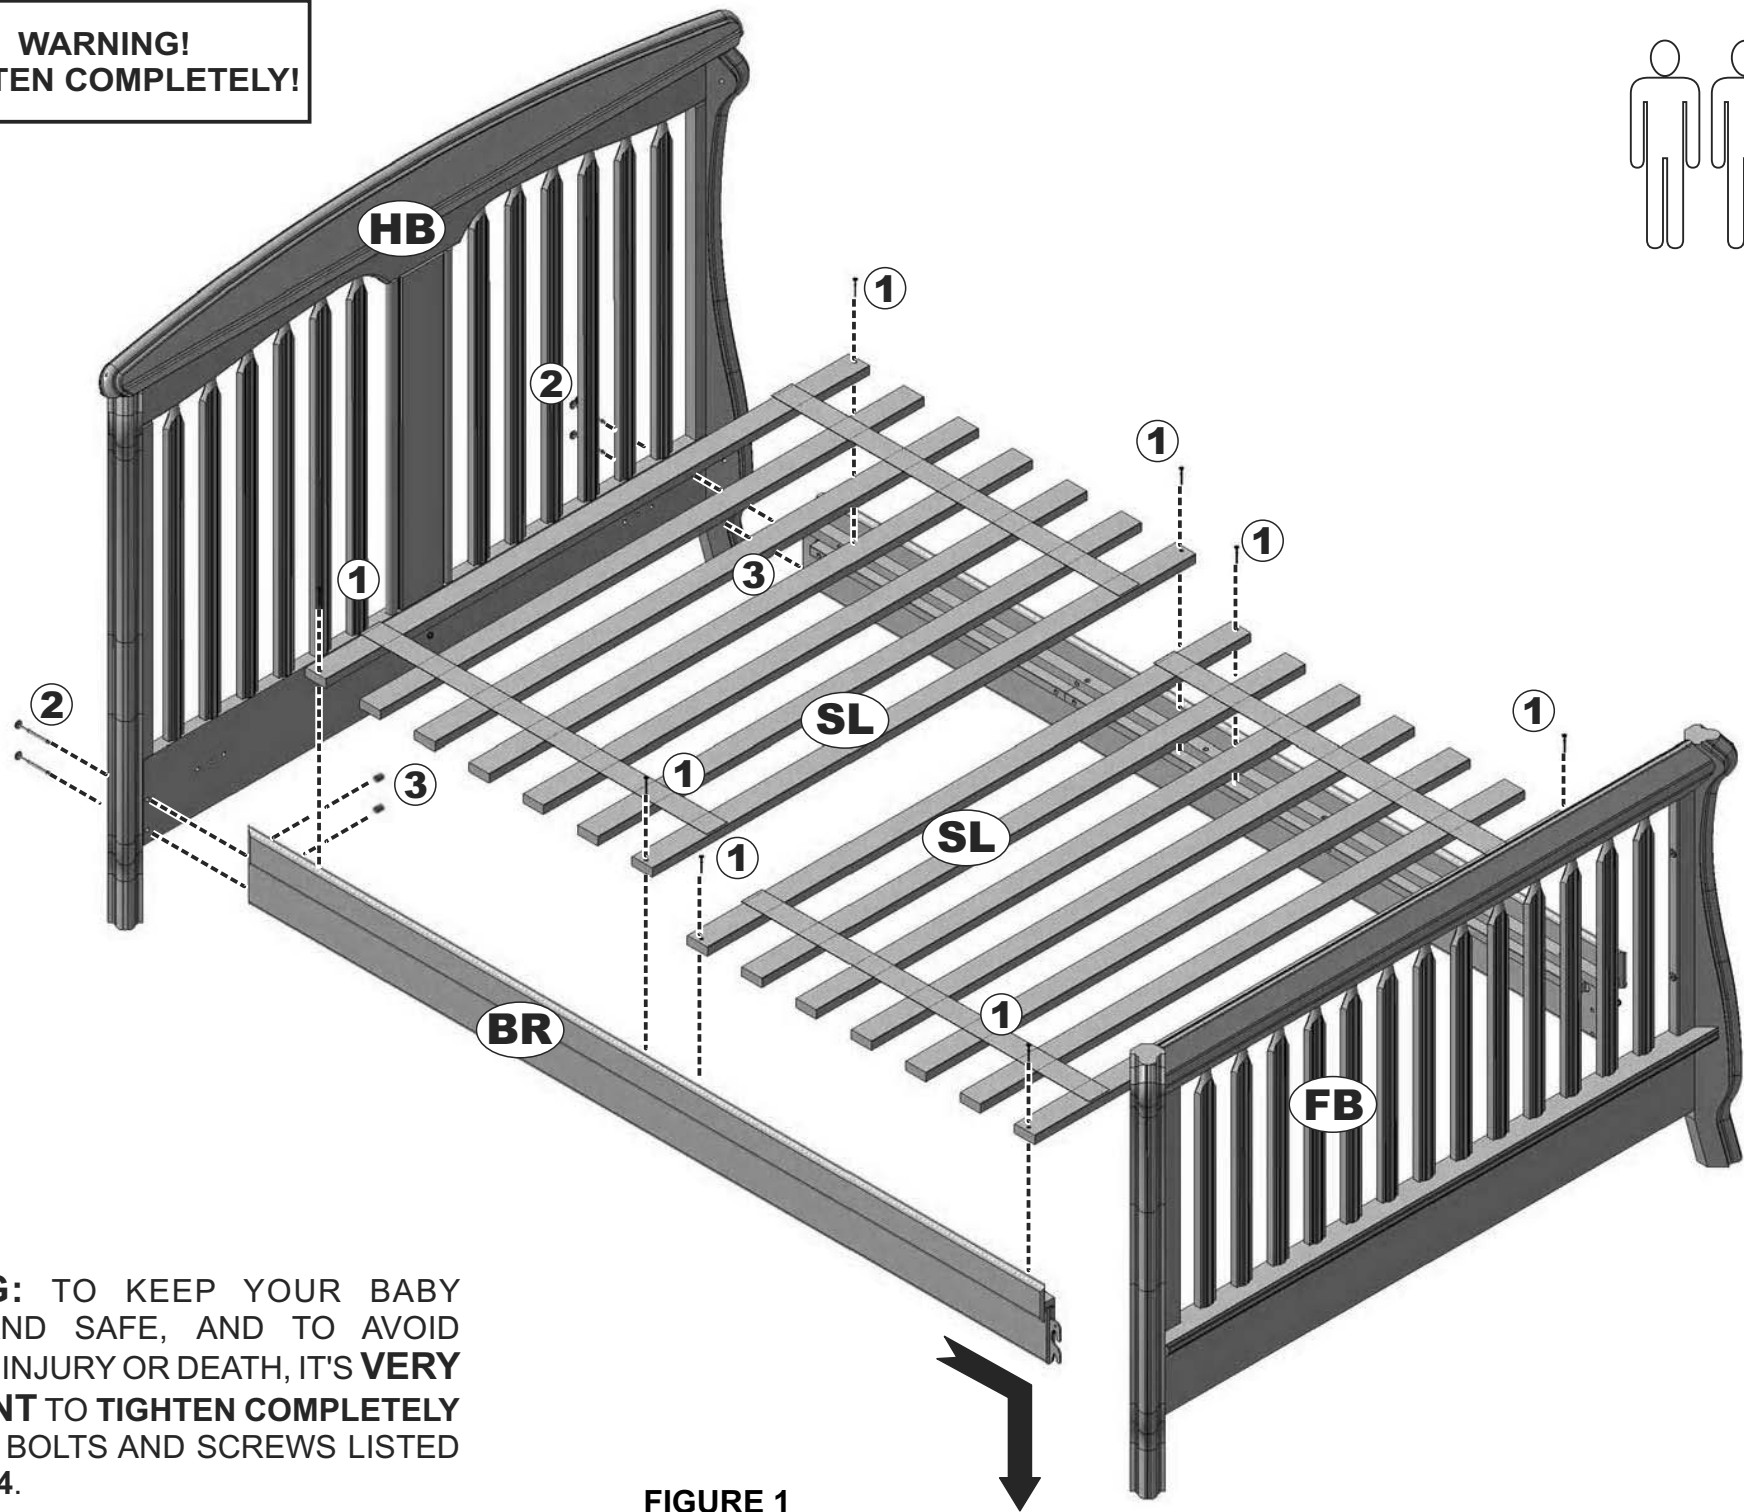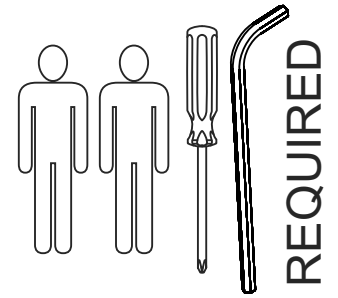

WARNING: TO KEEP YOUR BABY SECURE AND SAFE, AND TO AVOID POTENTIAL INJURY OR DEATH, IT'S **VERY IMPORTANT** TO **TIGHTEN COMPLETELY** ALL THE 12 BOLTS AND SCREWS LISTED IN STEP 3 & 4.

FIGURE 1