

4300 Northlake Ct, Ste E, Charlotte, NC 28216
Phone 980-585-1460
www.rominafurniture.com

DO NOT THROW THIS INSTRUCTION BOOKLET

FOR YOUR TUFTED PANEL 8000

THESE CRIBS CONFORMS TO APPLICABLE REGULATIONS PROMULGATED BY THE CONSUMER PRODUCT SAFETY COMMISSION




NOTE: THE STYLE OF YOUR CRIB, HEADBOARD OR OF YOUR MATTRESS SUPPORT MAY VARY FROM WHAT IS PICTURED IN THE INSTRUCTION SHEET

IMPORTANT: PLEASE, READ
ALL INSTRUCTIONS BEFORE
ASSEMBLING! PLEASE, SAVE
INSTRUCTIONS FOR FUTURE
USE

TUF 8000 BOX CONTENT


Please locate and confirm that you have the following hardware with the following:


- **1.** Allen wrench = $\mathbf{1}$
- **2.** Allen bolt (40mm 1 9/16") = **4**
- 3. Bigger "internal star" lock washer = 4
- 4. Wooden block = 4

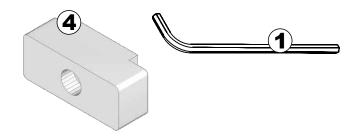

Required tools: Allen wrench (supplied)

CAUTION: Do not use a power screwdriver which can cause screws to break or strip

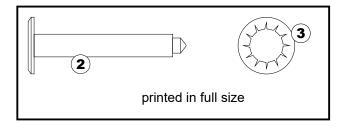

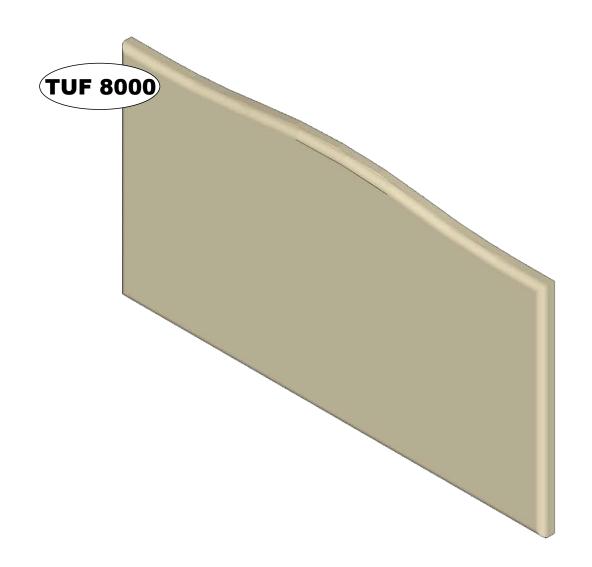

Note: During the assembly process whenever using screws or bolts, check each by placing the screw / bolt on the upper diagram which is drawn in actual size. Be sure to use the proper size and shape specified in the instructions. Be sure to **COMPLETELY TIGHTEN** the screws / bolts when you are asked to do this.

(Two adults are required to complete this step)


Take the TUFted Panel and carefully place it on your headboard **(HB)** with the four holes facing the back of the crib, like shown in the Figure below.


Insert 4 Allen bolts (2) and 4 bigger washers (3) into the wooden block (4) supplied with the TUF 8000 and attach it to the Tufted Panel using the Allen wrench (1).

Completely tighten these four bolts.

WARNING: TO KEEP YOUR BABY SECURE AND SAFE, AND TO AVOID POTENTIAL INJURY OR DEATH, IT'S VERY IMPORTANT TO COMPLETELY TIGHTEN ALL 4 BOLTS LISTED.



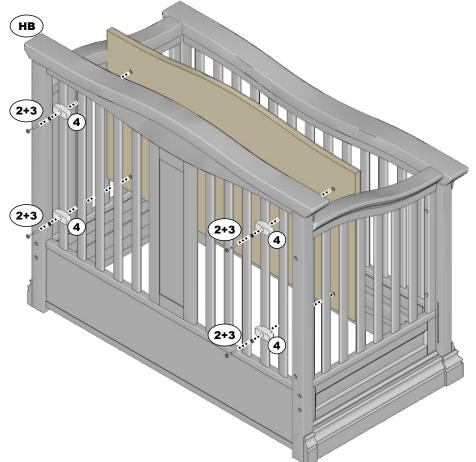

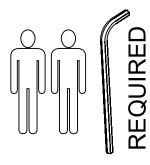



Thank you for being one of our distinguished clients.



Visit

www.rominafurniture.com

for updates, special offers and more new designs.