




Installation Instructions

2024+ Tacoma Rock Sliders

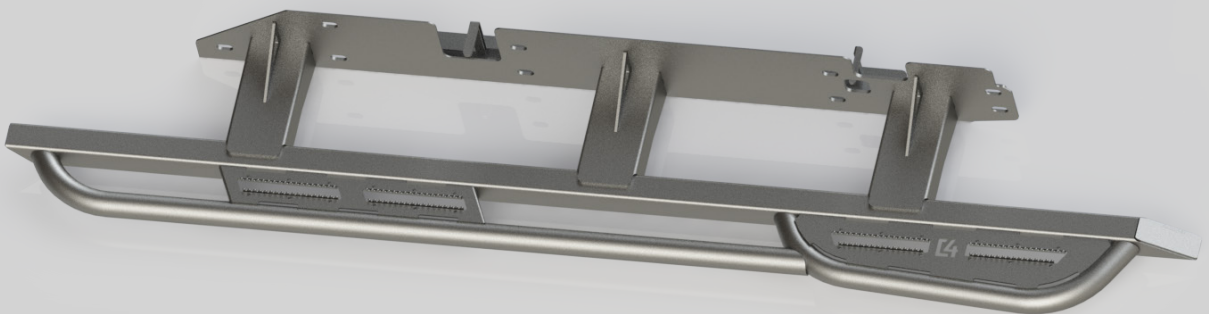

Step 1

Remove the plastic plugs on the outside of the framerails where the C4 Rock Sliders mount. On the passenger side, you will also need to remove the bolt securing the ground wire.

Step 2

Hold the rock slider up in place with floor jacks, jack stands, or a couple of buddies and loosely install all of the supplied bolts with washers on the side of the frame. You will want to keep all of the hardware loose until all bolts have been started.

Step 3

Starting at the front of the truck, insert the nutstick that is labeled D1 or P1 (driver or passenger) through the first large hole on the side of the frame and align the nut with the hole in the bottom of the frame and thread in the supplied bolt with washer. Then repeat for the second nutstick, D2 or P2 (Figure 1).

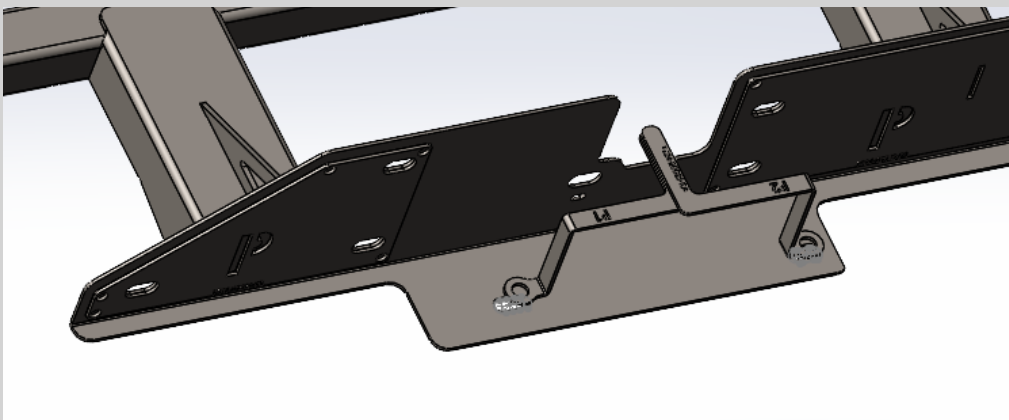


Figure 1: Nutsticks 1 and 2 aligned with bottom frame holes.

Step 4

Insert the third nutstick through the large hole in the rock slider frame plate towards the rear of the sliders. This nutstick is labeled D3 or P3 for the driver and passenger side respectively (Figure 2).

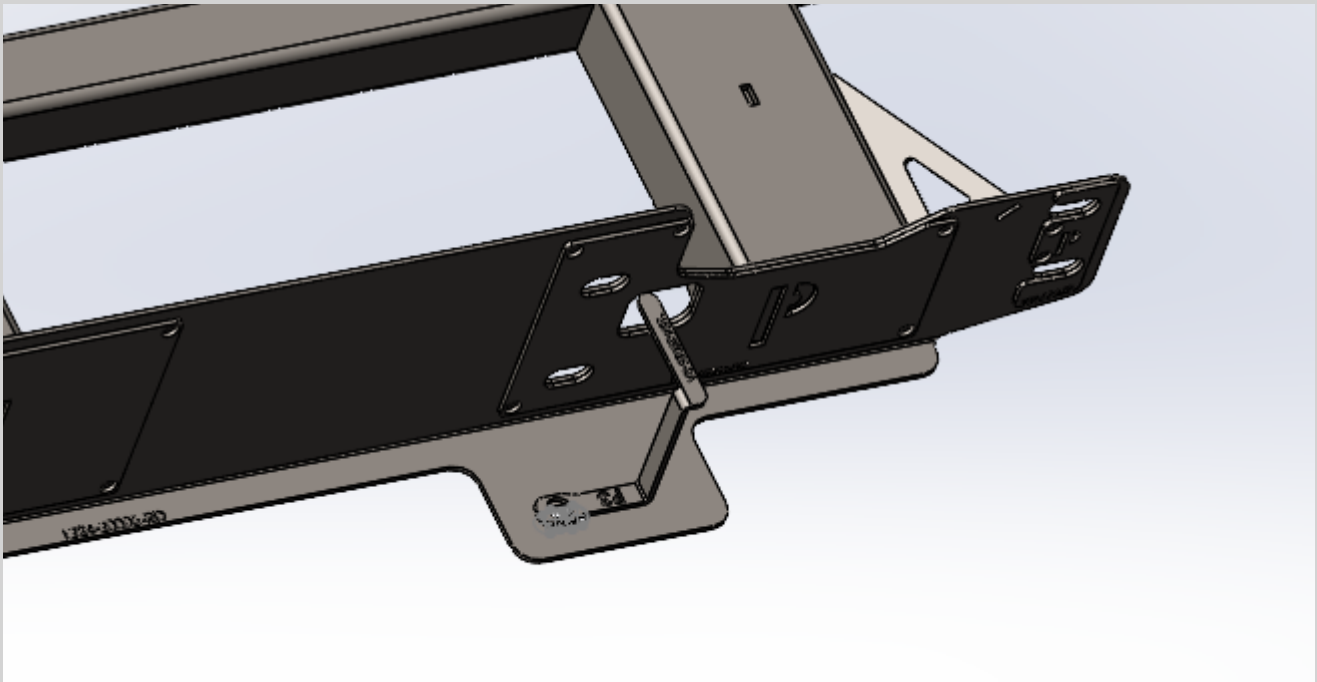


Figure 2: Nutstick 3 aligned with the bottom frame hole

Step 5

Snug up the bolts on the bottom of the slider to ensure it is up against the bottom of the frame. Then tighten all of the hardware on the side of the frame. Once the hardware on the side of the frame is tight, you can go back and tighten the bolts on the bottom of the frame. Be sure to reattach the ground wire that was removed in the first step (Figure 3).



Figure 3: Ground wire reattached

**PROVEN ARMOR
FOR EVERY ADVENTURE**



FABRICATION