
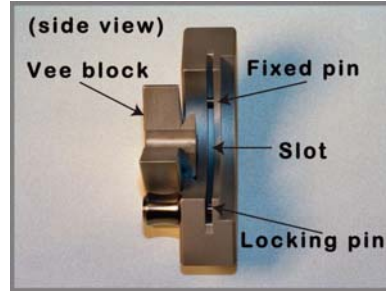


# HOW TO USE YOUR NEW CUBE SQUARED (CUBE<sup>2</sup>)™

from Q-Mark Manufacturing Inc. patent pending

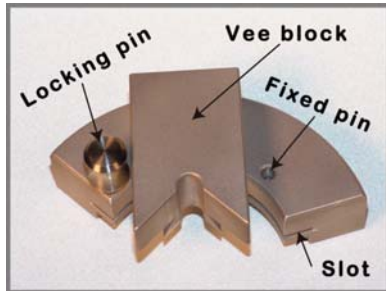

Step 1: Loosen the adapter plate screws to allow the cube to rotate (figures 1 and 2).



Figure 1



Figure 2

Step 2: Pull up on the Cube<sup>2</sup> locking pin until it stops. Holding the adapter plate with its cube pointing up (figure 3), align any two of the slots in the adapter plate with the pins in the Cube<sup>2</sup>. Slide the plate all the way into the slot in the Cube<sup>2</sup>. Push down on the locking pin until it stops (figure 4).



Figure 3



Figure 4

Step 3: Rotate the cube until you can slide the vee block against a corner (figure 5). Using your thumb and forefingers, squeeze the vee block and cube together (figure 6).



Figure 5

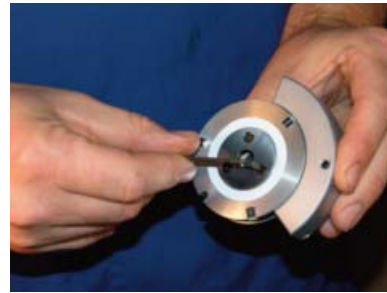


Figure 6

Step 4: Still holding the vee block and cube tightly together, turn the Cube<sup>2</sup> over (figure 7) and tighten the adapter plate screws (figure 8).



*figure 7*



*figure 8*

Step 5: Turn the Cube<sup>2</sup> over again. Grasp the adapter plate, retract the vee block (figure 9), and pull up on the locking pin (figure 10). Keep a firm grip on the adapter plate! It is free to slide out now.



*figure 9*



*figure 10*

Step 6: Slide out the adapter plate (figure 11). Done!



*figure 11*

*Questions? Suggestions?*

*Call us at 949-457-1913 or email to [sales@cmms.com](mailto:sales@cmms.com).*



Q-Mark Manufacturing Inc.  
23332 Madero Ste D  
Mission Viejo CA 92691  
949-457-1913  
[www.cmms.com](http://www.cmms.com)  
[sales@cmms.com](mailto:sales@cmms.com)

Cube<sup>2</sup> patent pending