

**DOMINO
CLAMPS®**

The smartest way to attach almost
anything to shipping containers

Office: 170 Graham Road, London E8 1BS

0208 1234 121


hello@dominoclamps.com

dominoclamps.com

     /dominoclamps

Domino Clamp Instruction Sheet

Parts

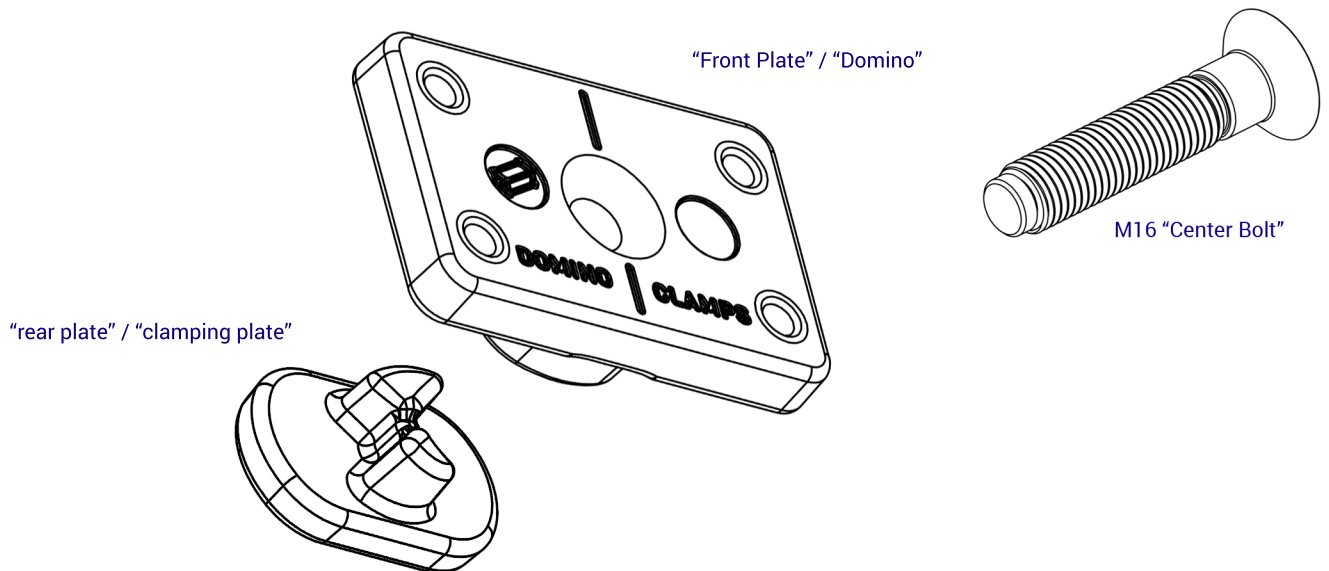

Installation instructions

Domino Clamps are shipped in fully tight position.
Fully undo the center bolt, until rear plate rotates to vertical position.
Ensure inside of casting is free from debris and corrosion.
Insert clamp into either the side or end holes of an ISO1161 corner casting,
with the domino Clamps logo the right way up.
Allow clamp to rest on the inside of the casting. This will center it.
Tighten the center bolt with 10mm hex key "hand tight" until the Domino is firmly held in place.

REMOVAL


Undo the center bolt with a 10mm hex key.
Maintain slight forward pressure on the bolt so that it stays in position.
Keep undoing the center bolt until it won't turn any more.
The rear plate will have rotated back to vertical, and you can remove the clamp.

Notes

For use only with ISO 1161 standard corner castings.
Clamp is to be used in front and side of corner casting as shown only.
Use only supplied Grade 10.8 custom bolt for tightening..

Max torque tightening bolt: 20Nm


In long term installations, check center bolt for tightness at regular intervals.
If the clamp is subject to constant vibration, we advise the use
of a thread locking liquid on the centre bolt.

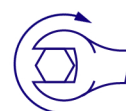


MAX TORQUE
20Nm



USE ONLY WITH
ISO1161 CASTINGS

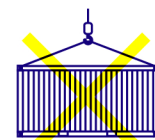

NOT FOR LIFTING

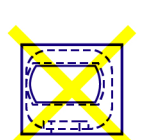

NOT FOR USE IN TOP
OR BOTTOM HOLES