


# CORDLESS PREMIUM BAMBOO SHADES

## INSTRUCTION

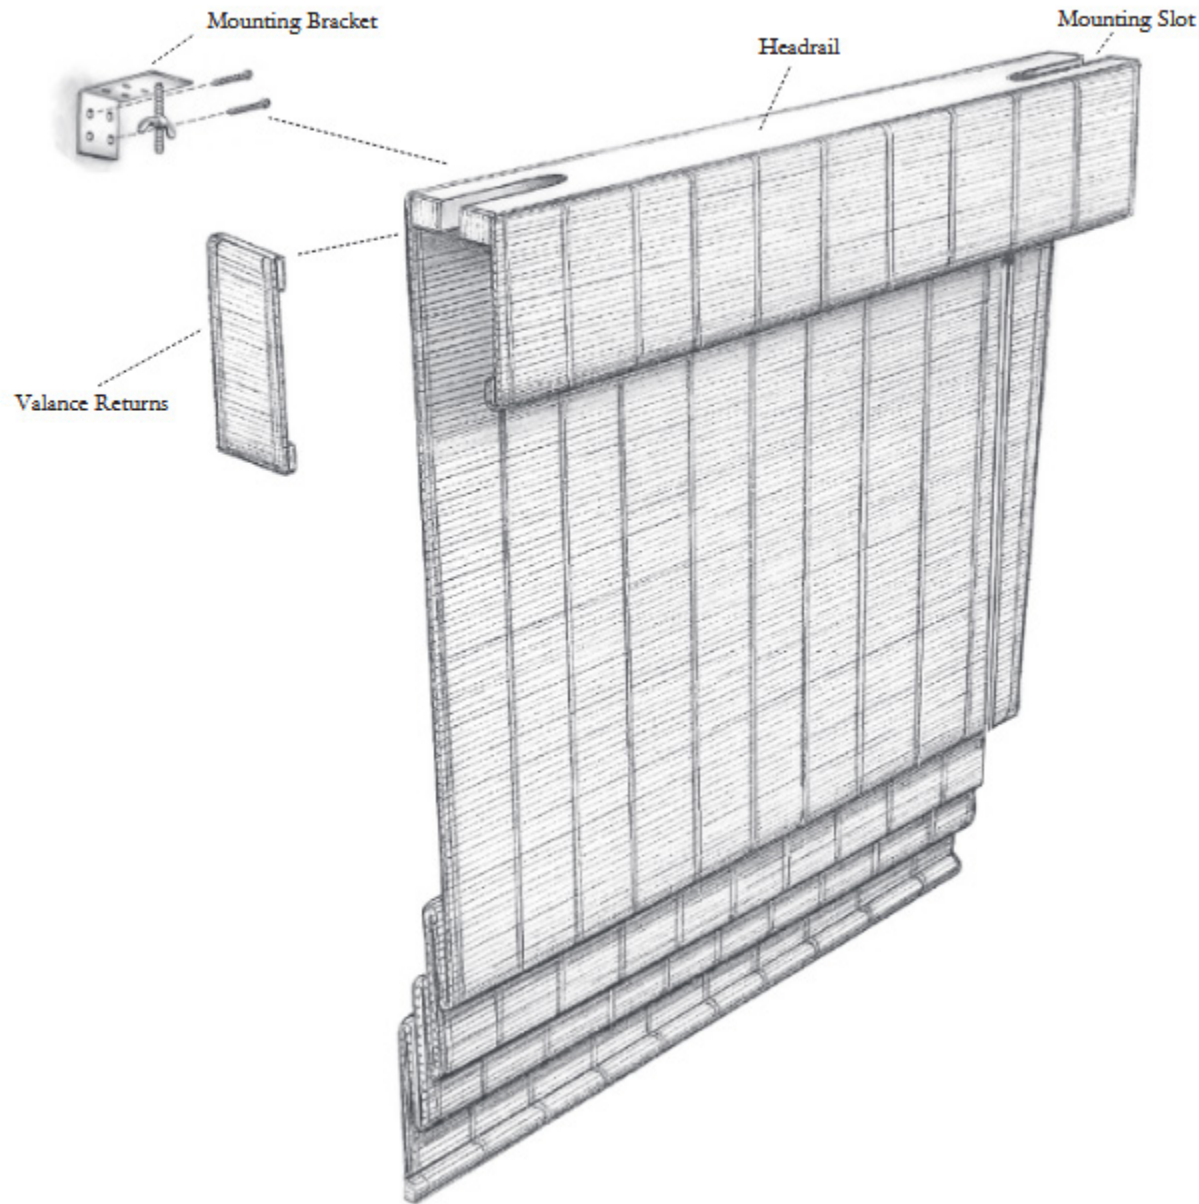


**INSTALLING** your new shade is easy. Simply follow the step-by-step instructions. We recommend that you read through all the instructions before you start.

### Step 1.

#### NEW SHADES

Remove the shade from the package.  
*\*Do not dispose of the package until the shade is operating to your satisfaction.*  
 Check the diagram to make sure you have all the parts indicated for the appropriate type of installation.  
*\* Do not lower the shade yet.*

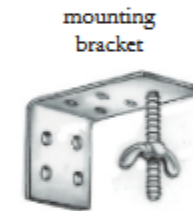


mounting  
bracket



screws  
(included)

#### Tools required:

Screwdriver, tape measure, drill, pencil, step ladder.  
 Use a 3/32" drill bit to predrill screw holes.  
 Use a 1/4" drill bit for wall anchors.

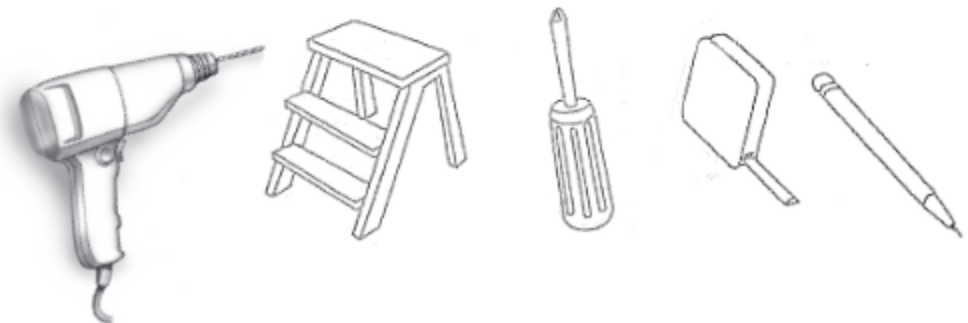

## Step 2.

### Bracket Location and Installation:


#### For Inside Mount:

Place a bracket on both ends of the headrail (and one or more in the middle of the rail for larger shades.)

Measure 1/2" in from the edge of the window frame on each side and mark with a pencil. Place the outside edge of each bracket on these marks and align them with the marks. Attach with the screws provided.

Your brackets must be securely attached to the mounting surface. When screwing into a surface, the included screws must hit wood studs. Otherwise, use a secure fastener.


Note: When installing screws with a drill, Be careful not to over-tighten. This may cause the screw to break off in the wall or window frame.

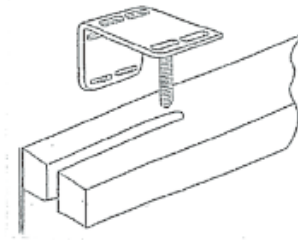

## Step 3.

### A. Securing Standard Headrail

Hold the shade in place and make a pencil mark at the rear of each bracket where it contacts the inside of the window frame. With the screws coming through the mounting slots on each end of the headrail, reinstall the wing nuts onto the screws and tighten by hand.

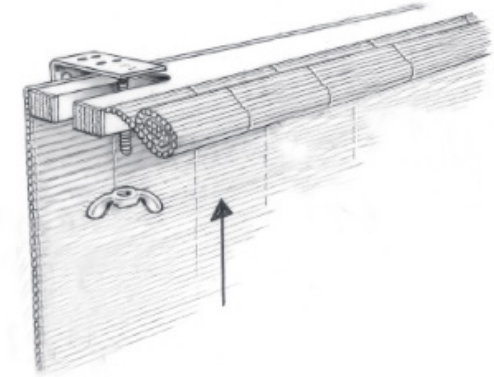

### B. Side Return Caps

#### For Inside Mount Valances

