

Crochet Hook Kit Sets Assembly Instructions


Required Accessories

- 7mm, Pen Mandrel
- 9.5mm Drill Bit
- Barrel Trimmer
- 2 pcs Bushings Set
- Glue (Thick CA or Epoxy)



Preparing the Blank

- Prepare and cut a blank of 3/4" or larger, to the length of the brass tube (add 1/16" for trimming)
- Drill a 9.5mm hole through the centre of the blank.
- Spread glue over the tube, insert into blank with a twisting motion to spread the glue evenly inside.
- Centre the tube inside the blank.
- When glue is dry. Trim the ends of the blank flush to the tube.

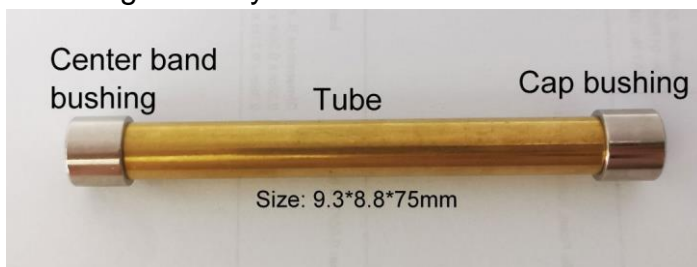

Turning the Blank

- Place the bushings and blank on the mandrel according to Diagram B.
- Thread on the knurled nut and hand tighten to hold all items in place.
- Slide the tailstock to the mandrel shaft, (do not overtighten, it could damage the mandrel) lock in place.
- Turn the handle ends down, flush with the bushings using the lathe tools, gradually increasing the grades of sandpaper.
- Finish the wood with friction polishing.

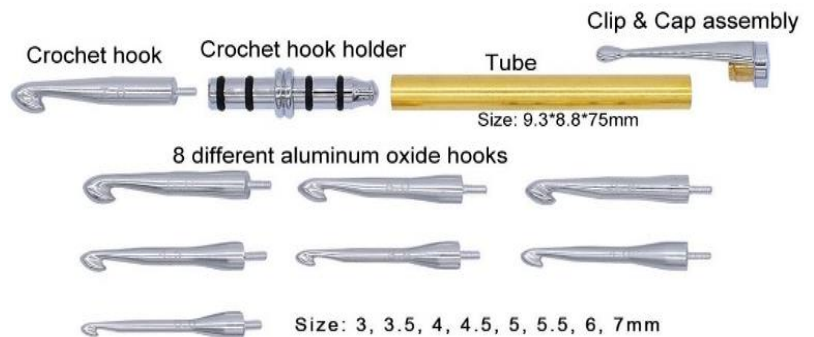


Diagram A

Assembly

- NOTE: Line up the components according to DIAGRAM A.
- Press the cap and clip assembly to one end of the tube.
- Screw the crochet hook into the crochet hook holder. There are 8 different sizes hooks for your choice.
- Slide the crochet hook holder in and out with both ends to assure a secure fit.
- When not in use, reverse the hook assembly to safely store the hook(s).