

Neoteric Lighting Design

CAUTION - RISK OF FIRE


Assembly and Installation Instructions for Model's

20040/41WV

Installation of this fixture should be done by a licensed electrician or by a person familiar with local electrical codes and the construction and operation of this fixture.

Warning please make sure the electrical breaker is shut off before commencing with this installation

This fixture is certified for wall mounting only and is suitable for Damp locations

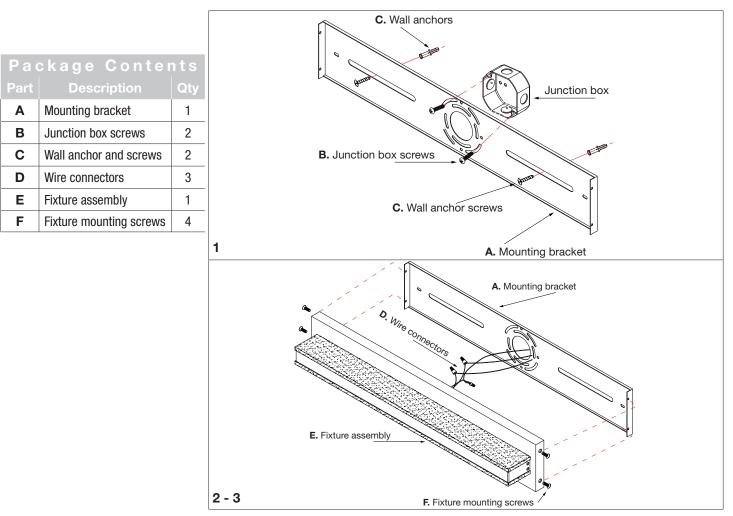

Installing the fixture please ensure the electrical breaker is switched off before commencing

Loosely attach the supplied Mounting bracket (A) with the two supplied mounting screws (B) to the Junction-Box. With a pencil mark the two holes for the supplied Wall Anchors (C), remove the mounting bracket and drill two holes for the wall anchors and insert the two plastic anchors. Making sure the electrical supply wires from the Junction-Box are inserted through the mounting bracket, re-attach the mounting bracket to the Junction Box and secure with both the Junction box mounting bolts and the wall anchor screws.

Connect the supply wires to the fixture wires using the supplied electrical wire connectors **(D)**. White supply wire to the White fixture wire, Black supply wire to Black fixture wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.

3 Attach the Fixture assembly (E) to the Mounting bracket (A) with the 4 supplied Fixture mounting screws (F).

4 Reconnect the electrical breaker and the fixture is ready for use.