

Mobi-Boat Ramp INSTALLATION DATA SHEET

Made from 100% recycled polyester, the Mobi-Boat Ramp is the lightest portable roll-out environment friendly mat for creating boat-launches in minutes.

Supplied as a ready-to use kit. The kit includes one Mobi-Boat Ramp roll and the necessary accessories for installation including X-shape connector bar at both mat ends and a staple pack.

1. Pre-installation

If required - prepare the area prior to installation of the mat - level the ground with a rake to clear debris, large stones and any foreign objects.

2. Start creating your Mobi-Boat Ramp

Unroll the Mobi-Boat Ramp and lay it in desired position (Fig. 1).

Check the mat surface and place the corrugated side facing up and the smooth side facing down in contact with the ground.

Secure the starting end of the mat using the U-shaped staples provided (Fig. 2).

On flat terrain insert staples through the holes in the mat.

On a slope or for intense traffic, insert staples through the connector holes and eyelets.

3. Stretch & Anchor your Mobi-Boat Ramp down

Stretch the Mobi-Boat Ramp from the other end, while using U-shaped staples inserted through the eyelets as tools to gently stretch the mat.

(Fig. 3).

Secure the mat end by fastening the end with u-shaped staples inserted through the connector with a hammer (Fig. 2).

To secure the mat lengthwise, insert a staple through the eyelet positioned on the lengthwise side of the mat (Fig. 4).

4. Connecting Multiple Mobi-Boat Ramps

Repeat steps 1 and 2 (Fig. 1 & 2).

Use end connectors: lay mat ends side by side and then slide the X-shaped connector bar into position to link both mat ends together

(Fig. 5).

Repeat step 3 (Fig. 3 & 2).

5. Maintenance

Use a broom or leaf blower to clean the surface.

Once a month, if too much sand accumulates underneath, roll back the mats and level the ground. Then re-do installation. If sand accumulates on top of the mat - wash it off with a hose. If it's in the water - roll the mat up, hose it off and then roll it out again.

Optional Mobi-Path installation

In the case of immersion in the water.

Dig a 10cm deep and 8cm wide trench at the end of the Mobi-Boat Ramp, position the mat end connector straight down at 30 degrees into the sand and anchor the mat down using the U-shaped staples and bury it with sand.



Fig. 1

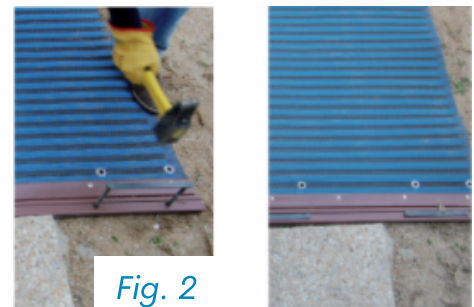


Fig. 2



Fig. 3



Fig. 4