
Installation guide for rubber snowshoe harness



First of all, please note the number associated to each hole in the harness.



1- Insert laces in holes #1 and #4. Please note that the snowshoe is shown upside down.

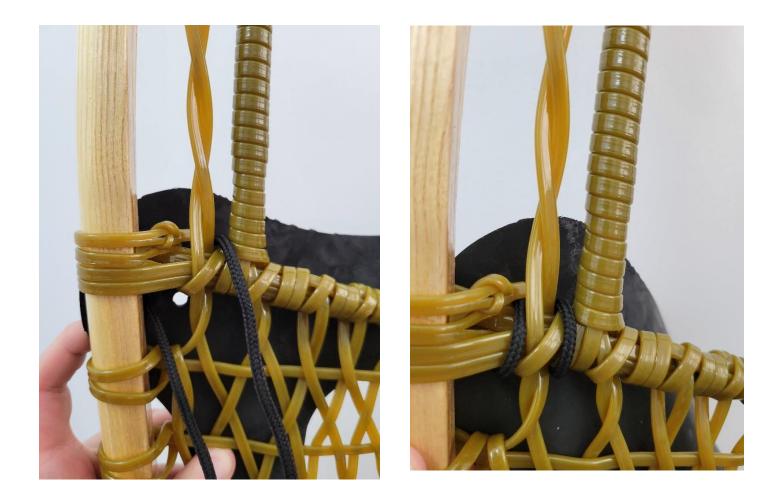

2- Pass the laces around the rawhide, return and insert through holes #2 and #3. Repeat on the other side.



2- Once the laces went through holes #2 and #3, tighten by pulling on both ends of laces and tie up in a bow. Repeat on the other side.



2- Insert the toe of the boot into the front of the binding and pull up the rubber tongue over the heel. Tighten the laces if needed.