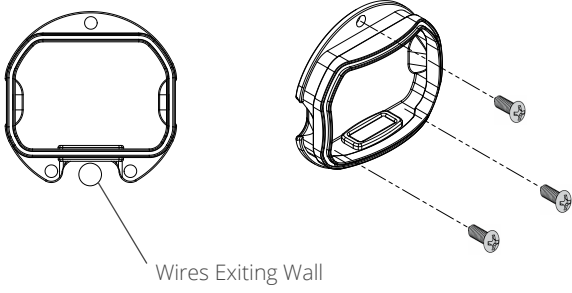
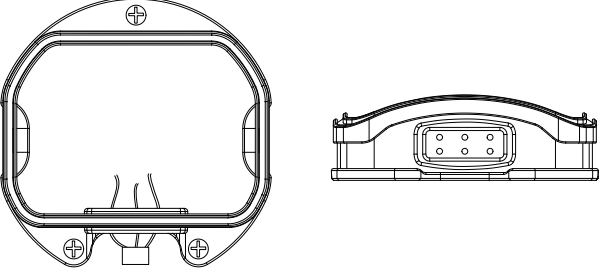
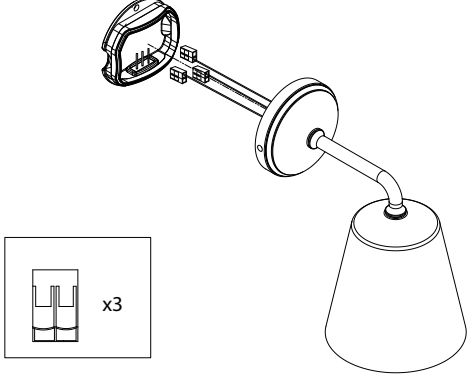
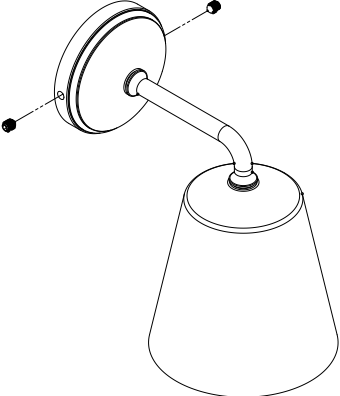
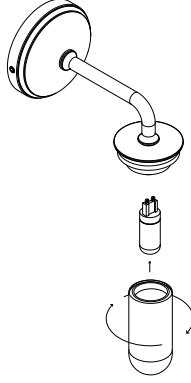
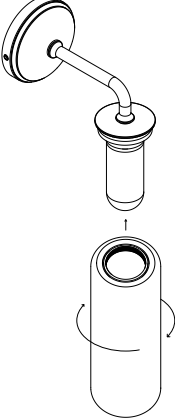


Small Wall Light Instructions

1. Install Wall Light Mount	2. Push wires through grommet
 <p>Wires Exiting Wall</p>	
3. Connect WAGOs inside base	4. Tighten Grub screws
 <p>x3</p>	
5. Unscrew Glass cover to add bulb	6. Screw Claremont shade onto body
	

Small Wall Light Instructions

7. Use shade ring to secure shade	8. Use grub screw to adjust shade height
