


J. Kirkham
SKYLINER®
 SKYLINER® TENT

| | | |
|--|--|--|
| S P R I N G B A R | SIZE 10' x 14' x 6.8' | MATERIAL Sunforger® marine-finish boat shrunk army duck canvas. 100% cotton, double-fill construction. Finished in Georgia, USA—the 'gold standard' in cotton tent canvas. Watertight, breathable, and highly durable. Laminated Vinyl Floor. Heavy-duty and fully waterproof. Aluminum alloy pole set w/ steel reinforcements. No-See-Um Mesh window and door interiors. USA-Made Steel Wedge Stakes and heavy-duty canvas bucket bag. |
| | WEIGHT 78 lbs. | |
| | PACKED DIMENSIONS (Tent Bag) 26" x 32" (Pole Bag) 8" x 62" | |


SPRINGBAR TENT SET-UP GUIDE

1. Stake it Down.
 Select a level site and keep the tent as 'square' as possible. Springbar Tents **MUST BE SECURELY STAKED DOWN** to function.

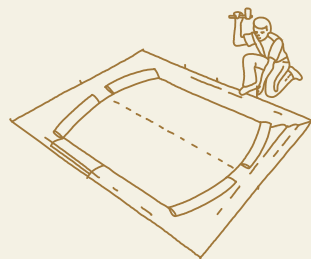

Scan this QR code to watch our Springbar set-up video.


2. Insert Ridge Poles and Tension Rods.
 Use ridge poles (three piece), 1 aluminum sleeve, and 4 tension bars.

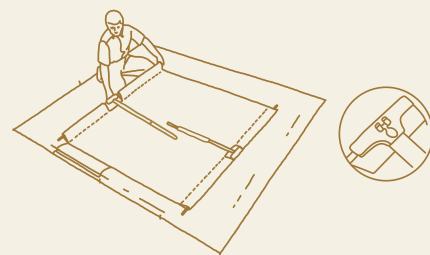

3. Tension the Roof Panel.
 Assemble the three-piece ridge pole – two pieces will nest together creating a longer section of the ridge pole.


Then place the ridge poles end to end and press down to tension the roof.

Slide the aluminum sleeve over the connection point to secure the ridge.

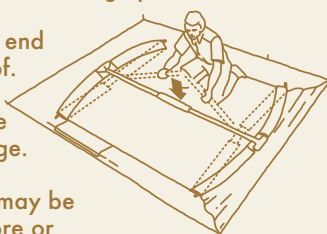


Tip: The tension screw may be adjusted to achieve more or less tension as needed.


4. Install One Upright Pole.
 Tip: Assemble the upright pole on the shortest setting. After installing, lengthen the pole until the walls are taut—but not too tight.

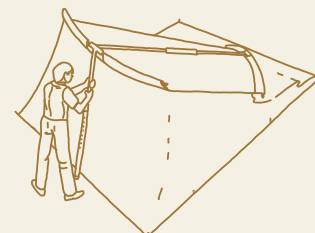

5. Install Second Upright Pole.
 Tip: Follow the same procedure outlined in Step 4.

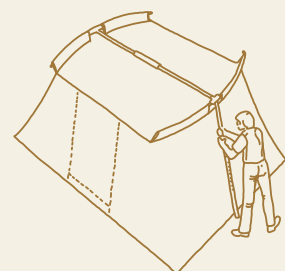




6. Enjoy your Skyliner.

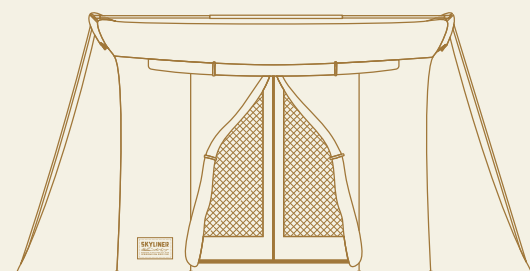

**CUT AND SEWN BY HAND
 IN SALT LAKE CITY, UTAH, USA**



SKYLINER INCLUDES

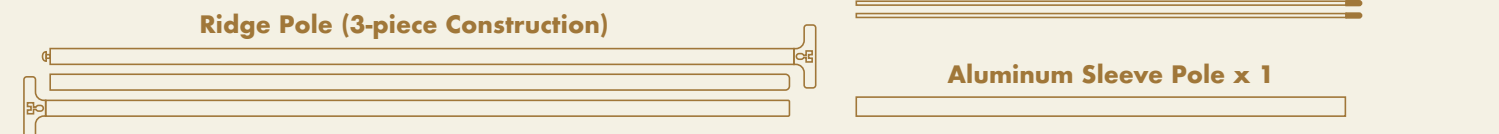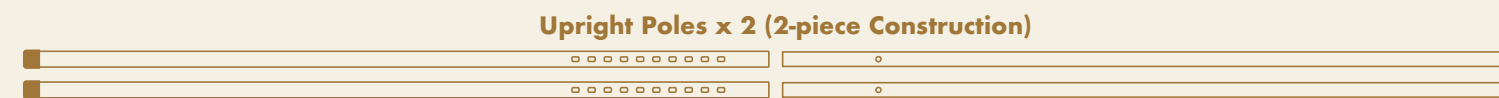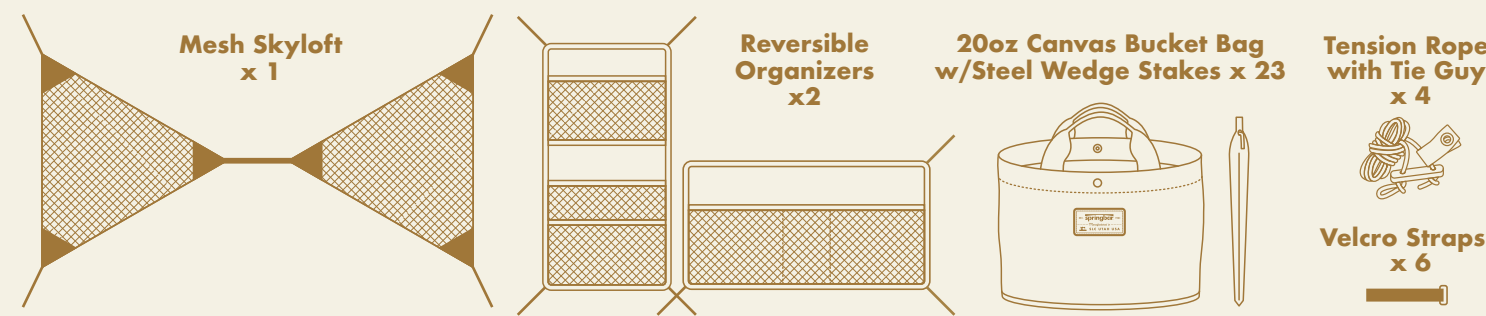

“DISCOVER A NEW PLEASURE IN CAMPING”

Jack Kirkham Sr. circa 1962
 Inventor of the Springbar® Tent