
HIGHLINE 6

TENT MAKERS & TRADERS

Sprinci

ESTABLISHED 1961 V

The classic Springbar® Canvas Tent design in a 10'x10' footprint, built to Jack Kirkham Jr.'s precise specs. Simple to set-up, legendary in heavy wind and rain, and exceptionally spacious, the Highline 6 Tent is well-suited to car camping families, DIY glampers, and professional outfitters alike.

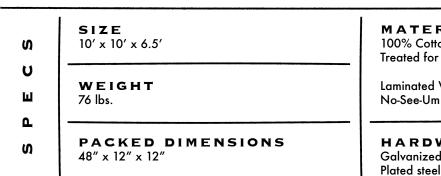

MATERIAL 100% Cotton Duck Canvas (10oz roof, 8oz wall panels). Treated for water resistance and anti-mold.


Laminated Vinyl Floor. Heavy-duty and fully waterproof. No-See-Um Mesh window and door interiors.

HARDWARE Galvanized steel 10' x 10' Springbar® pole set Plated steel 12" nail stakes

SPRINGBAR TENT SET-UP GUIDE

1. Stake it Down.

Select and level site and keep the tent as 'square' as possible. Springbar Tents MUST BE SECURELY STAKED DOWN to function.

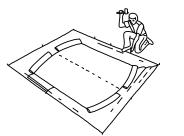

3. Tension the Roof Panel.


Place the ridge poles end to end and press down to tension the roof. Slide the steel sleeve over the connection point to secure the ridge.






5. Install Second Upright Pole.

Tip: Follow the same procedure outlined in Step 4.

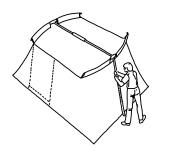


2. Insert Ridge Poles and Spring Bars. Use 2 ridge poles, 1 steel sleeve, and 4 spring bars.

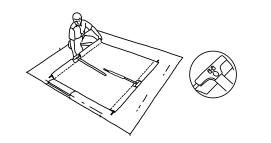


4. Install One Upright Pole.

Tip: Assemble the upright pole on the shortest setting. After installing, lengthen the pole until the walls are taut-but not too tight.

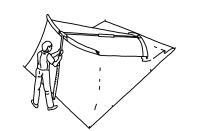

6. Enjoy your Highline 6.



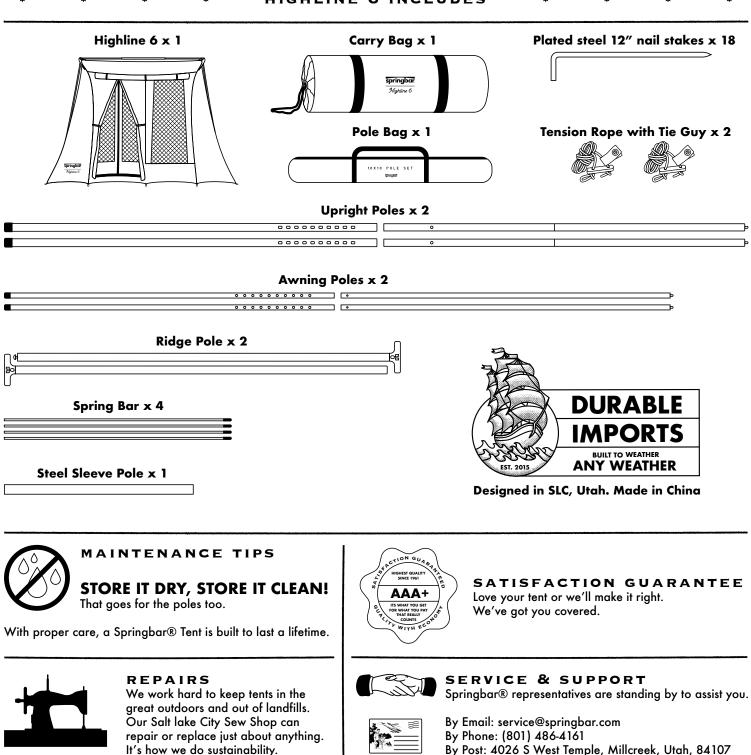

Contact us to schedule a repair.

"DISCOVER A NEW PLEASURE IN CAMPING"





By Post: 4026 S West Temple, Millcreek, Utah, 84107

BE A HAPPY CAMPER

Jack Kirkham Sr. circa 1962 Inventor of the Springbar® Tent