



contents/description

- **Size: 7' W. x 16' L. x 4' H.**
- **Also available in three other configurations**
- **Metal/Wire**
- **Includes all parts needed for assembly plus adapter to fit any of the OverEZ Chicken Coops**

SKU# 7164CKRN2

Rugged Ranch Chicken Run

7' W. x 16' L. x 4' H.

Instruction Manual



happy
with our product?

Please help us spread the word
by leaving a review at:
www.OverEZchickencoop.com

OverEZ
Chicken Coop®

for more information about all our products visit: www.OverEZchickencoop.com

RR RUGGED RANCH RR



End Panel.



Side Panel.
(Side panels are Bigger
Than roof Panels)




Roof Panel.
(Roof panels are smaller
Than Side Panels) And
Have heavier wire through
The middle.



End/Adapter end Panel.



Two piece clamp.

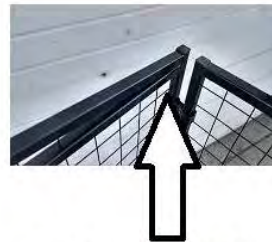

End panel outside.

Tools Required for Assembly:



Important Notes!

Lay out all components prior to start of assembly.

**If any components are missing, do not return to retailer!
Please call Rugged Ranch Products at: 760-734-3748**



**Step 1: Layout all panels as shown.
8' and 16' works the same way.**

- Included :**
- Gate end panel**
- End/adaptor end panel**
- Side panels**
- Roof panels (Not pictured)**
- Two piece clamps**




Wire cuts



**Step 2: Assemble side and end Panel. End panel goes on outside
Fasten corners with two piece clamps.
Where the wire is cut out.**

**Step 3: Repeat step 2 with the other
End and side panels-**

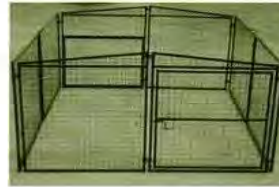

**Step 4: Install the roof panels with the hinges
By the peak. (If you have the 16' run, the two
Roof panels in the same box as the gables
belong on the ends. The two panels in the
extension kit are for the middle sections of
the run) Fasten with clamps wherever the
wire cut outs are.**



Hinges



16' Run pictured

**Final step: Tighten all nuts and install all
clamps.**

Rugged Ranch Chicken Run Adapter Instructions

This Adapter is for all sizes of OverEZ Chicken Coops and Standard & Mini Chicken Coops with a Rugged Ranch Chicken Run.

You will need a drill or socket set to assemble this chicken run

STEP 1:



After the chicken run has been assembled, install the angle iron on the top, bottom and both sides of the insert. The wide one is for the bottom. Install the angle pieces with the angle towards the chicken coop and the lip out (Bottom one is installed the same except the Large OverEZ Chicken Coop and the Standard Chicken Coop, this needs to be flipped with the angle up) Then fasten with 2 self-tapping screws into each panel

STEP 2:



Push the panel against the chicken coop trim leave approximately 1" away from the latch side of the chicken coop door. (Optional, insert screws through predrilled holes on the angle pieces into the trim. You will need to use an extension bit to do this)

STEP 3:



(Optional)

This is only if you have the OverEZ Wire Chicken Coop Panels installed around the bottom of the chicken coop. Remove the very bottom panel of the insert by removing the bolts, this is to allow the chickens to walk underneath the chicken coop. Tie the excess wire from the OverEZ Wire Chicken Coop Panels to the run.

*for more information about
all our products visit:*

www.OverEZchickencoop.com

