



DC Sports
13000 Temple Ave
City of Industry Ca, 91746
T. 626-937-6988
www.dcsports.com

CAI5526
COLD AIR INTAKE INSTALLATION INSTRUCTIONS
2012-2015 Honda civic 1.8L

**!!! READ ALL INSTRUCTION THOROUGHLY BEFORE BEGINNING
INSTALLATION. FAILURE TO DO SO MAY RESULT IN COSTLY ENGINE
AND/OR SYSTEM DAMAGE!!!**

*****IF UNSURE ABOUT INTAKE SYSTEM INSTALLATION PLEASE HAVE A
REPUTABLE PERFORMANCE SHOP OR A LICENCED MECHANIC
INSTALL THIS SYSTEM*****

*****FOR YOUR SAFETY, ALLOW ENGINE TO COOL FOR AT LEAST AN
HOUR BEFORE BEGINNING INSTALLATION*****

*****PLEASE CHECK AND MAKE SURE ALL HARDWARE IS PRESENT
BEFORE INSTALLATION. PARTS LIST ON LAST PAGE*****

TOOLS REQUIRED

3/8 Socket wrench

10 mm socket

10mm ratcheting wrench

Needle nose pliers

Phillips Screwdriver

Flat head screwdriver

½ impact

½ torque wrench

REMOVAL OF STOCK INTAKE AND INSTALLATION OF INTAKE SYSTEM

1. Locate a flat and level surface and jack up car. Place jack stands under both side of the car safely.
2. Disconnect positive and negative battery terminal and remove battery. (This will be necessary for a later step)
3. Locate and remove the 10mm bolt on the bracket that secures the positive battery terminal. (picture A). Carefully remove positive cable from bracket and remove bracket.
4. Loosen clamp on the engine side of the PCV hose and remove the PCV hose form the valve cover.
5. Loosen hose clamp in the intake side of the intake tube.
6. Locate and remove two (2) 10mm bolts securing the intake box. Carefully remove pull up on intake box. There is a grommet holding down the intake so some pressure will be need but do not fully pull the box out.
7. Locate the clip that holds down the maf sensor harness to the oem intake box. With a set of pliers apply light pressure to the clip and remove the harness. (picture B)

8. Locate the MAF sensor clip and disconnect the harness from the maf. The intake box can now be completely removed.
9. Locate and remove both throttle body heater coolant lines.
10. Remove intake tube clamp on the throttle body side. Remove oem intake tube.
11. Remove driver side wheel.
12. Locate and remove 12 clips securing driver side wheel liner be very careful to not break any of the oem clips as they are very brittle. Remove driver side fender liner.
13. Gently pull up on the Oem intake snorkel to dislodge it from the lower box.
14. Locate the two (2) 10mm bolts holding down lower intake box. One will be under the battery tray the other will be in the driver fender well. (pictures C & D)
15. Very carefully remove the lower intake box, this will take some light maneuvering Be sure not to damage this.
16. Remove Mas Air flow sensor from oem intake box.
17. Take both provided vibration mounts and put them in place of the stock mounting locations. (picture E & F)
18. Remove both factory coolant hoses and replace with provided hose and clamps.
19. Install provided 2.5" silicone coupler onto the throttle body.
20. Install Mas Air Flow sensor onto primary intake tube and install primary intake tube.
21. Install provided DC Sports filter onto secondary intake tube.
22. Install secondary intake tube.
23. Position lower tube to that the filter is not contacting anything then tighten down all hardware.
24. Re-install driver side fender liner
25. Install provide PCV hose.
26. Re-install battery.
27. Double check all work. Make sure all clamps and mounting hardware are secure.
28. Lower the car and torque wheels to 90 lb./ft.

*****LIMITED 3 YEAR WARRANTY*****

DC Sports only warranty's intake systems due to poor workmanship. We do not cover normal wear and tear damages due to misuse or abuse. We do not warranty the finish of intake tubes.

**Warranty covers the original owner of intake system by having proof of purchase.
We have the right to void all warranty if you cannot provide the information needed by DC Sports.
DC Sports does not cover any cost for installation or removal of products.**

*****CAUTION*****

DC Sports does not assume any liability for damage caused by rain or floods causing the intake system for taking on water. We recommend that you remove the cold air intake system due to wet conditions.

*****WARRANTY CLAIMS*****

**All warranty claims must be shipped prepaid by the customer to DC Sports.
Warranty claims must have an RMA (Return Merchandise Authorization) number on the box or package will be refused and sent back to the shipper.**

PARTS LIST


Quantity	Part Number	Part Description
1	DCCAP5526	CAI5526 PRIMARY INTAKE TUBE
1	DCCAQ5526	CAI5526 SECONDARY TUBE
2	DCCP250	2.50" STRAIGHT COUPLER
7"	DCVH12MM	12MM VACUUM HOSE
19.5"	DCHH8MM	8MM HEATER HOSE
4	DCCL250	2.50" CLAMP
2	DCPS8	8MM PHILLIPS MACHINE SCREWS
2	DCVM6MM	M6 M/M VIBRA MOUNT
1	DCF250	2.50" DC SPORTS FILTER PACK
2	DCDECAL	DC SPORTS DECALS
2		CLAMPS FOR 8MM HOSE
1		CLAMP FOR 12MM HOSE



Picture A



Picture B

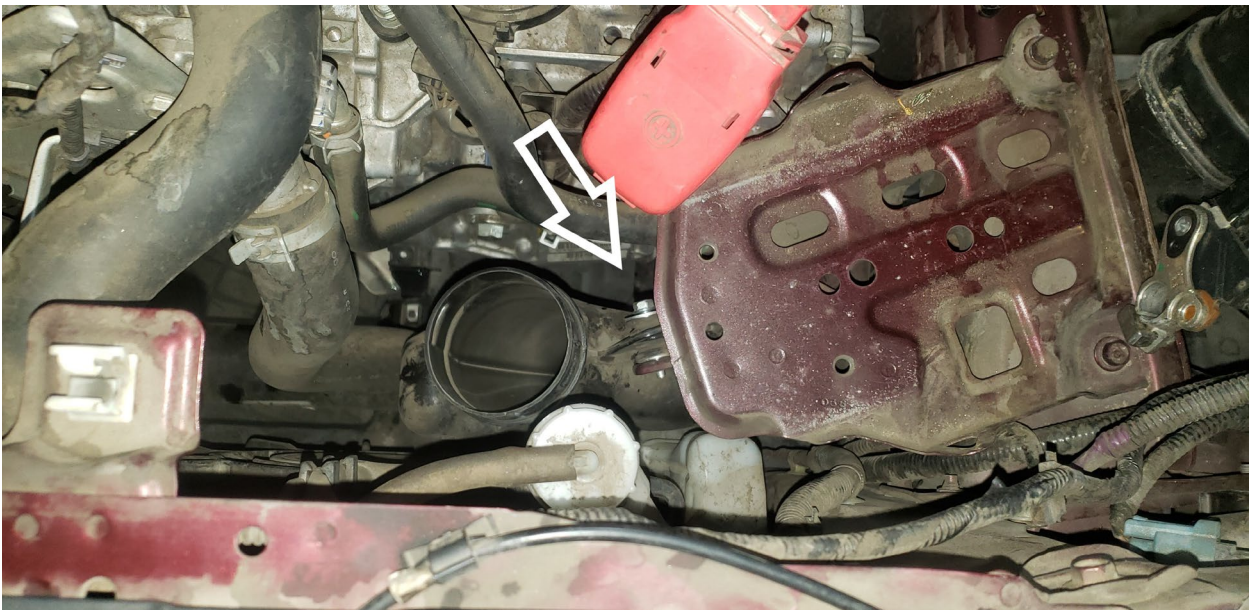

Picture C



Picture D



Picture E



Picture F





THANK YOU FOR CHOSING DC SPORTS