



13000 Temple Ave. City of Industry, CA 91746

Tech line (626) 968-5147 Main line (800) 237-7560
www.dcsports.com

CSB5531 Strut Tower Bar Installation Instructions

2013-2017 Honda Accord 4cyl 2.4L

**READ ALL INSTRUCTIONS THROUGH COMPLETELY BEFORE BEGINNING
INSTALLATION.**

**IF YOU ARE NOT COMFORTABLE AND/OR FAMILIAR WITH THESE INSTRUCTIONS, PLEASE
REFER THIS INSTALLATION TO A QUALIFIED PROFESSIONAL.**

1. With the car set on the ground, remove four (4) 10 mm nuts securing OEM strut reinforcement brace.
2. Remove two (2) 8 mm nuts securing strut brace to the strut mount.
3. Remove the OEM strut reinforcement brace.
4. Loosen clamp holding down intake sound tube and gently lift to remove. **(SEE PICTURE A)**
5. Insert provided plug and retighten the oem clamp. **(SEE PICTURE B)**
6. Locate the bracket that holds the AC line to the passenger shock tower. Remove the one (1) 6mm bolt. This bolt will be reused. **(SEE PICTURE C)**
7. Install strut bar
8. Tighten all four (4) 10mm nuts (Torque: 4.4 kg-m, 32 lb-ft).
9. Tighten down two (2) 8mm nuts (Torque to 28lb-ft)
10. Using provide bracket and hardware reinstall the AC line retaining bracket. **(SEE PICTURE D)**
11. **RECHECK ALL YOUR WORK.**

PARTS LIST

Quantity	Part Number	Part Description
1	CSB5531	Carbon steel strut bar
1	DCP5531	Intake Plug
1	DCB5531	A/C line relocation bracket.
2	RHBA-M6x100x15	M6 x 1.0m x15mm long
2	RHNA-NY-M6x100	M6x 1.00m Ny lock nut
4	WA-M6	M6 Washer
2	DCS1008	DC Sports decals


THANK YOU FOR CHOOSING DC SPORTS




PICTURE A



PICTURE B

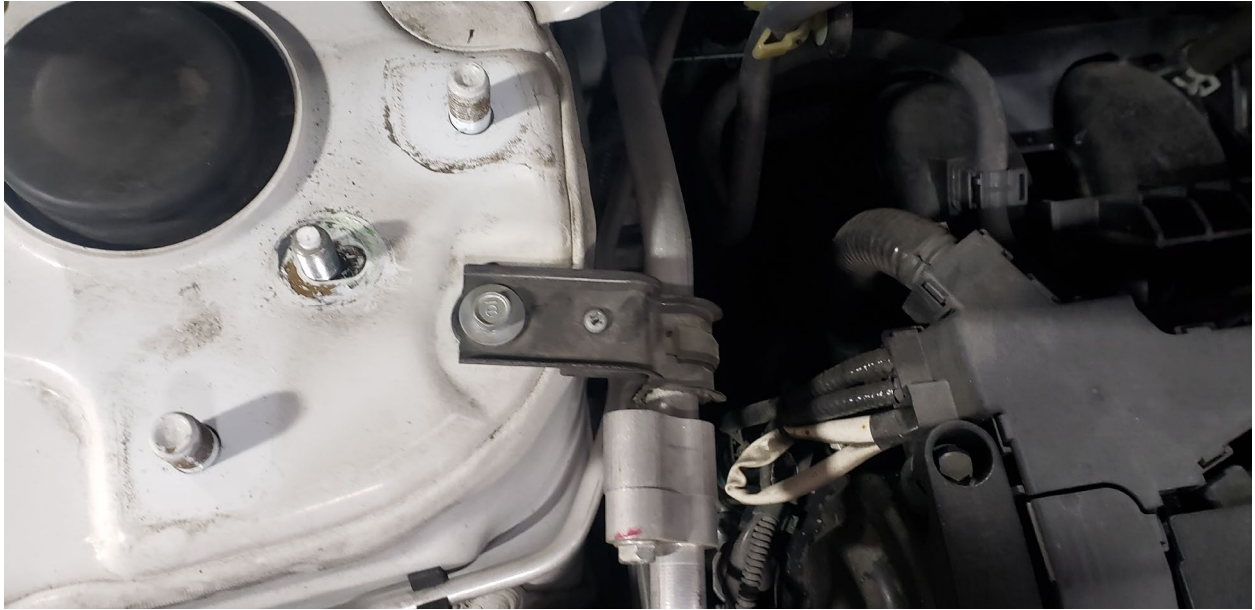

PICTURE C

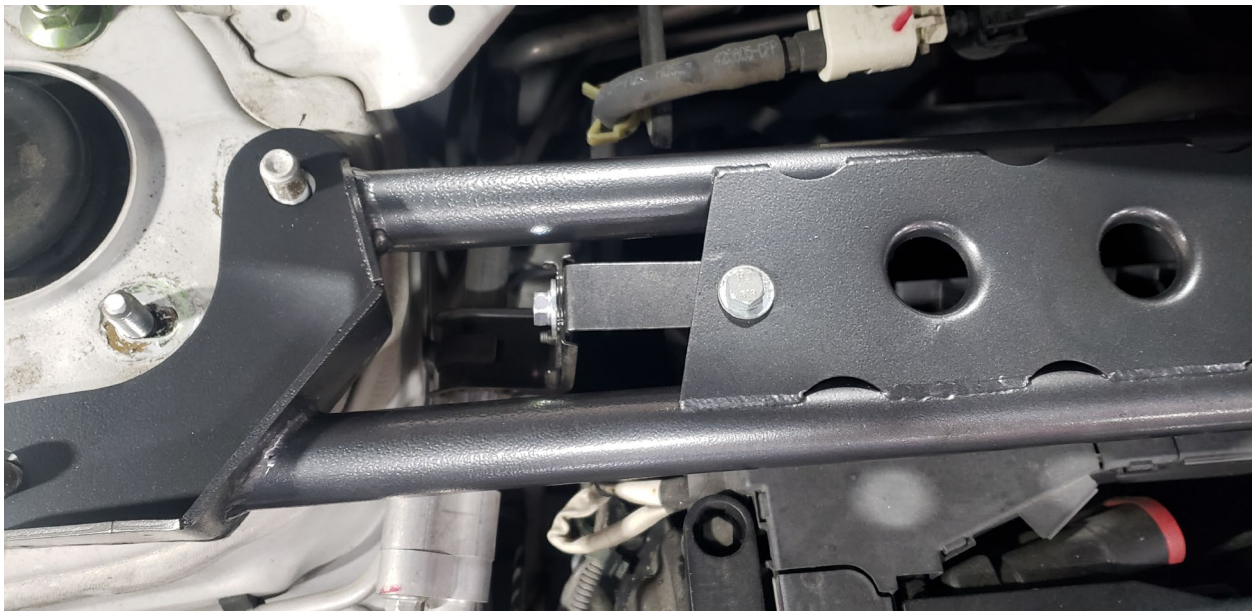

PICTURE D

