



INSTALLATION INSTRUCTIONS

Thank you for purchasing your cover from airconcovers.com. In this box you will find your cover and a set of mounting screws. The screws have a 6mm thread and are 7cm long. They are supplied with 4 x 10mm wall plugs therefore it is necessary to drill the mounting holes using a 10mm drill bit.

YOU WILL NEED THE FOLLOWING:

- A 1m tape measure/ruler (ideally with spirit level embedded)
- A spirit level (if not embedded in a ruler)
- A marker pen/pencil
- A drill with a 10mm drill bit (ideally a hammer drill)
- A Hammer
- A large headed cross head/Philips screwdriver.

If you have not already studied the **Pre-check** list (also enclosed) please do so before installing your cover.

IF YOUR COVER WILL FIT;

• Step 1


A) Take a 1m tape measure and measure the width of your AC.

B) Mark the wall behind the AC at its centre point. This mark can be directly horizontally level with the lid of the AC, or up to 30mm higher. (do not mark it higher than 30mm as then the cover will not fit correctly and the bottom of the AC will be visible).

• Step 2

Using your tape measure/ruler measure 490mm to the right and 490mm to the left of the centre point you marked in Step 2B. Mark these points as these points will be the top mounting holes. Use a spirit level to make sure the holes are horizontal otherwise your cover will not be straight when installed. (However there is some adjustment available when tightening the screws for small errors in alignment).

Before drilling measure the space between the two holes you just marked and it should be 980mm.

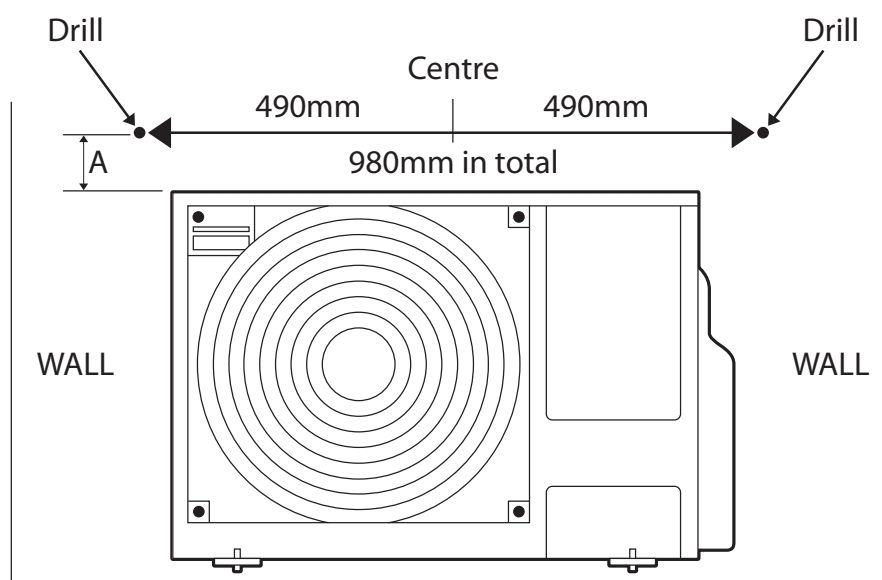


NB. If when you measure the centre point you do not have sufficient wall to drill a hole (for instance where the unit was installed near a corner or end of a wall, you will need to offset the cover to the left or right.

Measurement 'A' can be between 0-3cm up from the lid of the AC.

- **Step 3**



Take your tape measure/ruler and using the top holes as a start point measure down vertically with a spirit level 595mm. Do this on both sides of the AC unit. This gives you the two bottom mounting holes.

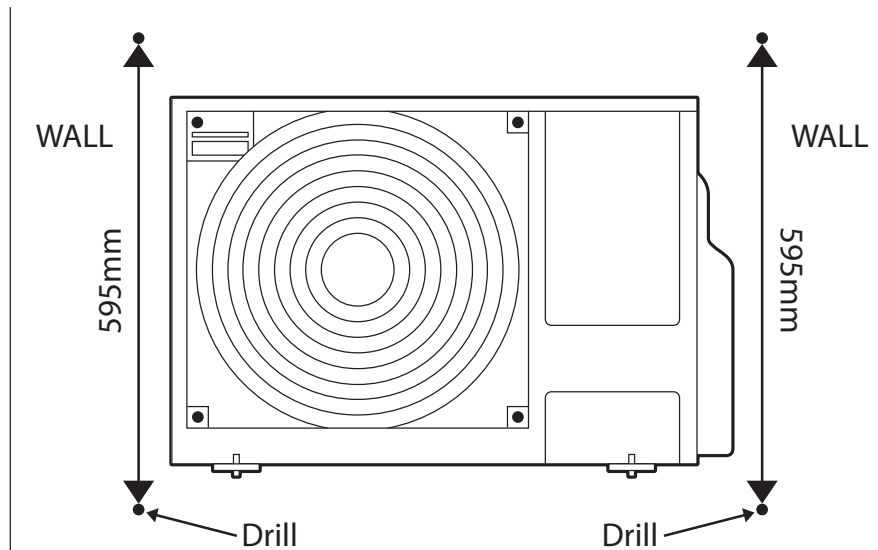

- **Step 4**

Take a drill with a 10mm masonry drill bit and drill the 4 holes.

Place the wall plugs (included) in the holes and screw in the screws but not all the way, leave around 4mm.

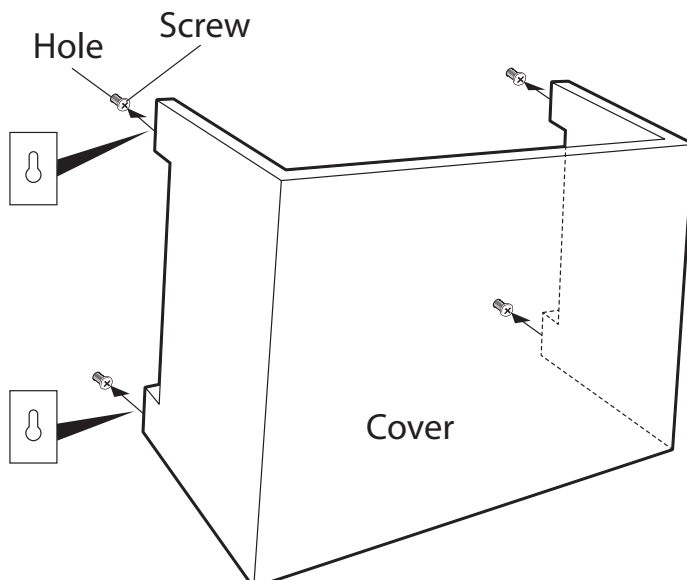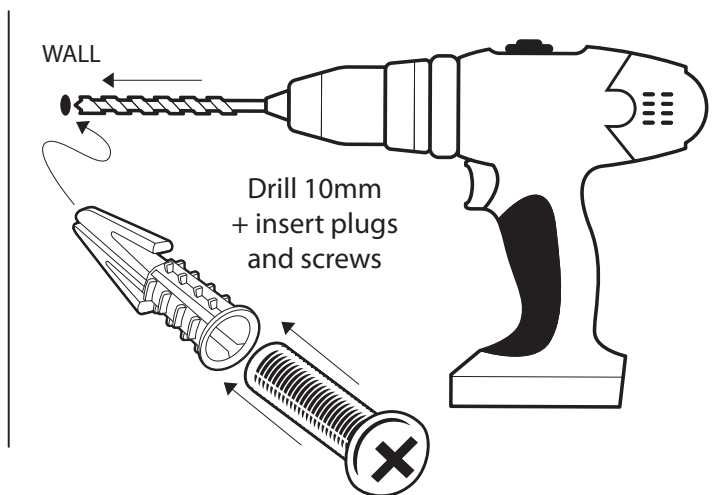

- **Step 5**

Lift your cover on and mount the top holes and bottom, then let the AC cover drop slightly to lock in to the keyhole shape. There is some flex left and right to help you with the fitting.

- **Step 6**

Tighten the screws to ensure the cover is secure. At this stage you can lift either side up or down a little in case you did not drill the top holes level with each other.