


Delivery and Setup for Reverie R650™




Step 1.

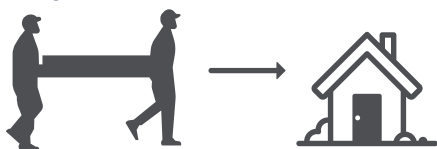


Ensure there is an open path to the room for setup. Carry the base into the home fully boxed using two (2) people.

Step 2.

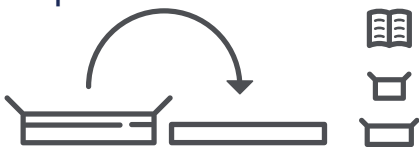

Unbox the base and remove all packaging and accessories from the undercarriage. Loosen the plastic stapled to the undercarriage of the power base by lifting it up and away from the base.

Step 3.

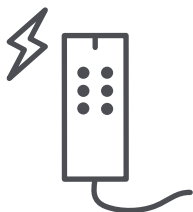

Using the micro USB cord provided, plug the remote in to begin charging.

Step 4.




Be sure to locate the owner's manual and hand it directly to the customer.

Step 5.



Remove the plastic covering stapled to the base.

Step 6.

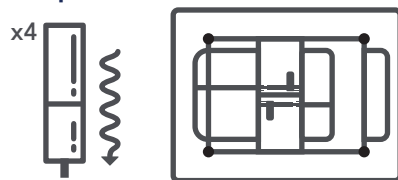

Attach the legs.

Step 7.



Extend the power cord out from the power base. Using two (2) people carefully lift and flip the power base into the upright position.

Step 8.




Extend the power cord and plug the power base into a grounded outlet or as recommended a surge protector.

Step 9.



To install the corner retainer bars, loosen the hardware already attached to the power base, slide the retainer bar onto the bolts, and refasten.

Step 10.

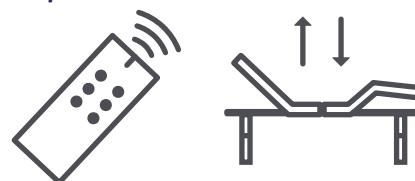

Test the power base. To pair the power base to the remote press the lightbulb button and select the type of foundation, number of bases to pair, and the Bluetooth code of the power base(s). For additional help refer to the Guide to Bluetooth Pairing.

For further assistance,
please contact Retail Support:
1.800.951.3181