
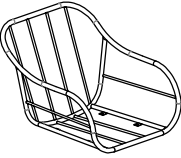


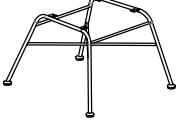


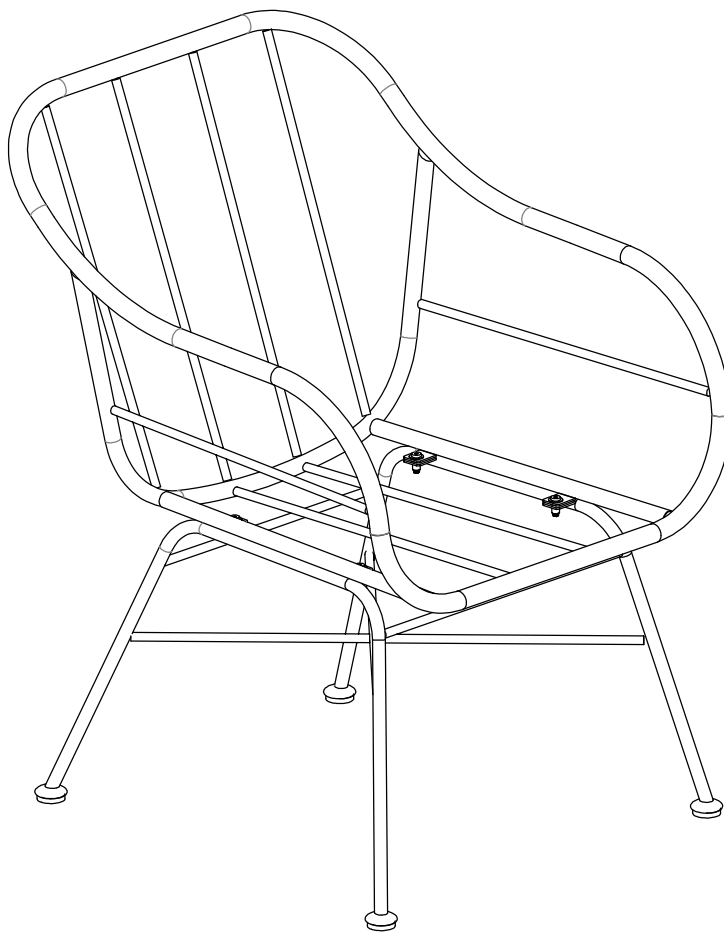
ASSEMBLING INSTRUCTION

MARGIET CHAIR (21690/21692)


A		1pc
B		1pc

C		4pcs
D	 M6*20	4pcs
E		1pc

Note: first scwer all bolts in by hand, before tightening.



①

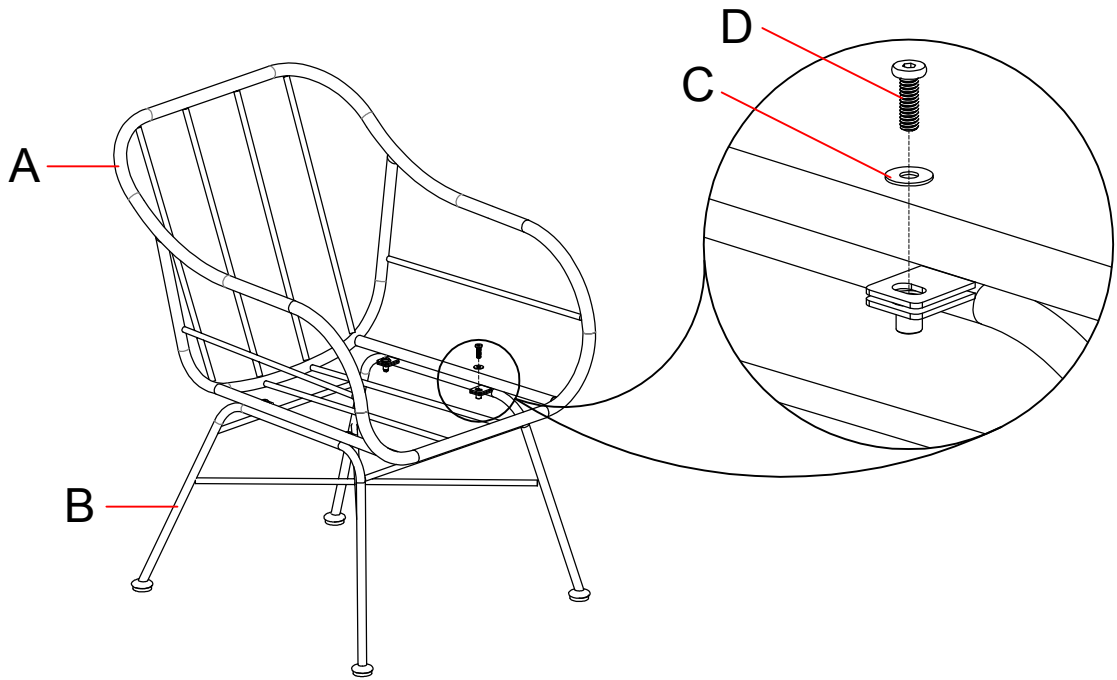

②

