


PR◊AIM MB-600 Sunshade Matte Box (P-MB-600)

Assembly Manual



■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

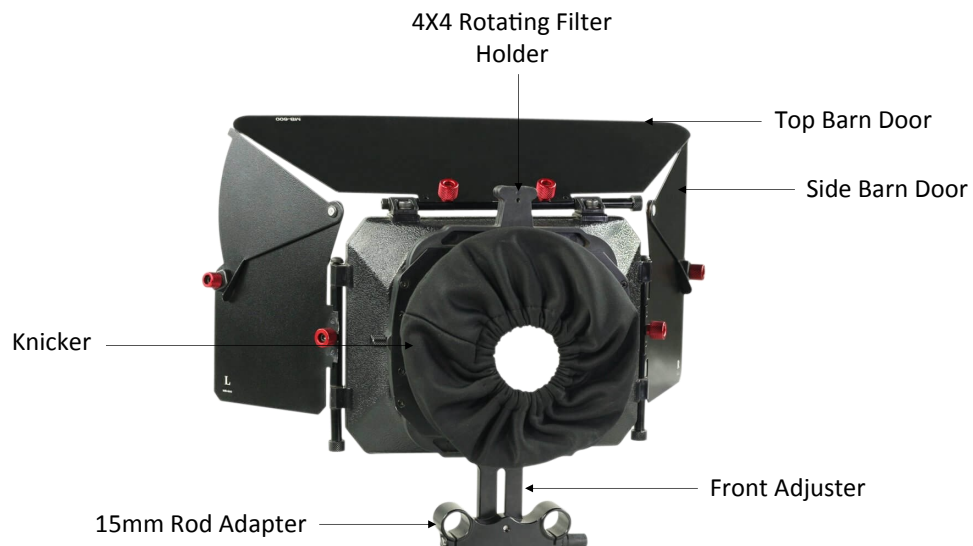

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Matte Box Setup

- Insert french flag to top of Matte Box and tighten it with screws. In the same way, insert side flags into the slots provided on both sides and secure them with screws.



NOTE: *If the french flag remains loose even after tightening the knob, then slightly tighten the allen bolt as shown.*

- Now wrap Knicker on conversion ring of Matte Box, as shown.



YOUR PROAIM MB-600 CAMERA SUNSHADE MATTE BOX ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.