

# **Lilitab Surface Pro Mount**

## Assembly Instructions

v4.0

lilitab

## TABLE OF CONTENTS

Assembly Preparation and Packing List3
Features
Assembly Instructions
Kensington Lock6
Bolt Down Installation7



Scan to watch assembly videos on our YouTube Channel!

#### **GOT QUESTIONS? WE'RE HERE TO HELP!**

EMAIL support@lilitab.com PHONE 888.705.0190

### MOUNT ASSEMBLY PREPARATION

#### FOR BASE PLATE INSTALLATION, YOU'LL NEED:


✔ Phillips screwdriver

#### FOR BOLT DOWN INSTALLATION, YOU'LL NEED:


- ✔ Powered drill/driver, preferably with impact action
- ✓ 4 x bolts or wood screws (m5, no.10, no.11, 3/16" or 13/64 diameter)

#### TO SECURE YOUR LILITAB YOU WILL NEED:


- ✓ Kensington compatible cable lock
- ✓ Kensington Desk Mount Anchor
- ✔ Loradar Anchor Plate

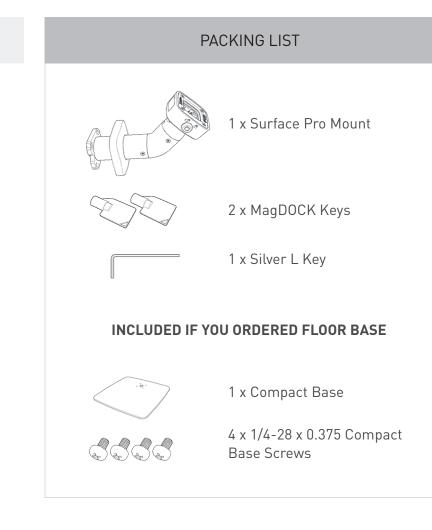

## FEATURES

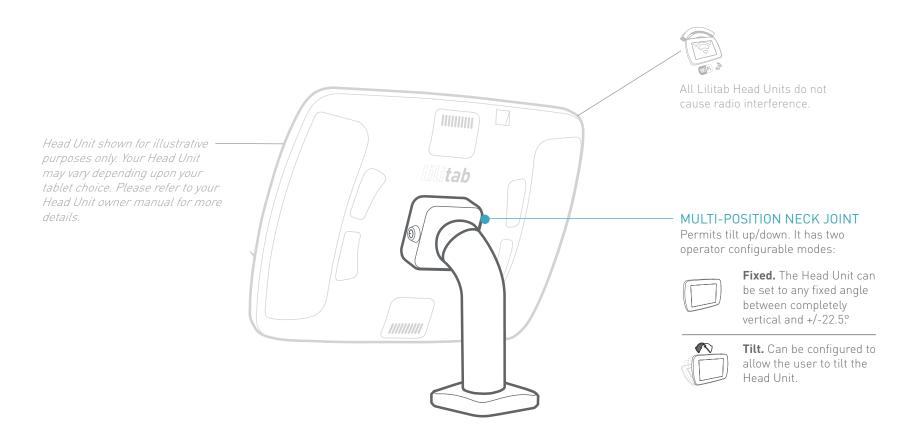


## ASSEMBLY INSTRUCTIONS

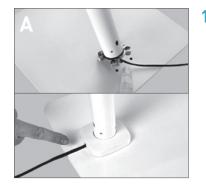


- 1. Cable routing. Choose your method of how you thread your charge cable that came with your kiosk:
  - **A:** Exit out the back of the base cover.



**3.** Foot Cover. Slide the foot cover down the pole to cover the screws. Velcro will hold it in place once positioned.

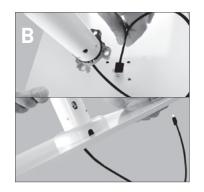

**B:** Exit through the compact base (no wire showing). This will require cable routing through your substrate.

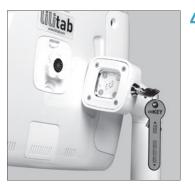

4. Place your Head Unit onto the MagDOCK mount in either landscape or portrait orientation. Turn the key to lock it in place.

**WARNING:** Not locking the MagDOCK will result in the unit falling off, possibly damaging the unit and/ or the tablet. The lilitab Pro is designed to be operated with the lock closed.

Refer to your Lilitab Head Unit owner's manual for tablet installation instructions.

**5. Tilt feature.** By default the Head Unit can be tilted by the user to suit. If you wish to disable tilt, position your head unit at the desired angle and tighten the bottom screw on the neck joint with the **Black L Key** provided.





2. Attach Compact Base. Line up the bottom of the mount pole with the four (4) screw holes in the compact base. Attach using the four (4) 1/4-28 x 0.375 Compact Base Screws.



**NOTE:** You will need to hold the foot cover up and out of your way while bolting. If not using the compact base, attach to floor surface using template on page 6, and thread the cable through your substrate.





## KENSINGTON LOCK



You can use a Kensington Desk Mount Anchor and the Loradar Anchor Plate with a Kensington Lockhead to secure your kiosk on a counter/surface.

#### PURCHASE OPTIONS FROM AMAZON

Kensington Slim Lockhead: https://amzn.to/3lWAAod

Kensington Desk Mount Anchor: https://amzn.to/3njssNU

Loradar Anchor Plate: https://amzn.to/3Ga1wcc

#### BOLT DOWN INSTALLATION

