


# TRU-FIT STRAIGHT DISPLAY

## WHAT'S INCLUDED




Support Feet (2)

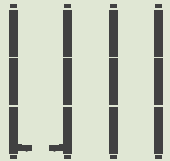

Straight Poles (4)



Corner Poles (2)

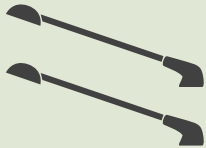


Optional LED Lights (2)






Light Clips (2)


- 1** Place the aluminum tubes on the floor. Connect the tubes together using the numbers on the frame.  
*For example: 1 connects with 1, 2 with 2, etc.*

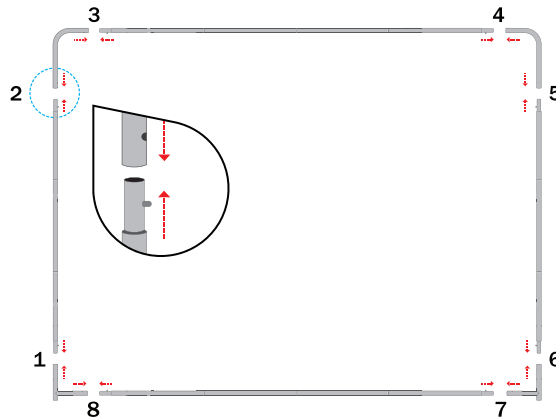


- 3** **Installing Optional LED Lights**  
Lift the frame halfway up and affix the Light Clips on top of the frame and screw it tight. Then slide the LED lights through the grooves.

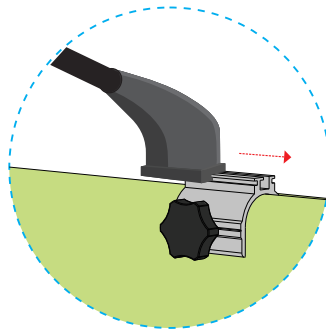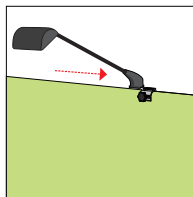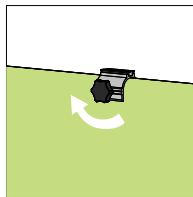

- 2** Wrap the graphics around the frame and carefully pull both the corners. Make sure the fabric slides over the frame gently. Attach the feet on the bottom of the frame.

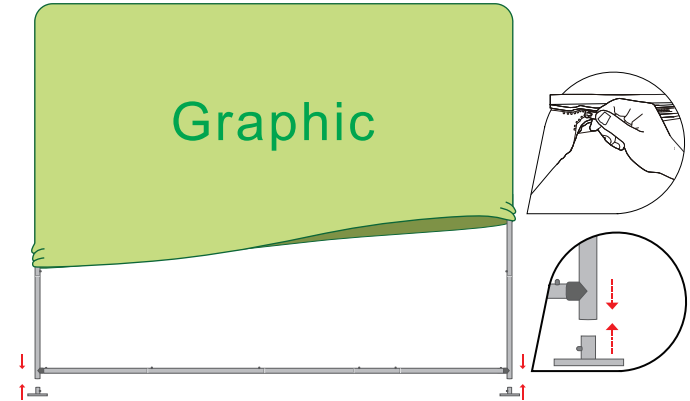

- 4** Now stand the display upright, adjust the corners to ensure it's standing straight, and your display is ready for action!

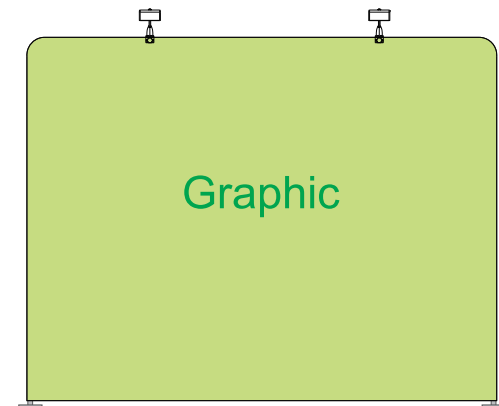

*Note: If the display does not stand straight, you can adjust the frame by having a person grab each side and gently shifting the top corners until the display stands fully upright*