


Instructions for Frame Assembly

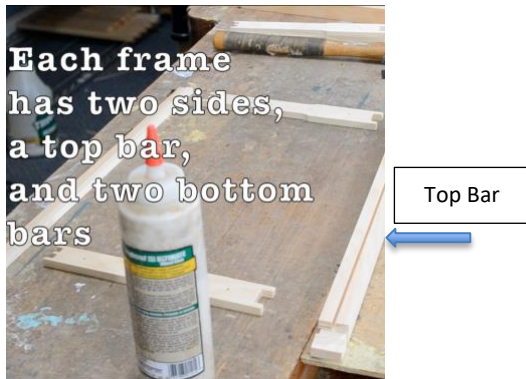

1. We recommend a good waterproof glue (Like Titebond III) on all parts before attaching with nails. Your frame will last for many years if it's built this way.



2. Brush glue on any surface that will meet another.



3. Drive 1-1 ^{1/4} nails through the top bar into the sides.
 - Ideally, off center toward the wedged side of the frame. (It matters in step #4.)
 - Repeat with the bottom bars



4. Drive a nail horizontally through the side bar into the side of the top bar that doesn't have a wedge.



5. Check the frame for square and nudge it gently into place while the glue sets.

⇒ [Once the glue dries, you are ready to install hooked-wire foundation.](#)

If you get stuck, give us a call at the Honey Exchange.

(207) 773-9333

Most of all, have fun with it!