




# INSTALLATION GUIDE / HUXLEY HARDWARE




## ATTACH HANGERS TO DOOR

**\*NOTE: A 1/2" OF SPACE IS REQUIRED BETWEEN THE TOP OF THE DOOR AND BOTTOM OF TRACK. BE SURE TO DOUBLE CHECK MEASUREMENTS PRIOR TO DRILLING.**

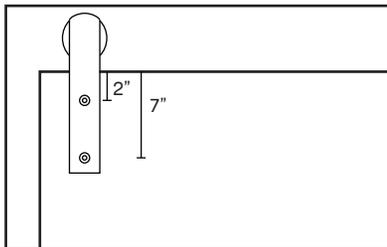

1. Place hangers on the top front part of the door (we recommend 2" in from the side of the door or center stile).
2. Measure 2" down from the top of the door. This will be the drill location for the top hole of the hanger. The bottom hole should be 7" down from the top of the door.
3. Mark drill locations.
4. Prior to drilling, insert the track into the wheel grooves to make sure there is a 1/2" gap of space between the top of the door and bottom of track.
5. Use a 3/8" drill bit to drill holes for hanger bolts.
6. Insert hanger bolts through the hangers and door and tighten with washers and nuts with a 9/16" wrench.


## ATTACH TRACK TO WALL

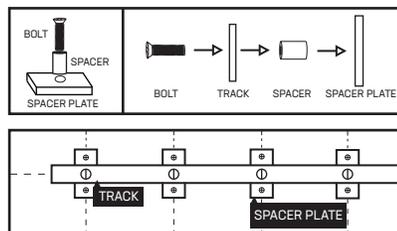

**\*NOTE: BE SURE TRACK IS MOUNTED SECURELY INTO SOLID BACKING**

1. Determine the centerline height of the track by inserting the track into the wheel grooves and measuring from the bottom of the door to the center of the track, then add 3/4" for door-guide clearance.
2. Remove bolt from spacer and spacer plate. Place bolt through track hole and spacer, and fasten spacer plate to the bolt. Repeat for other spacers. Make sure spacer plates are perpendicular to the track.
3. Hold the track above the doorway in the proper position and screw the wood screws through the spacer plates to mount the track to the wall.


## ATTACH STOPS & GUARDS

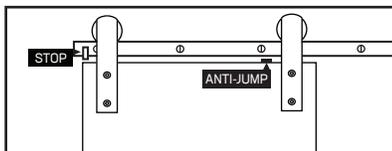

\*Door-stops are placed at the ends of the track to prevent doors from leaving the track.

1. Place door stop at desired locations on track and tighten screw with a 1/8" allen wrench.
2. Hang the door on the track and securely screw in the anti-jump guards to the top of the door under the track.

## ATTACH DOOR GUIDE

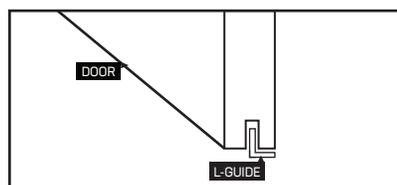

\*Doors must be in contact with door-guides at all sliding positions

\*These instructions are for L-Bottom guides. See website for other styles of door-guides.

1. Place the door-guide on the floor central to the door range of motion in the 1/2" grooves along bottom of the door.
2. Level the door swing and securely screw the door-guides into the floor.

**NEED HELP? CALL 801.698.2641 OR EMAIL US AT INFO@ARTISANHARDWARE.COM**

Warning! Choking Hazards. Packaging and hardware includes small parts that can cause choking or suffocation. Keep away from children. Failure to install this product correctly or improper use of tools could result in loss of control, serious injury, or death. Ensure you have complete control of tools at all times. Artisan Hardware is not responsible for any damages or harm caused by improper installation of products. Report damages or material shortages within 48 hours from delivery. Review all terms and conditions before installing products. Results can differ based on environmental circumstances. Use professional contractors who are trained to install this product. Use proper safety gear and follow industry regulations to get the best quality, security, and satisfaction. All hardware must have proper clearance and be securely attached into studs, solid blocking, head casing, full header, or other structural material that is built to bear weight requirements. Always follow industry safety standards and best practices. Every product is custom due to variations in doorway openings and structural factors.